


## COMM

# NARCO

## COM 810/811

## Connector

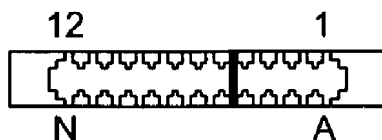

Circuit	Pin #	Notes
A/C GROUND .....	10	
A/C GROUND .....	L	
A+ POWER INPUT .....	9	
A+ POWER INPUT .....	K	
AUX AUDIO IN.....	3	
AUX AUDIO IN.....	4	
AUX AUDIO IN.....	C	
AUX AUDIO IN.....	D	
GROUND RETURN .....	7	
INTERCOM.....	2	
KEEP ALIVE .....	8	Note 1
KEY INSTALLED .....	5	
KEY INSTALLED .....	E	
LOW LEVEL AUDIO .....	6	
LOW LEVEL AUDIO .....	F	
LOW LEVEL PHONE .....	A	
MIC AUDIO .....	B	
MIC KEY .....	1	
REMOTE TRANSFER.....	H	
SPKR AMP INPUT .....	J	
SPKR OUTPUT.....	N	

(Continued)

For familiarization only. Consult the manufacturers current data.

(COM 810/811 Continued)

SWITCHED A+ OUT ..... 11  
SWITCHED A+ OUT ..... M  
UP SCAN CONTROL..... 12

**Notes**

1. <u>Connected to</u>	<u>Active Freq</u>	<u>Stby Freq</u>
Battery	Last active	Last stby
Gnd	121.5	121.9
Open	Random	Random

For familiarization only. Consult the manufacturers current data.