


SIDE VIEW

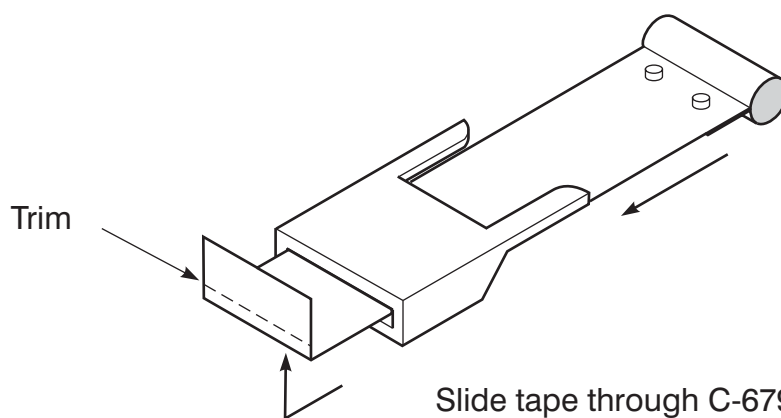

Slide tape through C-679 (make sure part is right-side up)
and bend end of tape up at desired length for lanyard.
Trim end so that C-679 will be retained but end of tape will
not contact canopy skirt in closed position