

CDX-C90

SERVICE MANUAL

Ver 1.1 2001. 08

US Model
E Model



SPECIFICATIONS

AUDIO POWER SPECIFICATIONS (US model)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

19 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1 % total harmonic distortion.

Other specifications

CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	108 dB
Frequency response	5 - 20,000 Hz (± 1 dB)
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 μ W*

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

Tuner section

FM

Tuning range	FM tuning interval: 50 kHz/200 kHz switchable 87.5 - 108.0 MHz (at 50 kHz step) 87.5 - 107.9 MHz (at 200 kHz step)
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz 50 dB at 200 kHz
Signal-to-noise ratio	65 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	0.3% (stereo), 0.3% (mono)
Separation	35 dB at 1 kHz
Frequency response	20 - 15,000 Hz (± 0.5 dB)

Model Name Using Similar Mechanism	CDX-C680/C780
CD Drive Mechanism Type	MG-363S-121
Optical Pick-up Name	KSS-520A

AM

Tuning range	AM tuning interval: 9 kHz/10 kHz switchable 531 - 1,602 kHz (at 9 kHz step) 530 - 1,710 kHz (at 10 kHz step)
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 dB μ V

General

Outputs	Digital output Line outputs (3) Power antenna relay control lead Power amplifier control lead Telephone ATT control lead Illumination control lead
Tone controls	Bass ± 8 dB at 100 Hz Treble ± 8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)

– Continued on next page –

FM/AM COMPACT DISC PLAYER

9-925-982-12

2001H0400-1

© 2001. 8

Sony Corporation

e Vehicle Company

Shinagawa Tec Service Manual Production Group

SONY®

Dimensions	Approx. 178 × 50 × 184 mm (7 1/8 × 2 × 7 1/4 in.) (w/h/d)
Mounting dimension	Approx. 182 × 53 × 163 mm (7 1/4 × 2 1/8 × 6 1/2 in.) (w/h/d)
Mass	Approx. 1.6 kg (3 lb. 8 oz.)
Supplied accessories	Parts for installation and connections (1 set) Rotary remote RM-X90 (1) Wireless remote RM-X9 (1) Front panel case (1)

Design and specifications are subject to change without notice.

SERVICE NOTE

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.


NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.


NOTES ON PICK-UP FLEXIBLE BOARD

The pick-up flexible board in this set is secured to the optical pick-up with an adhesive tape. Once the tape is removed, an adhering force becomes weak, and it cannot be reused. Therefore, if the optical pick-up is replaced, replace also the pick-up flexible board with a new one.

NOTES ON CLEANING THE OBJECTIVE LENS

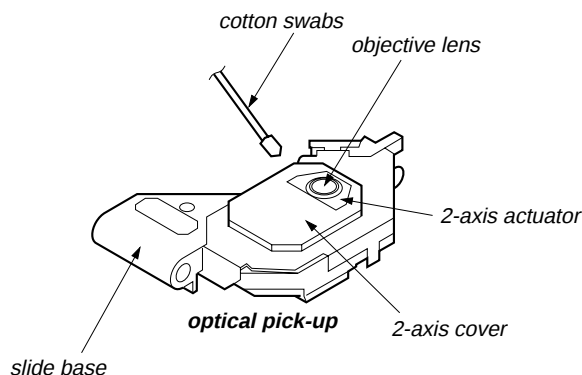

Apply CD lens cleaner B-4 (Part No.:J-2501-000-A) to cotton swabs (narrow type) (Part No.:J-2501-023-A) to be lightly wet. Use a force (about 5 g (0.18 oz)) to make the objective lens in contact with the bottom lightly, and clean the lens by spirals as following below. Replace the cotton swab and repeat this cleaning two or three times.

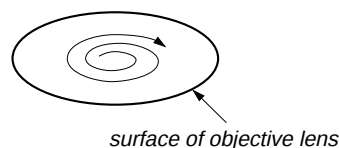

Notes:

Do not force to push the objective lens. Otherwise, the plate spring supporting the objective lens will be bent, causing a deteriorated RF waveform. Never touch anything other than the objective lens. Otherwise, a significant deterioration occurs in the RF waveform.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

1. GENERAL

Initial settings	4
Setting the clock	5
Using the main panel controls	6
Basic operations	7
Using the rotary remote	8
Using the wireless remote	9
Menu display/Lists	10
Listening to a CD/MD	10
Playing tracks repeatedly	11
Playing tracks in random order	12
Creating a program	12
Labeling a CD	14
Selecting specific tracks for playback	15
Locating a disc by name	16
Viewing CD TEXT information	17
Customizing the CD sound	18
Listening to radio	18
Presetting radio stations	19
Specifying monaural/stereo mode	20
Receiving only the strongest signals	21
Labeling radio stations	22
Selecting a station by name	23
Adjusting the sound characteristics	23
Setting the set up menu	24
Setting the display menu	25
Setting the function menu	26
Selecting a surround menu	26
Storing a surround effect for CDs	27
Selecting the listening position	28
Adjusting the cut-off frequency of the subwoofer(s)	29
Adjusting the turn-over frequency of the bass and treble	30
Additional information	31
Connections	33

2. DISASSEMBLY

2-1. Cover (Upper)	35
2-2. Front Panel Assy	35
2-3. Cords	36
2-4. Rear Panel	36
2-5. MD Assy	37
2-6. Audio Board	37
2-7. Bracket (MD)	38
2-8. Motor Block	38
2-9. Base Panel Assy	39
2-10. Sub Panel Assy	39
2-11. Chassis (Front) Assy	40
2-12. Main Board	40
2-13. Chassis (T) Sub Assy	41
2-14. Lever Assy	41
2-15. Servo Board	42
2-16. Roller Assy	42
2-17. Chassis (OP) (O/S) Assy	43
2-18. Optical Pick-up Block	43

3. ELECTRICAL ADJUSTMENTS

CD Section	44
Tuner Section	44

4. DIAGRAMS

4-1. IC Pin Descriptions	47
4-2. Block Diagram –CD Section–	57
4-3. Block Diagram –Main Section–	59
4-4. Block Diagram –Display Section–	61
4-5. Circuit Boards Location	63
4-6. Printed Wiring Boards –CD Mechanism Section–	63
4-7. Schematic Diagram –CD Mechanism Section–	67
4-8. Schematic Diagram –Audio Section–	72
4-9. Printed Wiring Board –Audio Section–	75
4-10. Schematic Diagram –Main Section (1/2)–	77
4-11. Schematic Diagram –Main Section (2/2)–	82
4-12. Printed Wiring Boards –Main Section–	87


5. EXPLODED VIEWS

5-1. Case Section	96
5-2. Front Panel Section	97
5-3. Chassis Section	98
5-4. CD Mechanism Section (1)	99
5-5. CD Mechanism Section (2)	100
5-6. CD Mechanism Section (3)	101

6. ELECTRICAL PARTS LIST 102

Initial settings

Do the following initial settings before you operate the unit for the first time, after replacing the car battery, or after resetting the unit. Be sure to make these settings, otherwise the front panel is disabled and you will be unable to insert a CD.

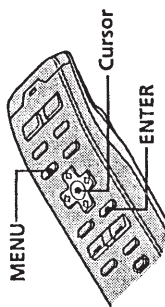

Tip
You can reset all of these initial settings (except the ACC position setting) using the set up menu.

1 Press the reset button behind the front panel (see page 2).

The Contrast indication appears.

Press $\leftarrow$ or $\rightarrow$ to adjust the contrast. The contrast is adjustable to 15 levels.

Contrast 8

Note

You can specify the ACC position settings only in the initial setting procedure. To change these settings afterwards, press the reset button and repeat the procedure.

2 Press ENTER.

The ACC Position indication appears.

Press $\leftarrow$ or $\rightarrow$ to select "yes" or "no." Select "yes" if your car's ignition switch has an ACC position; select "no" if your car's ignition switch has no ACC position.

ACC Position

yes no

3 Press ENTER.

The Digital out indication appears.

Press $\leftarrow$ or $\rightarrow$ to select "on" or "off" depending on your car audio system. Select "on" when an optional equipment with digital input is connected to the unit.

Digital out

on off

SECTION 1 GENERAL

This section is extracted from instruction manual.

4 Press ENTER.

The AM step indication appears.

Press $\leftarrow$ or $\rightarrow$ to select "10k" or "9k." Select "10k" if you're using your system in North or South America, the Hawaiian Islands, or Guam; select "9k" for all other countries.

AM step

9k 10k

5 Press ENTER.

The Initial setting menu appears.

Initial Contrast 8
Exit ACC Position yes
 Digital out off
 AM step 10k


To change any of the initial settings at this time, press the cursor buttons to select the item you want to change and press ENTER.

6 To complete the initial settings, press MENU.

Tip
You can also complete the initial settings by pressing $\uparrow$ or $\downarrow$ to select "Exit," then press MENU.

Setting the clock

Set the clock with the wireless remote. Turn the unit on before setting the clock. The clock uses a 12-hour digital indication.

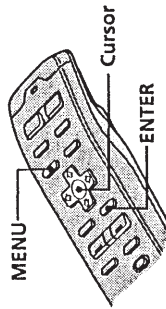

Note
If the ACC position is set to "no", turn the power on first, then set the clock.

- 1 Press **MENU**.
The menu display appears.

Set up	Clock	off
P. Mode	Beep	on
Display	Rotary Remote	norm
Name	SEEK/AMS	SEEK/AMS
	Direct Volume	off

- 2 Select "Set up" and press **→** to move to the sub menu, then select "Clock" pressing **↑** or **↓**.

Set up	Clock	on
P. Mode	Beep	on
Display	Rotary Remote	norm
Name	SEEK/AMS	SEEK/AMS
	Direct Volume	off

- 3 Press **→** then **↑** or **↓** to select "Time Set," then press **ENTER**.
The Time Set indication appears.

Time Set	1 : 05 AM
----------	-----------

- 1 Press **↑** or **↓** to set the hour.
- 2 Press **→** to move to minutes and press **↑** or **↓** to set the minutes.
Pressing **↓** lowers the number and **↑** raises the number.
The "AM" and "PM" indicators are automatically switched depending on the set hour.


Tip
You can press **ENTER** or **BACK** instead of **MENU** to set a value.

- 4 After setting the time, press **MENU**.
The time is stored and the menu display reappears.

To display the current time during operation
The current time can be set to appear in the upper-left corner of the display (except when a menu is displayed). For details, see "Setting the set up menu" on page 44.


Using the main panel controls

You can use the main panel controls for all operations except menu operations.

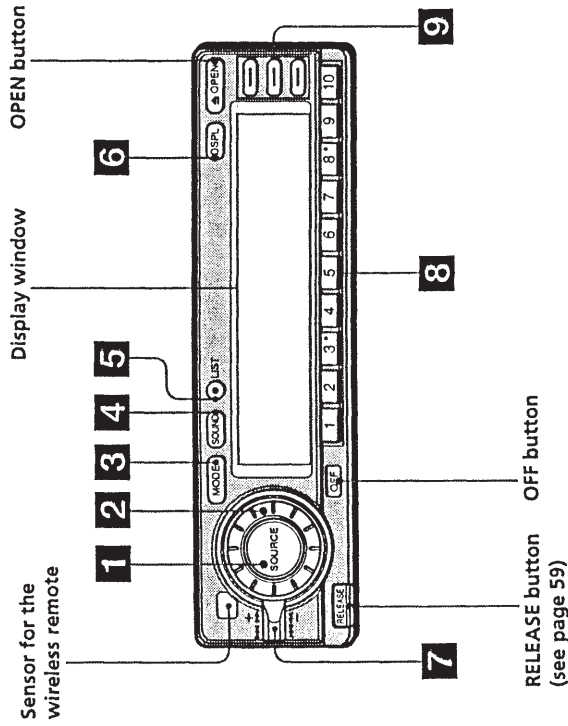


When the front panel is open

Reset button (see page 2)

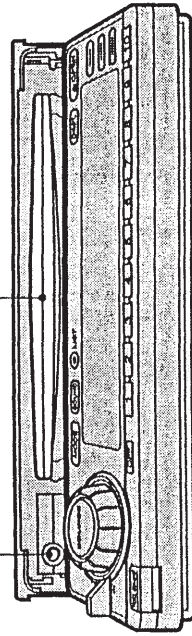

1 SOURCE (source select) button

Each time you press the button, the source switches as follows:




*Only when an optional unit is connected

2 Dial (volume/subwoofer volume/bass/treble/left-right/rear-front control)

Rotate to adjust the volume or sound characteristics.

3 MODE (band/unit select) button

Each time you press the button, the band or unit switches as follows:



4 SOUND button

Press to switch to the sound characteristics adjustment mode (see page 43).

When an optional DSP (digital signal processor) is connected, press and hold for two seconds to switch to the DSP Sound Tuning Mode (see page 49). To return to the previous mode, press and hold the button again.

5 LIST button

When CD or MD is selected, press to display the disc name list. While the list appears in the display, press again to display the track name list of the current disc (see page 29).

When FM1, FM2, or AM is selected, press to display the preset name list (see page 42).

To change the current selection, use the cursor buttons to select another disc, track, or station, then press ENTER.

6 DSPL (display mode change) button

When playing a CD or MD, press to display the disc title or track title. When the current disc or track has no title, "NO Disc Name (NO Track Name)" appears in the display.

Press and hold for two seconds to switch to the function menu which appears, depending on the current source or setting mode (see "9 Function buttons").

To return to the previous function menu, press and hold the button again.

7 SEEK/AMS (seek/Automatic Music Sensor/manual search) control

Push the control up or down to locate a track or receive a station.

Push the control up or down and hold until the desired station or track is located.

8 Number buttons

Press to search for the preset stations, or to switch to the desired disc in the CD/MD unit which corresponds to the number button.

9 Function buttons

Press to switch the mode setting manually. The function menu which appears depends on the current source. Each time you press DSPL for two seconds, the function menu switches as follows:

When the tuner is selected

BTM
MONO ↔ DVOL
LCL EL

When CD/MD is selected

REP VC*
SHUF ↔ DVOL
PGM EL

When labeling a CD or station

RIGH VC*
ENT ↔ DVOL
LEFT EL

When Edit mode is selected

UP VC*
ENT ↔ DVOL
DOWN EL

* Only when the CD player of the unit (CD) is selected.

Basic operations

Listening to a CD


1 Opens the front panel.

After 15 seconds, the panel closes automatically.

2 Insert a CD.

The panel closes and playback starts automatically.

Switches the display indication.

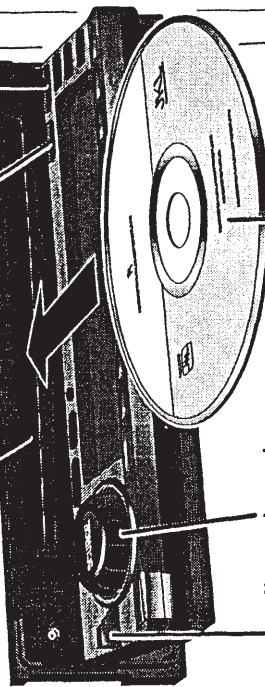

Adjusts the volume level.

To locate a specific point in a track (Manual searching)

Push the SEEK/AMS control up or down and hold.

To search forward



To search backward

Release the control when you have found the desired point.

To locate a specific track (Automatic music sensor (AMS))

Push the SEEK/AMS control up or down momentarily.

To locate a succeeding track or the beginning point of the current track



Labeled side up

When a CD is already inserted

Press SOURCE repeatedly until "CD" appears, playback starts automatically.

To stop playback

Press OFF.

To eject the CD

Press OPEN, the CD is automatically ejected.

Note


To play back an 8 cm (3 in.) CD, use the optional Sony compact disc single adapter (CSA-8).

Listening to the radio

2 Selects FM1, FM2, or AM.

Switches the display indication.

1 Selects tuner.

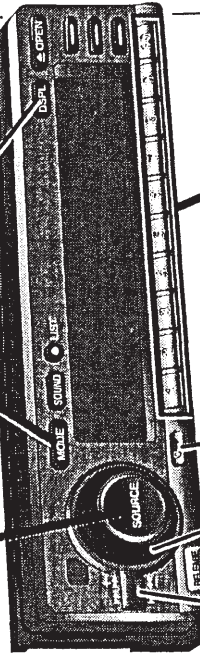

Turns the power off.

Adjusts the volume level.

3 Selects the desired station.

You can select the buttons only when a memorized station is assigned to the number button (see page 34).

To receive a station automatically (Automatic tuning)

Push the SEEK/AMS control up or down momentarily.

To search for succeeding stations

To search for preceding stations

Scanning stops when the unit receives a station.



To receive the desired frequency (Manual tuning)

Push the SEEK/AMS control up or down and hold until the desired frequency is received.

To search for a higher frequency

To search for a lower frequency



To switch the band

Press MODE repeatedly to select the desired band.

To stop listening to the radio

Press OFF.

Using the rotary remote

You can use the rotary remote for all operations except menu operations.

Basic operations

By pressing buttons
SOURCE button




Each time you press **SOURCE**, the source changes as follows:

TUNER → CD → MD*

* When an MD unit is connected.


MODE button

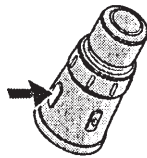

Pressing **MODE** changes the operation as follows:

• Tuner: FM1 → FM2 → AM
• CD unit: CD1 → CD2 → ...
• MD unit: MD1 → MD2 → ...

By rotating the control
SEEK/AMS control

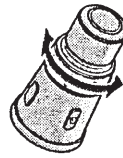

Rotate the control momentarily and release it to:

- Locate the beginning of tracks when CD or MD is selected.
- Automatically tune in a station when FM1, FM2, or AM is selected. When a station is detected, the unit stops searching.

Keep the control rotated to:

- Locate a specific point on a track when CD or MD is selected. Playback at normal speed resumes when you release the control.
- Manually tune in a station when FM1, FM2, or AM is selected. Release the control when the desired station is located.

Tip

If the SEEK/AMS mode is set to "Item sel," you can select the desired station or disc with SEEK/AMS when the list appears in the display (see page 45).

VOL control



Rotate the control to:
Adjust the volume level.

By pushing in and rotating the control

DISC/PRESET control



Push in and rotate the control to:


- Receive the stations memorized on the number buttons when FM1, FM2 or AM is selected.
- Change the disc when CD or MD is selected.

Push in and release the control to:

Display the list of discs (when CD or MD is selected) or preset stations (when FM1, FM2, or AM is selected) for a few seconds. The previous display will reappear after a moment.

Other operations

OFF button

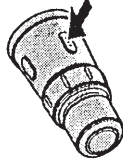

Press this button to turn off the unit.

To turn on the unit again, press **SOURCE**.

ATT button



Press this button to attenuate the sound.

To cancel the attenuation (ATT), press the button again.

Changing the operative direction

If you need to mount the rotary remote on the left side of the steering column, you can reverse the operative direction. See "Setting the set up menu" on page 44.

Using the wireless remote

Use the wireless remote to make the various menu settings. For your safety, unit operations with the wireless remote should be done by a passenger. If you (the driver) want to use the wireless remote, park your car in a safe location first before performing any operations.

SOURCE (source select) button
Each time you press the button, the source switches as follows:
→ Tuner → CD → MD*


* Only when an optional unit is connected

MODE (band/unit select) button
Each time you press the button, the band or unit switches as follows:
When the tuner is selected
→ FM1 → FM2 → AM
When CD/MD is selected
→ CD/MD1 → CD/MD2 → CD/MD3...

SCRL button
Press to scroll the track or disc title when playing a CD TEXT disc or an MD.

MENU button
Press to switch to a menu display. The menu which appears depends on the current program source. To return to the previous display, press the button again.

DSPL (display mode change) button
When playing a CD or MD, press to display the disc title or track title.
When the current disc or track has no title, "NO Disc Name (NO Track Name)" appears in the display.
Press and hold for two seconds to switch to the function menu which appears, depending on the current source or setting mode (see "9 Function buttons" page 9).
To return to the previous function menu, press and hold the button again.

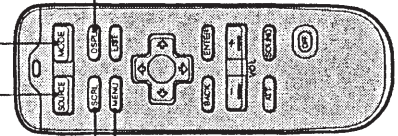

When the ACC position is set to "no," the unit cannot be operated with the wireless remote unless SOURCE on the rotary remote or front panel is pressed, or a CD is inserted to activate the unit first.

EN

Getting started

Cursor buttons
While the menu display appears, press to move the cursor within a menu display. When CD or MD is selected, press ↑ or ↓ to change the disc and ← and → to locate a track.
When FM1, FM2, or AM is selected, press ↑ or ↓ to select a preset station, or ← and → to perform automatic tuning.

BACK button
Press to return to the normal display during a menu operation.

ATT button
Press to attenuate the volume. To return to the previous volume level, press the button again.


VOL +/- buttons
Press + or - to adjust the volume or sound characteristics.

OFF button
Press to turn off the unit.

LIST button
When CD or MD is selected, press to display the disc name list. While the list appears in the display, press again to display the track name list of the current disc (see page 29). When FM1, FM2, or AM is selected, press to display the preset name list (see page 42). To change the current selection, use the cursor buttons to select another disc, track, or station, then press ENTER.

ENTER button
Press to carry out the selected function.


SOUND button
Press to adjust the sound characteristics (see page 43). When an optional DSP (digital signal processor) is connected, press and hold for more than two seconds to switch to the DSP Sound Tuning Mode (see page 49). To return to the previous mode, press and hold the button again.

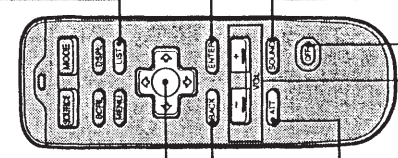

EN

Menu display/Lists

The following menu and lists appear in the display when you press MENU or LIST.

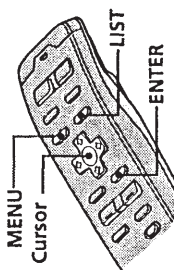

Menu display (appears when you press MENU)

Set Up	Clock	on	Time Set
P. Mode	Beep	on	off
Display	Rotary Remote	Norm	off
Name	SEEK/AMS	SEEK/AMS	off
	Direct Volume	off	

- 1 Press MENU to make various settings and adjustments.
- 2 Press the cursor buttons to select the item and its setting, then press ENTER.
- 3 Press MENU to cancel the menu mode and return to normal display.

Lists (appears when you press LIST)

Disc	1. MY BEST	6. EURO BEAT
CD2	2. POPS HIT	7. DRIVING
SONYPOPS	3. FUSION	8. SONYPOPS
8	4. JAZZ	9. SUNSET.M
1.28	5. GREAT HIT	10. HIGHWAY

Press LIST to display the disc name list or track name list when CD or MD is selected.
The preset name list will appear when FM1, FM2, or AM is selected.

To select the disc or station by name

When the disc name list or preset name list appears in the display, press the cursor buttons to select the disc or radio station you want to listen to, then press ENTER.

To return to the previous display without changing the setting, press LIST again.

Tip


If the SEEK/AMS mode is set to "Item sel," you can select the desired station or disc with SEEK/AMS when the list appears in the display (see page 45).

Listening to a CD/MD

If an optional CD or MD unit is connected to this unit, you can locate and listen to discs in the optional CD or MD unit in the same way as you can with those in this unit.

To select the desired CD or MD unit

- 1 Press SOURCE repeatedly to select "CD" or "MD."

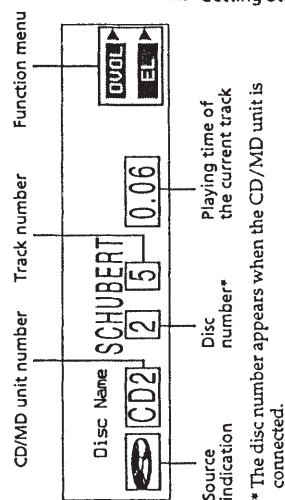

- 2 Press MODE repeatedly to select the desired CD or MD unit.

When optional CD units are connected
CD1(CDX-C90) → CD2(optional CD unit 1) →
CD3(optional CD unit 2)

When optional MD units are connected
MD1(optional MD unit 1) → MD2(optional MD unit 2)

- 3 Rotate VOL to adjust the volume level.

The volume is adjustable between 0 dB to -∞ dB.


Caution

For your safety, set the volume low enough so that you can hear the sound in the street around you.

To stop play back

Press OFF.

continue to next page →

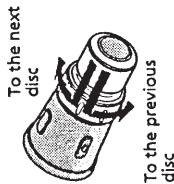

To select the disc to be played

Push in and rotate DISC/PRESET.

The unit changes to the next or previous disc. If you keep the control rotated, the discs will continue to change.


Push in and release the control to display the disc name list.

Disc	1. MY BEST	6. EURO BEAT
CD2	2. POPPS HIT	7. DRIVING
SONYPOPS	3. FUSION	8. SONYPOPS
8	4. JAZZ	9. SUNSET M
1.28	5. GREAT HIT	10. HIGHWAY

For details on naming a disc, see "Labeling a CD" on page 25.

Tips


- You can also use the number buttons on the front panel that correspond to the desired disc number.
- If the SEEK/AMS mode is set to "Item sel," you can select the desired disc with SEEK/AMS when the list appears in the display (see page 45).

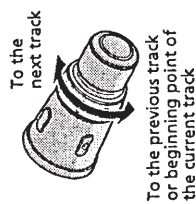

To locate a track

Rotate, then release SEEK/AMS.

The unit locates the beginning of the current track or the next or previous track.

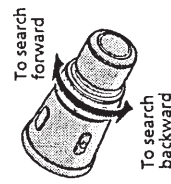

To locate a specific point on a track


Rotate and hold SEEK/AMS.

The unit plays the track at high speed. When you reach the point you want, release the control.

Playing tracks repeatedly

(Repeat play)

The repeat play function allows you to play back a track, a disc, or all the discs in this unit or any connected CD/MD unit repeatedly.

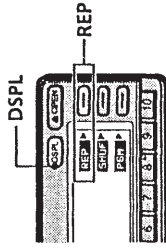

1 While playing a CD or an MD, press and hold DSPL for two seconds.

Tip

If the Select mode in the Func. menu is set to "Source," the function menu automatically appears on the right side of the display, depending on the source you select. (see page 48)

2 Press REP repeatedly to select the mode.

Each time you press REP, the mode changes as follows:

→ Repeat 1 → Repeat 2 → Repeat 3 → off

Indication	Operation
1:track	Repeats the current track only.
2:disc	Repeats all tracks on the current disc.
3-changer	Repeats all the discs in the current CD/MD unit (in case one or more optional CD/MD units are connected).
off	Normal playback.

Selecting the mode with the wireless remote

While playing a CD or an MD, press MENU and set the Repeat mode to "1," "2," or "3."

(Shuffle Play)

A close-up photograph of the top-left section of the calculator's control panel. The panel is black with white text and buttons. From left to right, the visible elements are: a label 'DSPL' with a line pointing to the display area; a button labeled 'OPEN' with a small circular icon to its right; and a button labeled 'SHUF' with a circular icon to its right. Below these buttons are three more buttons labeled 'MCP', 'MHP', and 'MSP' with circular icons to their right. At the bottom of this section is a row of ten small, rectangular buttons numbered 0 through 9.

- Tip** If the Select mode in the Func. menu is set to “Source,” the function menu automatically appears on the right side of the display, depending on the source you select. (see page 48)

- Shuffle 1 → Shuffle 2 → Shuffle 3

Indication	Operation
1:disc	Plays all the tracks on the current disc in random order.
2:changer	Plays all the discs in the current CD/MD unit in random order (in case one or more optional CD/MD units are connected).
3:all	Plays all the discs in all the CD/MD units in random order (in case one or more optional CD/MD units are connected).
off	Normal playback

While playing a CD or an MD, press MENU and set the Shuffle mode to "1," "2," or "3."

(CD/MD program memory)

A diagram of a mobile phone keypad with the following labels and arrows pointing to specific buttons:


- SOURCE**: Points to the top-left button.
- MENU**: Points to the button below SOURCE.
- BACK**: Points to the button below MENU.
- MODE**: Points to the top-right button.
- LIST**: Points to the button below MODE.
- Cursor**: Points to the button below LIST.
- ENTER**: Points to the bottom-right button.

- In step 2, to move the cursor back to the previous column (one at a time), press **←**.
- To cancel the current display and return to the previous display, press **BACK**.

- 1 While playing a CD or an MD, press MENU.
- 2 Select "P. Mode" and press $\rightarrow$ to move to the sub menu, then select "PGM" by pressing $\uparrow$ or $\downarrow$.



- 3** Press **→** to select "edit," then press **ENTER**.
The PGM Edit Mode appears.



- 4** Select the track you want to program.
- 1** Press SOURCE repeatedly to select CD or MD.
- 2** Press MODE repeatedly to select the desired CD or MD unit.
- 3** Press LIST and select the desired disc by pressing cursor, then press ENTER.
- 4** Press ← or → to select the track you want to program.

continue to next page →

Note
Once all 12 slots have been filled, "MEMORY FULL" appears, and you cannot insert more tracks.

- 5 Press ↑ or ↓ to select the program number, "P1" or "P2," then press ENTER.**
The current track in that slot number and all succeeding tracks shift down.

PGM Edit Mode	SONYPOPS	CD1	8	0.43
▲ P1- 1	1	CD1	1	SONYPOPS
P2- 2	2	---	---	---
	1	---	---	---

To continue inserting tracks, repeat steps 4 to 5.

- 6 To complete the mode setting, press BACK.**
The normal display appears.

- Notes**
- "Wait" appears in the display while the unit is reading the data.
 - "Mem Full" appears in the display when you try to enter more than 12 tracks into a program.
 - "NO data" appears in the display when no program is stored.

Playing the stored program

- 1 While playing a CD or an MD, press MENU.**
- 2 Select "P.Mode" and press → to move to the sub menu, then select "PGM" by pressing ↑ or ↓.**
- 3 Press → then ↑ or ↓ to select the mode, then press ENTER.**
The selected mode appears to the right of "PGM" in the display.

→ PGM 1 → PGM 2 → off ← PGM 1+2 →

Indication	Operation
1	Plays the track sequence of Program 1.
2	Plays the track sequence of Program 2.
1 + 2	Plays the track sequences of Program 1 and then Program 2.
off	Normal playback
edit	Sets the order of tracks and stores the program in memory.




Selecting the mode with the front panel control

While playing a CD or an MD, press PGM repeatedly to select "1," "2," or "1+2."

Erasing tracks in a program

- 1 While playing a CD or an MD, press MENU.
- 2 Select "P. Mode" and press → to move to the sub menu, then select "PGM" by pressing ↑ or ↓.
- 3 Press → then ↑ or ↓ to select "edit," then press ENTER.

- 4 Press ↑ or ↓ to select the track you want to erase.



- 5 Press and hold ENTER for two seconds.

When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.
To continue erasing tracks, repeat steps 2 and 3.

- 6 To complete the mode setting, press BACK.

- 7 Press MENU.
The previous display appears.


Erasing an entire program

Select "P1:Group Erase" or "P2:Group Erase." in step 2 above.
The entire program is erased and "NO data" appears.


Labeling a CD – Disc Memo

(CD unit with the custom file function)

You can record a title of up to 8 characters for each disc. The disc title appears in the display whenever you insert the disc and play it. Up to 110 disc titles can be stored in memory.

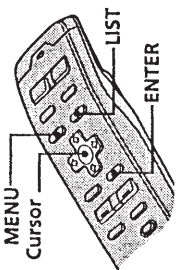

- 1 While playing a CD, press LIST for two seconds.
The Disc Memo Write indication appears.




- 2 Press ↑ or ↓ until the character you want to enter appears, then press →.
Each time you press ↑, the character changes as follows:

A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _ (under-bar) → A...
Press ↓ to move backwards.



If you want to put a blank space between characters, select " _ " (under-bar).


- 3 Repeat step 2 until you have entered the entire title, then press ENTER.
The normal display appears.




Erasing a disc title

1 While playing a CD or an MD, press MENU.

2 Select "Name" and press $\rightarrow$ to move to the sub menu, then select "Disc Memo" by pressing $\uparrow$ or $\downarrow$.



3 Press $\rightarrow$, then $\uparrow$ or $\downarrow$ to select "delete," then press ENTER.
The Disc Memo Delete indication appears.



4 Press $\uparrow$ or $\downarrow$ to select the disc title you want to erase.

5 Press and hold ENTER for two seconds.
The selected disc title is erased.


6 Press MENU.

The normal display appears.

Note
In step 4, all the disc names stored in the CD unit's memory appear in the order they were entered. The last name entered will therefore appear at the end.


Selecting specific tracks for playback (Bank)

If you have labeled the disc (see page 25), the Bank function allows you to skip certain tracks and play only the tracks you want.

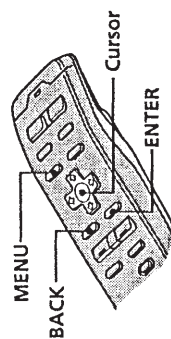

To set tracks to "Play" or "Skip"

- 1 While playing a CD or an MD, press MENU.
- 2 Select "P.Mode" and press $\rightarrow$ to move to the sub menu, then select "Bank" by pressing $\uparrow$ or $\downarrow$.



3 Press $\rightarrow$ then press $\uparrow$ or $\downarrow$ to select "edit," then press ENTER.



4 Press $\uparrow$ or $\downarrow$ to select "Play" or "Skip," then press $\rightarrow$ to move to the next track.

5 Repeat step 4 to select "Play" or "Skip" for all succeeding tracks.

6 To complete the mode setting, press BACK.

7 Press MENU.

The normal display appears.

Note
You cannot use the Bank function for discs that have not been labeled using the Disc Memo function. Be sure to label the disc in advance.

Playing specific tracks only

1 While playing a CD or an MD, press **MENU**.

2 Select "P.Mode" and press **→** to move to the sub menu, then select "Bank" by pressing **↑** or **↓**.

Set Up	Repeat	off	on
P.Mode	Shuffle	off	inverse
Display	PGM	off	off
Name	Bank	off	edit


3 Press **→** then **↑** or **↓** to select the mode, then press **ENTER**.
The selected mode appears to the right of "Bank" in the display.

Indication	Operation
on	Plays all tracks set to "Play."
inverse	Plays all tracks set to "Skip."
off	Normal playback
edit	Sets tracks on the current disc to "Play" or "Skip."

4 Press **MENU**.
The normal display appears.

Locating a disc by name

Use this function to locate a disc by its name.
(To add titles to discs, see page 25).

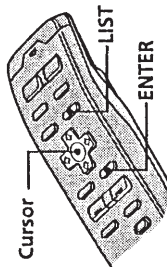

1 While playing a CD or an MD, press **LIST**.
The Disc name list appears.

Disc	1. MY BEST	6. EURO BEAT
CD2	2. POPPS HIT	7. DRIVING
SONYPOPS	3. JAZZ	8. SONYPOPS
8	4. JAZZ	9. SUNSET M
3	5. GREAT HIT	10. HIGHWAY
1:28		

2 Press **↑**, **↓**, **→**, or **←** to select the disc.

3 Press **ENTER**.
Playback starts from the first track of the disc.

On track name list
Each time you press **LIST**, the display changes as follows:

→ Disc name list*	→ Track name list**
←	←

* Only when CD/MD unit is connected.
** When CD unit with CD TEXT function is selected.

This list displays track names contained on CD TEXT discs and MDs with labeled tracks. Since this unit does not support track labeling, when playing non-CD TEXT discs or MDs with unlabeled tracks, "*****" appears instead of the track name in the track name list.

To select a disc using the rotary remote



Push in and release **DISC/PRESET** to display the disc name list or track name list.
Push and rotate the control to select the disc or track from the list. After about 5 seconds, the normal display reappears.


To the next disc



To the previous disc

Viewing CD TEXT information

You can view text information contained on a CD TEXT disc during playback.

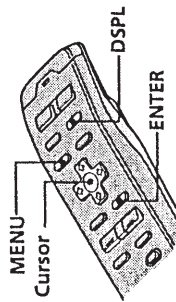

Tips

- In step 2, to move the cursor back to the previous column (one at a time), press **←**.
- To cancel the current display and return to the previous display, press **BACK**.

Selecting the disc name display

When playing CD TEXT discs that have been labeled using the Disc Memo function (see page 25), you can specify that disc names be displayed whenever you press DSPL or LIST.

1 While playing a CD, press MENU.

2 Select "Name," press **→** to move to the sub menu, then select "Disc Name" by pressing **↑** or **↓**.



3 Press **→** then **↑** or **↓** to select "D.Memo" or "TEXT," then ENTER.

The selected mode appears to the right of "Disc Name" in the display.

Indication	Operation
D.Memo	Displays disc titles entered by the Disc Memo function.
TEXT	Displays original CD TEXT information.

4 Press MENU.

The normal display appears.

What is a CD TEXT disc?

A CD TEXT disc is a music CD that also contains text data such as the disc name, artist name, and track name. This text data is recorded in areas normally unused on conventional music CDs.

Scrolling titles automatically

When playing CD TEXT discs or MDs (using an optional MD unit) the track or disc/artist name appears automatically whenever a new disc or track is played. Follow the procedure below to specify the automatic scrolling of titles of more than 10 characters.

1 While playing a CD or an MD, press MENU.

2 Select "Name," press **→** to move to the sub menu, then select "Auto Scroll" by pressing **↑** or **↓**.



3 Press **→** then **↑** or **↓** to select "on," then ENTER.

4 Press MENU.

The normal display appears.

To cancel the scrolling of titles

Select "off" in step 3 and press ENTER.

When playing a CD TEXT disc


Each time you press DSPL, the displayed information changes as follows:

- Disc Name/Artist Name* ↔ Track Name
- * The artist name appears automatically after the disc name.

Customizing the CD sound

(Digital filter function)

This unit has a variable coefficient (VC) digital filter. By selecting the type of filter you want, you can adjust the sound characteristics which best compliment your speaker, source, unit, etc.

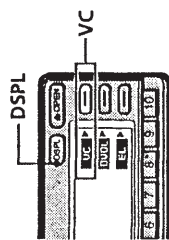

Notes

- This function is available only for this unit and has no effect when an optional CD/MD unit or radio, etc. is selected.
- If you are playing a disc when you press VC, the sound will be interrupted momentarily.

1 While playing a CD, press and hold DSPL for two seconds.

Tip

If the Select mode in the Func. menu is set to "Source," the function menu automatically appears on the right side of the display, depending on the source you select. (see page 48)

2 Press VC repeatedly to select the mode.

Each time you press VC, the filter type changes as follows:

→ Plain → Analog A → Analog B → Standard

Type	Sound image
Plain	• high clarity • strong
Analog A	• warm
Analog B	• deep
Standard	• wide ranging • ample spatial representation



What is a variable coefficient (VC) digital filter?

CD players use digital filters to eliminate the noise generated during sampling. You can change the tone of your music by changing the cutoff characteristics of the digital filter. This unit has four types of filters with different coefficient characteristics: "Plain," "Analog A," "Analog B," and "Standard."

Listening to radio

You can store your favorite radio stations in the unit's memory for instant tuning at a later time (see "Presetting radio stations" on page 34).


- 1 Press SOURCE repeatedly to select tuner.
- 2 Press MODE repeatedly to select FM1, FM2, or AM.
- 3 Rotate VOL to adjust the volume level.
The volume is adjustable between 0 dB to ∞ dB.
Caution
For your safety, set the volume low enough so that you can hear the sounds in the street around you.
- 4 To change the preset station, push in and rotate DISC/PRESET.

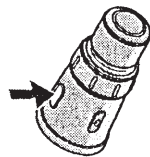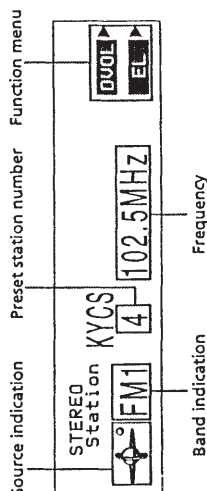

To decrease



To previous preset station

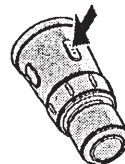


To stop listening to the radio
Press OFF.

Presetting radio stations

There are two ways to preset radio stations:


- Selecting the station frequency (Manual preset memory)
- Selecting stations with the strongest signals (BTM*)
- Best Tuning Memory

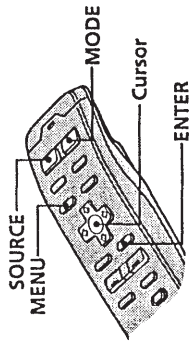

Specifying the station frequency (Manual Preset Memory)

Caution
When tuning in stations while driving, use the Best Tuning Memory to prevent an accident (see page 36).

- 1 Press **SOURCE** repeatedly to select tuner.
- 2 Press **MODE** repeatedly to select FM1, FM2, or AM.
- 3 Press and hold **←** or **→** until the frequency you want appears in the display, then release the button.
- 4 Press **MENU**.
- 5 Select "R.Mode" and press **→** to move to the sub menu, then select "Preset" by pressing **↑** or **↓**.



Tips

- In step 2, to move the cursor back to the previous column (one at a time), press **←**.
- To cancel the current display and return to the previous display, press **BACK**.

Tip

- Rotate and hold AMS/SEEK on the rotary remote to continue searching, then release the control when the frequency you want appears.

Note

If you selected AM in step 2, the "Mono/Stereo" and "Antenna" sub menus will not appear in the display.

Tip

If the SEEK/AMS mode is set to "Item sel," you can select the desired station with SEEK/AMS when the list appears in the display (see page 45).

Note

If you assign a new frequency to a preset station number that has already been assigned a frequency, the new frequency replaces the old frequency.

- 6 Press **→**, then **↑** or **↓** to select "manual," then **ENTER**.

Station	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.
FM1	106.3	101.9	96.0	102.5	105.4	96.6	99.9	98.9	98.3	98.3
2										
101.5MHz										

- 7 Press **↑**, **↓**, **→**, or **←** to select the preset station number to which the frequency will be stored then press **ENTER**.

You can preset up to 20 FM stations (10 stations each in FM1 and FM2) and up to 10 AM stations.

- 8 Press **MENU**.

The normal display appears.

To receive a station automatically (Automatic Tuning)

Press and release **←** or **→**.

"Seek Up" or "Seek Down" appears until the unit detects a station.



For a lower frequency

For a higher frequency

Tip

You can start Automatic Tuning by momentarily rotating SEEK/AMS on the rotary remote, then releasing it.




Presetting the station with the front panel controls

After tuning in the station, press and hold the desired number button for two seconds.

Specifying monaural/ Stereo mode

If the FM stereo reception is poor, you can select "Mono" to improve the sound.

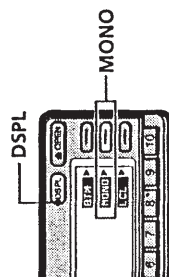

- 1 While listening to an FM broadcast, press and hold DSPL for two seconds.

Tip

If the Select mode in the Func. menu is set to "Source," the function menu automatically appears on the right side of the display, depending on the source you select. (see page 48)

- 2 Press MONO repeatedly to select "on."

The sound will improve, but will not be in stereo.


To cancel the monaural mode

Select "off" in step 2 above.

Selecting the mode with the wireless remote

While listening to FM or AM, press MENU and set the Mono/Stereo mode to "mono," or "stereo."

Selecting stations with the strongest signals (BTM)

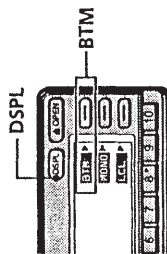

- 1 While listening to an FM or AM broadcast, press and hold DSPL for two seconds.

- 2 Press BTM.

The unit selects the station with the strongest signals and memorizes them in the order of their frequencies.

A beep sounds after storing the stations and the unit returns to the normal display.

Selecting the mode with the wireless remote

While listening to an FM or AM, press MENU and set the Preset mode to "BTM."

What is the BTM (Best Tuning Memory) function?

BTM is a function that selects the radio stations with the strongest signals and automatically sets them to preset station numbers. The BTM function starts tuning in stations from the lowest frequency on the band (FM or AM). When a station is found, the unit assigns the frequency to the currently selected preset station number. When preset numbers are not displayed, the unit assigns frequencies starting with preset station 1.

Even after the unit has assigned frequencies to all the preset station numbers, the unit continues tuning. If stronger signals are found, the unit replaces the current preset stations with the stronger frequencies. Finally, the unit sorts the stations in ascending order by frequency.

Tip
If the Select mode in the Func. menu is set to "Source," the function menu is automatically appears on the right side of the display, depending on the source you select. (see page 48)

Note


If the radio can only tune in a few stations or receives only weak frequencies, the BTM function may not assign frequencies to all the preset station numbers.

EN

Radio

Receiving only the strongest signals (Local on/off)

The Automatic Tuning function may stop frequently when there are many radio stations in the area. If this happens, you can reduce the sensitivity of the tuner so that only the strongest signals are tuned in.

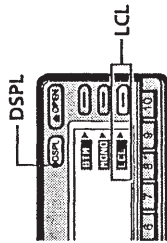

- 1 While listening to an FM or AM broadcast, press and hold DSPL for two seconds.

Tip

If the Select mode in the Func. menu is set to "Source," the function menu automatically appears on the right side of the display, depending on the source you select. (see page 48)

- 2 Press LCL repeatedly to select "on."

Only the stations with relatively strong signals will be tuned in.

To cancel the local mode

Select "off" in step 2 above.



Selecting the mode with the wireless remote

While listening to FM or AM, press MENU and set the Local mode to "on," or "off."

If interference occurs during FM reception



- 1 While listening to an FM broadcast, press MENU.
- 2 Select "R.Mode" and press → to move to the sub menu, then select "IF" by pressing ↑ or ↓.




- 3 Press → then ↑ or ↓ to select the mode, then press ENTER.
The selected item appears to the right of "IF" in the display.

Type	Function
Wide	Maximizes signal reception and improves sound quality.
Narrow	Prevents interference from neighboring stations.
Auto	Switches the mode between "Narrow" and "Wide" automatically.

- 4 Press MENU.
The normal display appears.

Labeling radio stations (Station Memo)

You can add a title of up to 8 characters to each station. The station name appears in the display whenever the station is selected. Up to 44 station names can be stored in memory.

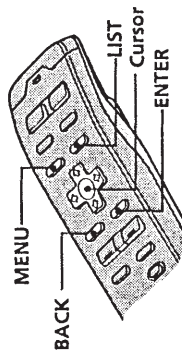


Tip
To cancel the current display and return to the previous display, press BACK.

Tip
To erase/correct a name, enter " " (under-bar) for each character.


1 Tune in the station you want to label.

2 Press LIST for two seconds.
The Station Memo Write indication appears.




3 Press ↑ or ↓ until the character you want to input appears and press →.
Each time you press ↑, the character changes as follows:

A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _ (under-bar) → A...
Press ↓ button to move backwards.



If you want to put a blank space between characters, select " " (under-bar).

4 Repeat step 3 until you have entered the entire name, then press ENTER.
The normal display appears.




Erasing a station name

1 While listening to an FM or AM broadcast, press MENU.

2 Select "Name," press → to move to the sub menu, then select "Station Memo" by pressing ↑ or ↓.



3 Press →, then ↑ or ↓ to select "delete," then ENTER.
The Station Memo Delete indication appears.



4 Press ↑ or ↓ to select the station name you want to erase.

5 Press and hold ENTER for two seconds.
The selected station name is erased.

Repeat steps 4 and 5 if you want to erase other station names.


6 To complete the mode setting, press BACK.

7 Press MENU.
The normal display appears.

Note
In step 4, all the station names stored in memory appear in the order they were entered. The last station name entered will therefore appear at the end.

Selecting a station by name

You can use this function to select a station by the name that has been stored in memory for it.

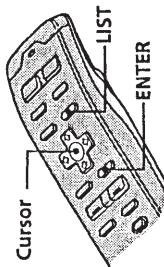

Tips

- To cancel the selection, press LIST.
- If the SEEK/AMS mode is set to "Item sel," you can select the desired disc with SEEK/AMS when the list appears in the display (see page 45).

EN

- 1 While listening to an FM or AM broadcast, press LIST.

The preset name List appears.

Station	1.	106.3	6.	96.6
FMT	2.	101.9	7.	99.9
2	3.	96.0	8.	98.9
101.9MHz	4.	102.5	9.	98.3
	5.	105.4	10.	98.3

- 2 Press $\uparrow$, $\downarrow$, $\rightarrow$, or $\leftarrow$ to select the station.

- 3 Press ENTER.

The unit selects the station, and the normal display appears.

To the next station



To the previous station



To select a station using the rotary remote

Push in and release DISC/PRESET to display the present name list.


Push and rotate the control to select the station from the list. After about 5 seconds, the normal display reappears.

EN

Radio/Other functions

Adjusting the sound characteristics

You can adjust the bass, treble, balance, and fader. The bass and treble levels can be stored respectively for each source.

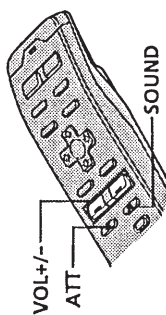

- 1 Press SOUND repeatedly to select the item you want to adjust.

Each time you press SOUND, the item changes as follows:



* Only when the DVOL (Direct Volume) function is turned off.

- 2 Adjust the selected item by pressing VOL + or -.

Adjust within three seconds after selecting the item. (After three seconds, VOL + and - function as the volume button.)

Attenuating the sound

Press ATT.


The unit automatically decreases the volume to a low level.

To restore the previous volume level, press ATT again.

Tip
The unit decreases the volume automatically when a telephone call comes in (Telephone ATT function).


Setting the set up menu

Use the Set up menu to perform additional settings, including Clock, Beep, Rotary remote, SEEK / AMS, Key select, Digital out, VC (Variable Coefficient) filter, and Direct Volume.

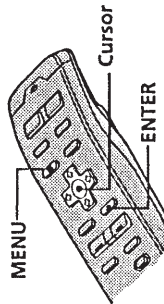

- Tips**
- In step 2, to move the cursor back to the previous column (one at a time), press **←**.
 - To cancel the current display and return to the previous display, press **BACK**.

1 Press MENU and select "Set up."



2 Press → to move to the sub menu, then select the setting by pressing ↑ or ↓.

The current setting appears to the right of the sub menu.



3 Change the setting and press ENTER.

The new setting appears to the right of the sub menu. Sub menus and the method for changing their settings are explained in the table on the next page.


4 Press MENU.

The normal display appears.

Sub Menu	Explanation and settings
Clock	Select "on" to display the current time in the upper-left corner of the display at all times. If you select "off," the time is displayed only when the system is turned off. Select "Time Set" to set the clock (see page 6).
Beep	Specifies whether a beep sounds when an operation button is pressed.
Rotary remote	Reverses the rotational direction of the rotary remote for controlling operations. Select "normal" for increasing volume, frequency, track numbers, etc. by rotating the remote clockwise. Select "reverse" for increasing the same parameters by rotating the remote counterclockwise.
SEEK / AMS	The SEEK / AMS function has two modes: Normal mode — Select "SEEK / AMS" to quickly locate tracks or stations. Item select mode — When the name list is displayed, select "Item sel" to locate discs or stations using the rotary remote or the front panel control.
Digital out	Select "ON" to output the digital signals through DIGITAL OUT if optional equipment with digital input is connected. Select "OFF" to cancel the output of digital signals.
VC filter	Select one of nine filter types for adjusting the sound to match your desired sound image, the music source, etc.
Direct Volume	Select "on" to output the signal without processing through the volume control circuit for pure high quality sound. In this case, the bass and treble adjustment do not work. Select "off" to output the signal through the tone control circuit. You can control the bass and treble levels, but the pureness of the original sound will be degraded.


Setting the display menu

Use the Display menu to perform additional settings including Illumination, Dimmer, Panel angle, Font Style, Contrast, EL (Electric Luminosity), and Display.

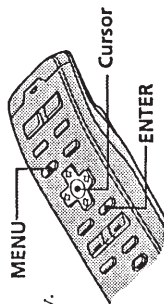

- Tips**
- In step 2, to move the cursor back to the previous column (one at a time), press **←**.
 - To cancel the current display and return to the previous display, press **BACK**.

1 Press MENU and select "Display."



2 Press → to move to the sub menu, then select the item you want to set by pressing ↑ or ↓.

The current sub menu setting appears to the right of the item.



3 Change the setting and press ENTER.


The new setting appears to the right of the item.

For an explanation of the sub menus, see the table on the next page.

4 Press MENU.

The normal display appears.

Sub menu	Explanation and setting
ILL (Illumination)	Select "Amber" or "Green" for the button colors of the front panel.
Dimmer	Select "Auto" to dim the brightness of the display whenever you turn the lights on.
Panel angle	Select either "10°" or "20°" degrees to automatically set the front panel angle. Select "Top" for normal angle.
Contrast	Select 1 of 15 contrast levels for the display. Select "Contrast," then press ENTER. You can change the current setting by pressing ← or → . Press ENTER again to change the setting.
Font Style	Select "Regular" or "Bold" to set the style of the display characters.
EL (Electric Luminosity) (Display window sleep mode)	Select "on" to have the display window automatically turn off after a few moments whenever you operate any of the controls. Select "off" to have the display window appear constantly.
Display	Select "Negative" to reverse the display window contrast. Select "Positive" to display the original contrast.

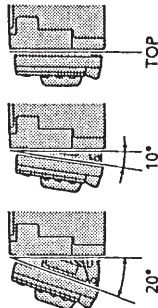


EN

Other functions

Setting the function menu


Use the function menu to assign the specific function mode to each function button.

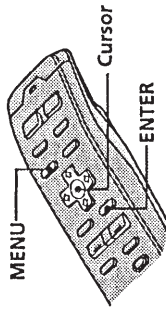

- Tips**
- In step 2, to move the cursor back to the previous column (one at a time), press **←**.
 - To cancel the current display and return to the previous display, press **BACK**.

- 1 Press **MENU** and select "Func."
- 2 Press **→** to move to the sub menu, then select "Select."

The current sub menu setting appears to the right of the item.



- 3 Change the setting and press **ENTER**.
The new setting appears to the right of the item.


For an explanation of the sub menus, see the table below.

Indication	Explanation and settings
Select	Select "Source" to display the function menu depending on each source or setting mode. Select "VC/DVOL/EL" to display VC, DVOL, and EL independently of the selected source or setting mode.


- 4 Press **MENU**.
The normal display appears.

Selecting a surround menu

The optional XDP-U50D lets you add some effects to the sound field of the currently selected source. The followings are the operating instructions for the XDP-U50D.
When the XDP-210EQ is connected to the unit, refer to the instructions manual supplied to the XDP-210EQ.

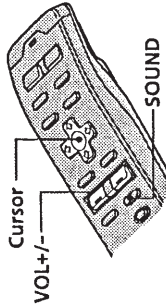

- 1 Press and hold **SOUND** for two seconds.
The DSP Sound Tuning Mode appears.
- 2 Press **SOUND** repeatedly to select "SUR Tuning."
- 3 Press **VOL + or -** to select the surround menu.
The surround menu appears in the order shown on the next page.
- 4 Press and hold **SOUND** for two seconds.
The normal display appears.



- Tips**
- Each time you press **SOUND**, the tuning item changes as follows:
- ```

graph TD
 A[SUR (Surround)] --> B[POS (Position)]
 B --> C[SUB (Subwoofer)]
 C --> D[BAS (Bass)]
 D --> E[TRE (Treble)]
 E --> A

```
- In step 3, press **→** to switch to the effect level adjustment.


continue to next page →

| Surround menu | Effect of sound field                     |
|---------------|-------------------------------------------|
| HALL          | Concert hall                              |
| JAZZ          | Jazz club                                 |
| DISCO         | Disco with thick walls                    |
| THEATER       | Movie theater                             |
| PARK          | Big open space                            |
| LIVE          | Live concert                              |
| OPERA         | Opera house                               |
| CHURCH        | Church/chapel with a lot of reverberation |
| STADIUM       | Open-air concert in a stadium             |
| CELLAR        | Cellar with a lot of reverberation        |
| -DEFEAT-      | Normal sound without any DSP effects      |

## Adjusting the effect level

**1** Follow the steps 1 through 3 of "Selecting a surround menu" (see page 49).


**2** Press **→**, then **VOL +** or **-** to adjust the level.  
The effect level is adjustable from 0 to 100%. Increase the level to enhance the effect.




**3** Press and hold **SOUND** for two seconds.  
The normal display mode appears.

## Storing a surround effect for CDs (DSP custom file)

Once you have registered the desired surround menu for the discs, you can enjoy the same surround menu every time you play that disc. (Only when you have labeled the disc using the Custom file function.)

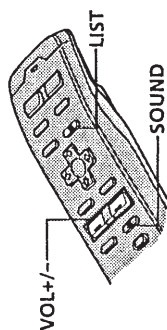

**1** Press and hold **SOUND** for two seconds.  
The DSP Sound Tuning Mode appears.



**2** Press **VOL +** or **-** to adjust to the desired sound effect.


**3** Press and hold **LIST** for two seconds.

**4** Press and hold **SOUND** for two seconds.  
The normal display mode appears.


**Note**  
You can use this function for discs that have been assigned a custom name.

## Playing a disc with a stored surround effect

- 1 While playing a CD, press and hold LIST for two seconds.  
The Disc Memo Write indication appears.



- 2 Press LIST.  
The DSP Tuning Mode appears.



- 3 Press VOL + or - to select the surround menu.

- 4 Press and hold LIST for two seconds.  
The normal display appears.

## Changing the stored surround effect


Play the disc whose surround effects you want to change, then follow the steps of "Storing the surround effect for CDs" (see page 51).

## Erasing the stored surround effect

Select "-DEFEAT-" in step 3 of "Selecting a surround menu" (see page 49).


## Selecting the listening position

You can set a delayed time for the sound to reach the listeners from the speakers. In this way, the unit can simulate a natural sound field so that you feel as if you are in the center of the sound field wherever you sit in the car.

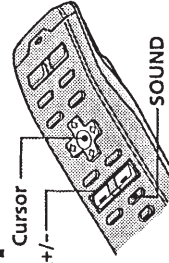


- 1 Press and hold SOUND for two seconds.  
The DSP tuning mode appears.

- 2 Press SOUND repeatedly to select "POS Tuning."




- 3 Press VOL + or - repeatedly to select the listening position.  
The position appears in the order shown below.

| Indication | Center of sound field             |
|------------|-----------------------------------|
| All        | Normal setting<br>(1) + (2) + (3) |
| Front      | Front part<br>(1) + (2)           |
| Front R    | Right front (2)                   |
| Front L    | Left front (1)                    |
| Rear       | Rear part (3)                     |

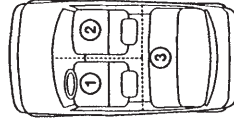

- 4 Press and hold SOUND for two seconds.  
The normal display appears.

**Tips**  
• Each time you press SOUND, the tuning item changes as follows:

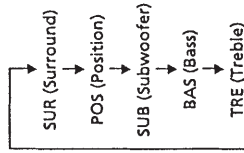

• In step 3, press → to switch to the listening position adjustment. (see next page)


**Tip**  
You cannot adjust the effect level of "DEFEAT."

## Adjusting the listening position


- Follow steps 1 through 3 of "Selecting the listening position" (see page 53).

### 2 Adjust the center of the sound field.

- Press **→**.
- Press VOL + or - to adjust the center to the left or right.




- Press **→**.
- Press VOL + or - to adjust the center to the rear or front.



### 3 Press and hold SOUND for two seconds.


The normal display appears.

## Adjusting the cut-off frequency of the subwoofer(s)

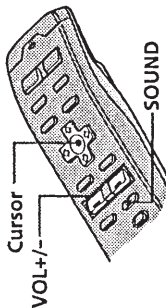

- Press and hold **SOUND** for two seconds.  
The DSP Sound Tuning Mode appears.

### 2 Press SOUND repeatedly to select "SUB."



- Press **VOL +** or - repeatedly to select the cut-off frequency.  
The frequency appears in the order as follows.

62Hz ↔ 78Hz ↔ 99Hz ↔ 125Hz\* ↔ 157Hz ↔ 198Hz

\* Factory-set frequency

### 4 Press and hold SOUND for two seconds.

The normal display appears.

#### Tips


- Each time you press **SOUND**, the tuning item changes as follows:



- In step 3, press **→** to switch to the subwoofer's volume adjustment. (see next page)

#### What is the cut-off frequency?


To match the characteristics of the connected subwoofer(s), you can cut out the unwanted high and middle frequency signals entering the subwoofer(s). By setting the cut-off frequency, the subwoofer(s) will output only low frequency signals so you can get a clearer sound image.

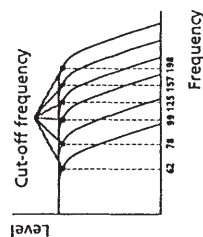

## Adjusting the volume of the subwoofer(s)

**1** Follow the steps 1 through 2 of "Adjusting the cut-off frequency of the subwoofer(s)" (see page 55).

**2** Press **→**, then **VOL + or -** to adjust the level.





**3** Press and hold **SOUND** for two seconds.

The normal display appears.

**Note**  
When you adjust the volume all the way down, "SUB W ATT" appears and the cut-off frequency of the subwoofer is disabled.

## Adjusting the turn-over frequency of the bass and treble


You can adjust the bass and treble turn-over frequencies to best fit the acoustic characteristics inside your car.

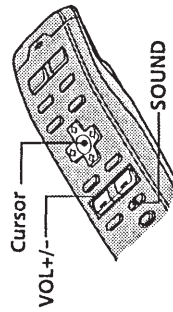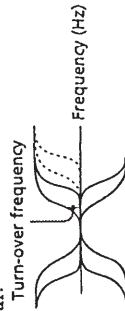

**1** Press and hold **SOUND** and hold for two seconds.

The DSP Sound Tuning Mode appears.

**2** Press **SOUND** repeatedly to select "BAS" or "TRE."



**3** Press **VOL + or -** repeatedly to select the turn-over frequency.

The turn-over frequency appears in the order as follows:

**BAS:**  
198Hz ↔ 250Hz ↔ 314Hz\* ↔ 396Hz  
**TRE:**  
2.00kHz ↔ 3.17kHz\* ↔ 4.00kHz ↔ 5.03kHz\*


\* Factory-set frequency

**4** Press and hold **SOUND** for two seconds.

The normal display mode appears.

### Tips


- Each time you press **SOUND**, the tuning item changes as follows:

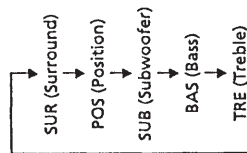

- In step 3, press **→** to switch to the volume adjustment of bass and treble. (see next page)

## Adjusting the volume of the bass and treble

- 1 Press and hold **SOUND** for two seconds.  
The DSP Sound Tuning Mode appears.
- 2 Press **SOUND** repeatedly to select "BAS" or "TRE."
- 3 Press **→**, then **VOL +** or **-** to adjust the level.



- 4 Press and hold **SOUND** for two seconds.  
The normal display appears.

## Listening to each program source in its registered surround effect (Last Sound Memory (LSM))


Each time you restore the same source, you can hear the same surround effect registered for that source, even after changing the program source or turning the unit off and then on again.

## Additional information

### Detaching the front panel

You can detach the front panel of this unit to protect the unit from being stolen.

- 1 Press **OFF**.
- 2 Press **RELEASE** to open the front panel, then slide the front panel to the left side, and pull out from the right side of the front panel.

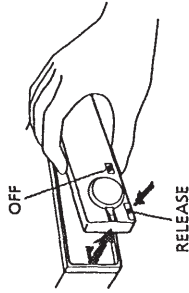


#### Notes

- Do not put anything on the inner surface of the front panel.
- Be sure not to drop the panel when detaching it from the unit.
- If you detach the panel while the unit is still on, the power will turn off automatically to prevent the speakers from being damaged.
- When you carry the front panel with you, put it in the supplied front panel case.

### Attaching the front panel

Place the hole ① on the front panel onto the spindle ② on the unit as illustrated, then push the left side in.

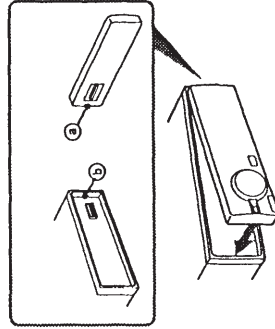

### Caution alarm


If you turn the ignition key switch to the **OFF** position without removing the front panel, the caution alarm will beep for a few seconds (only when the ACC Position is set to "yes") (see page 4).

#### Notes

- Be sure not to attach the front panel upside down.
- Do not press the front panel hard against the unit when attaching it. Press it lightly against the unit.
- Do not press hard or put excessive pressure on the display windows of the front panel.
- Do not expose the front panel to direct sunlight or heat sources such as hot air ducts, and do not leave it in a humid place. Never leave it on the dashboard of a car parked in direct sunlight where there may be a considerable rise in temperature.


### Detaching the rotary remote

You can detach the rotary remote as a safety measure against theft.  
Turn the remote clockwise while pressing down **RELEASE**.

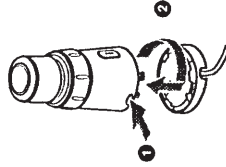

### Attaching the rotary remote

Align the four holes on the bottom of the rotary remote to the four catches on the holder and slide the rotary remote until it locks into place as illustrated.

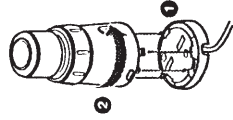


## About the LCD display on the display section

When the temperature is extremely high or low, the display may become dim and hard to see. This is due to the characteristics of the LCD and is not a malfunction. The display will return to normal when the temperature becomes normal.

## Wireless Remote

### Installing batteries in the wireless remote

Insert two size-AA (R6) batteries with the correct polarity.

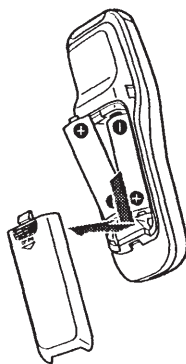

### Battery life

When the batteries become weak, you will not be able to operate the unit with the wireless remote. Battery life is about six months (or shorter, depending on the way the remote is used). If the remote becomes inoperative, replace the batteries, then verify that it can operate the system. If the red indicator no longer flashes when you press an operation button on the remote, it means the batteries are weak.

### Notes on battery use

To avoid damage from battery leakage and corrosion:

- Make sure the polarity of the batteries match the + and – markings in the battery compartment.
- Do not use an old battery with a new one, or different types of batteries together.
- Remove the batteries when the system will not be used for a long period of time.
- Do not charge the batteries.
- If any battery leakage occurs, replace both batteries after cleaning the battery compartment.


### Notes on the wireless remote

- To prevent deformation due to heat, do not leave the remote in a place subject to direct sunlight.
- Direct sunlight may affect the system's ability to receive infrared signals from the remote. If this happens, move the remote closer to the remote control sensor of the system.
- When parking your car, put the remote somewhere, such as the glove compartment, that is away from direct sunlight to prevent deformation due to heat.

## Fuse replacement

When replacing the fuse, be sure to use one that matches the amperage described on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

Fuse (10 A)




### Warning


Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

## Cleaning the connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. To prevent this, open the front panel by pressing RELEASE, then detach it and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.



Main unit




Back of the front panel

### Notes


- For safety, before cleaning the connectors, turn off the engine and remove the key from the ignition switch.
- Never touch the connectors directly with your fingers or any metal device.

## Dismounting the unit

- 1 Press the clip inside the front cover with a thin screwdriver, and gently pry the front cover free.




- 2 Repeat step 1 on the left side. The front cover is removed.

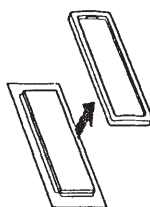

- 3 Use a thin screwdriver to push in the clip on the left side of the unit, then pull out the left side of the unit until the catch clears the mounting.



- 4 Repeat step 3 on the right side.

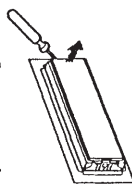

- 5 Slide the unit out of the mounting.




# Connections

## Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all earth wires to a common earth point.
- The use of optical instruments with this product will increase eye hazard.

## Reset button

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc.




## When making a digital connection

To connect a unit with an optical cable, connect the optical cable (optional) to the optical adapter (optional), and plug the adapter into the special socket on the rear of the unit. Then set the Digital out to "on". To set the Digital out to "on" or "off", refer to the "Initial settings" in the Operating Instructions.

### Notes

- The Digital out is factory-set to off.
- If the Digital out is not correctly set, the unit will work without producing a sound.

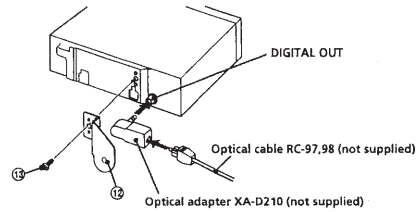

## Equipment used in illustrations (not supplied)



Front speaker



Power amplifier



Rear speaker




CD/MD changer




Active subwoofer

## Connection diagram

### Example 1

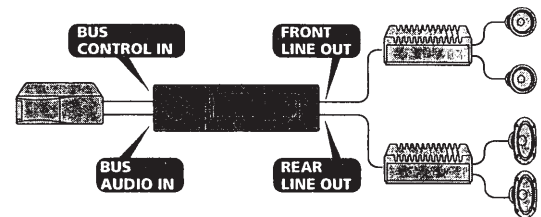


### Example 2

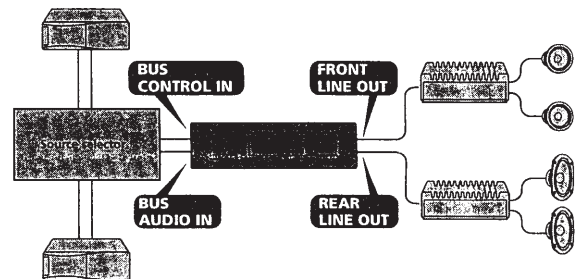


For connecting two or more changers, the source selector XA-C30 (optional) is necessary.

### Example 3

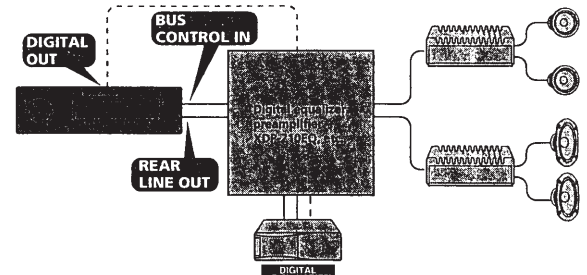

\* When connecting a digital equalizer preamplifier XDP-210EQ, refer to the Installation/Connections manual XDP-210EQ.

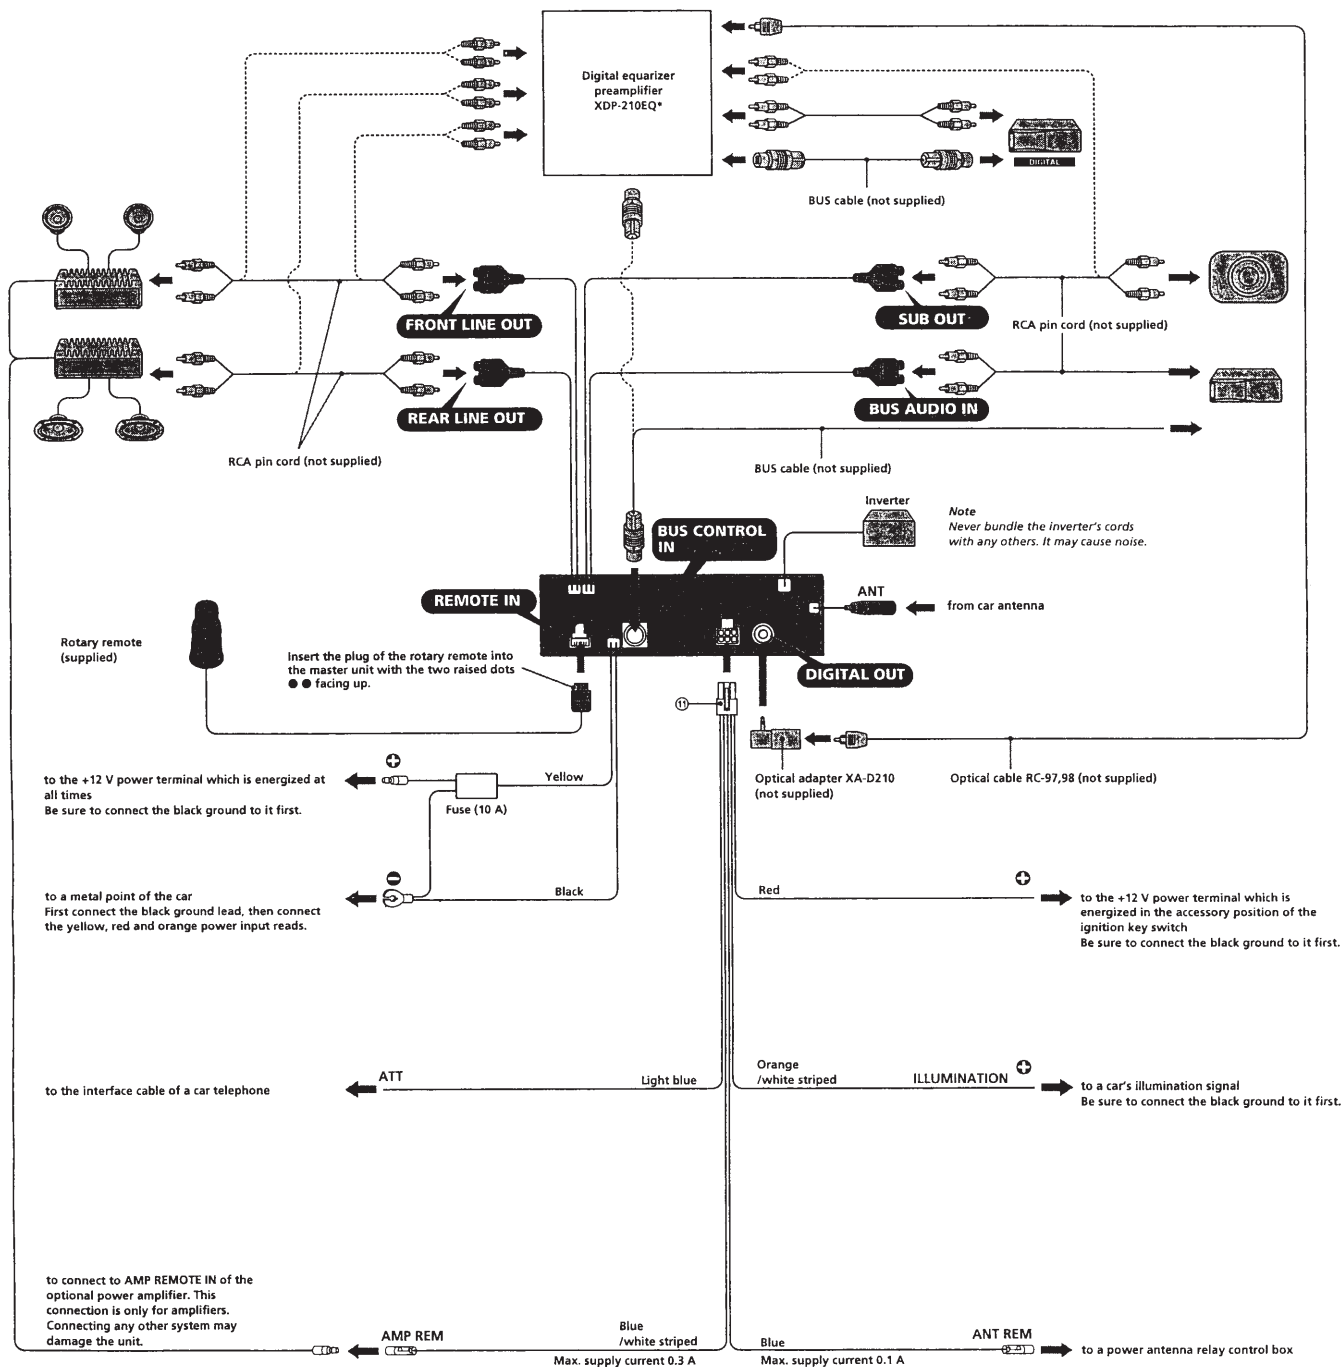

#### Notes on the control leads

- The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner.
- A power antenna without relay box cannot be used with this unit.

#### Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

### Inverter

- Install the inverter far away from the unit using double-sided adhesive tape or something similar.
- Do not bundle the inverter's cord with a pin cord or other connecting cord.
- Be sure not to mount the inverter under a mat or in a place exposed to splashing water of air conditioner. It may cause electric shock or damage to the unit.

#### Note

If the inverter's cord is pinched, the display indications may not appear.

### Using the optional power amplifier


This master unit, when connected to an optional power amplifier, is designed to reproduce high quality sound. To make the best use of the optional power amplifier, follow the steps below.

- 1 Use the dial to set the master unit's volume to the highest level possible, depending on the optional power amplifier. This improves the harmonic distortion and signal-to-noise ratio.
- 2 Use the power amplifier's LEVEL (GAIN) control to adjust the listening volume to a suitable level.


## SECTION 2 DISASSEMBLY

**Note :** Follow the disassembly procedure in the numerical order given.


### 2-1. COVER (UPPER)

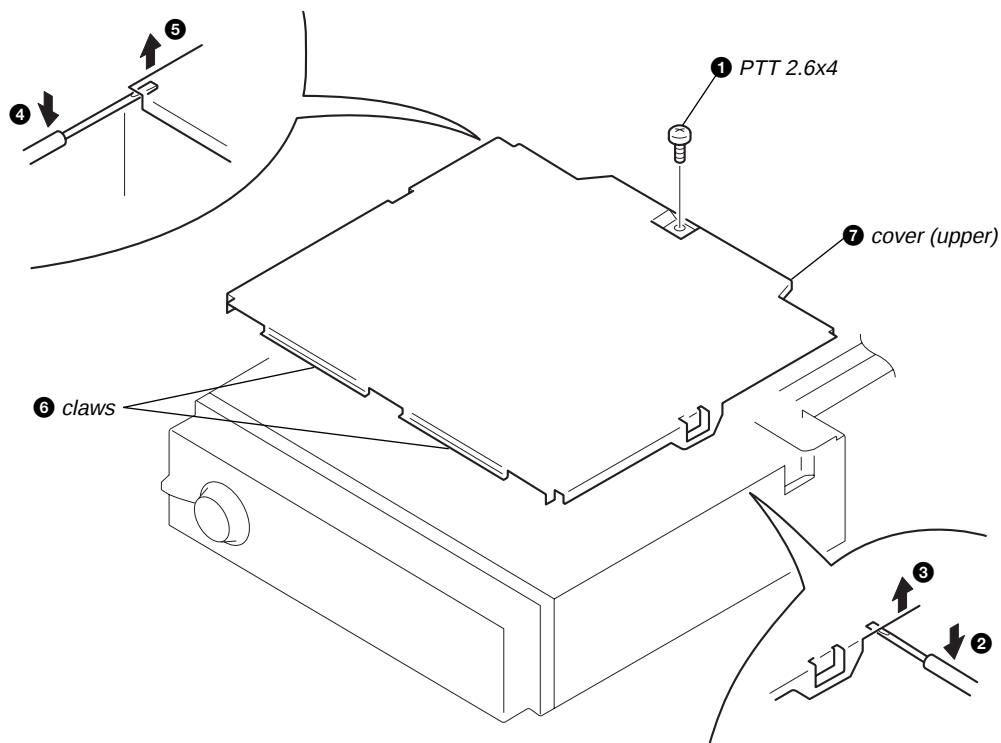


### 2-2. FRONT PANEL ASSY

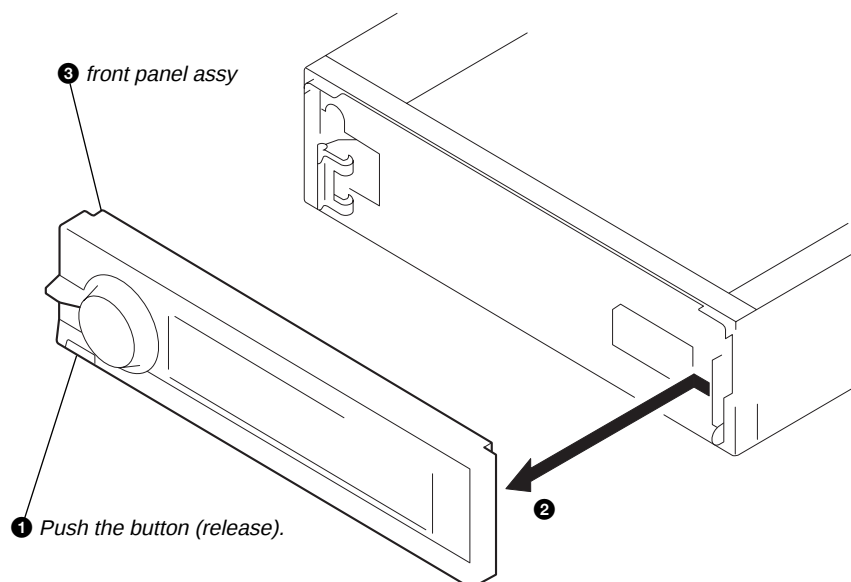


## 2-3. CORDS

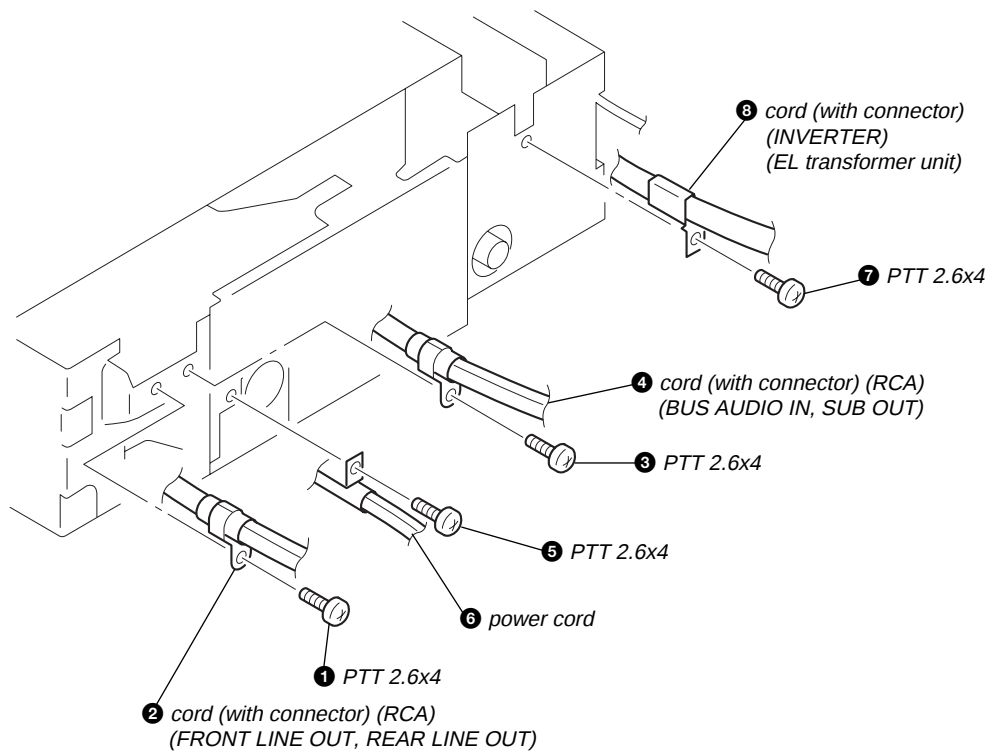


## 2-4. REAR PANEL

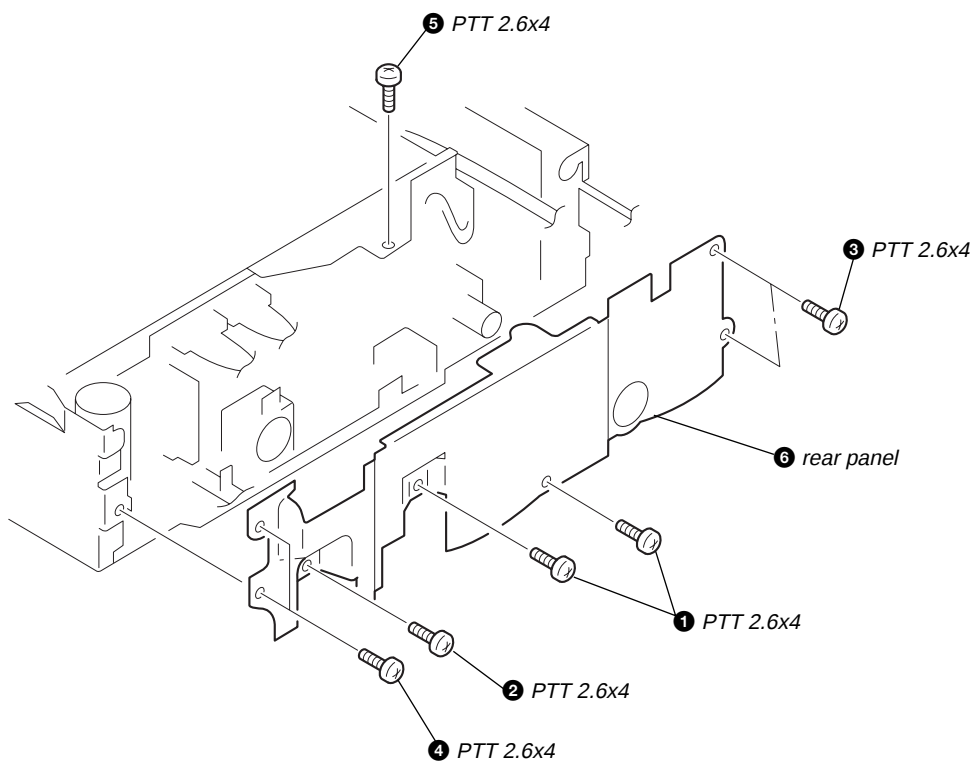


## 2-5. MD ASSY

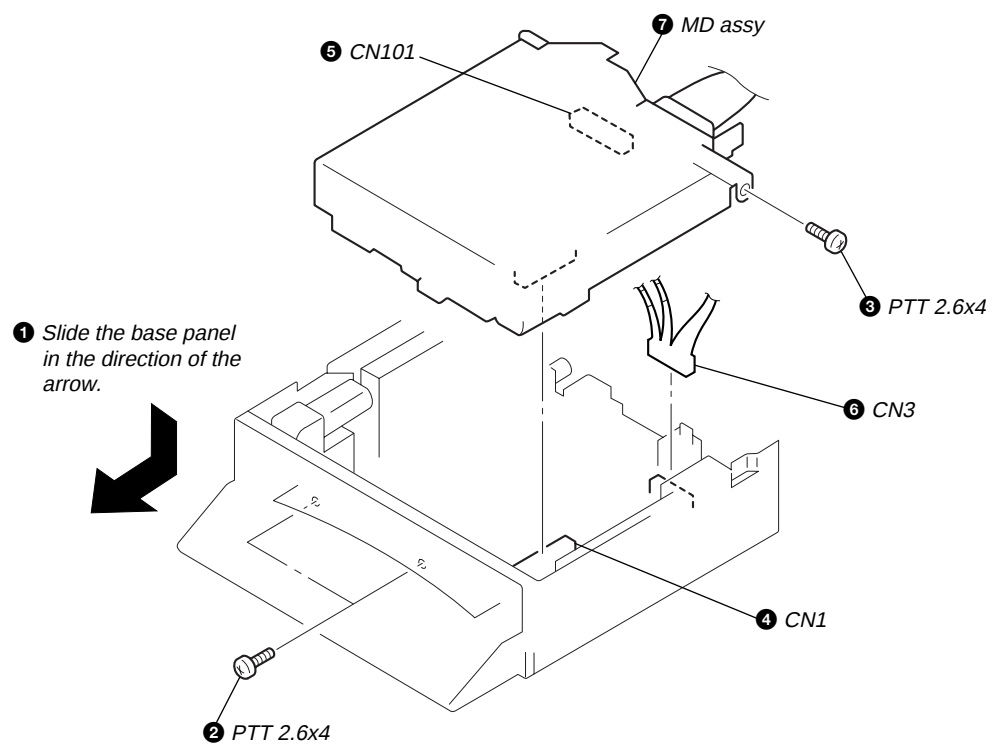


## 2-6. AUDIO BOARD

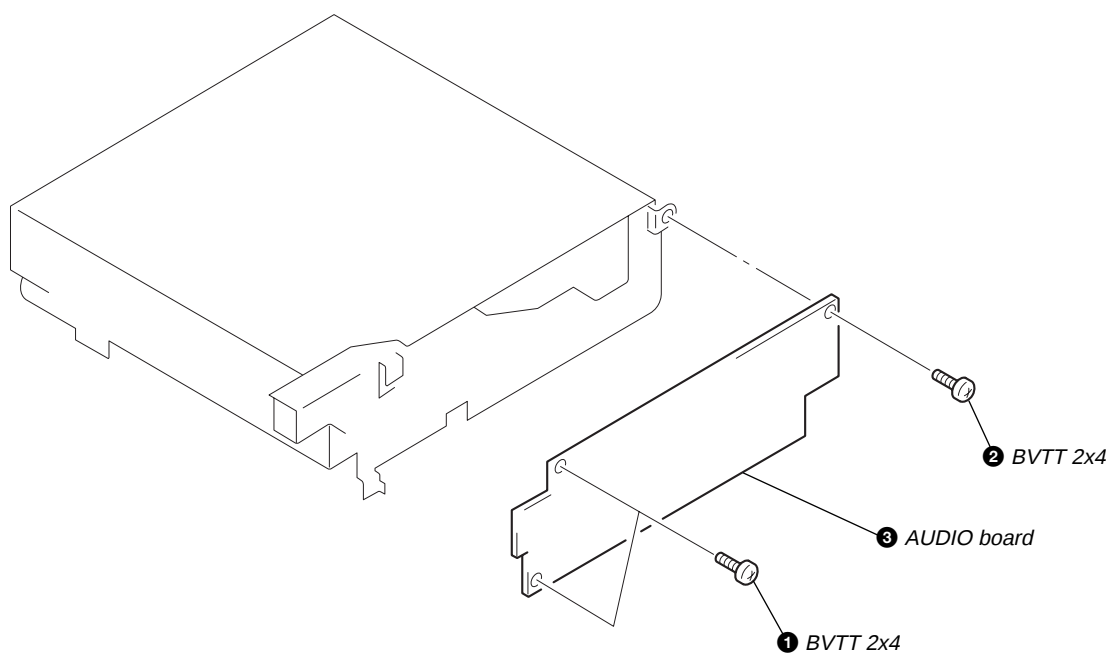


## 2-7. BRACKET (MD)

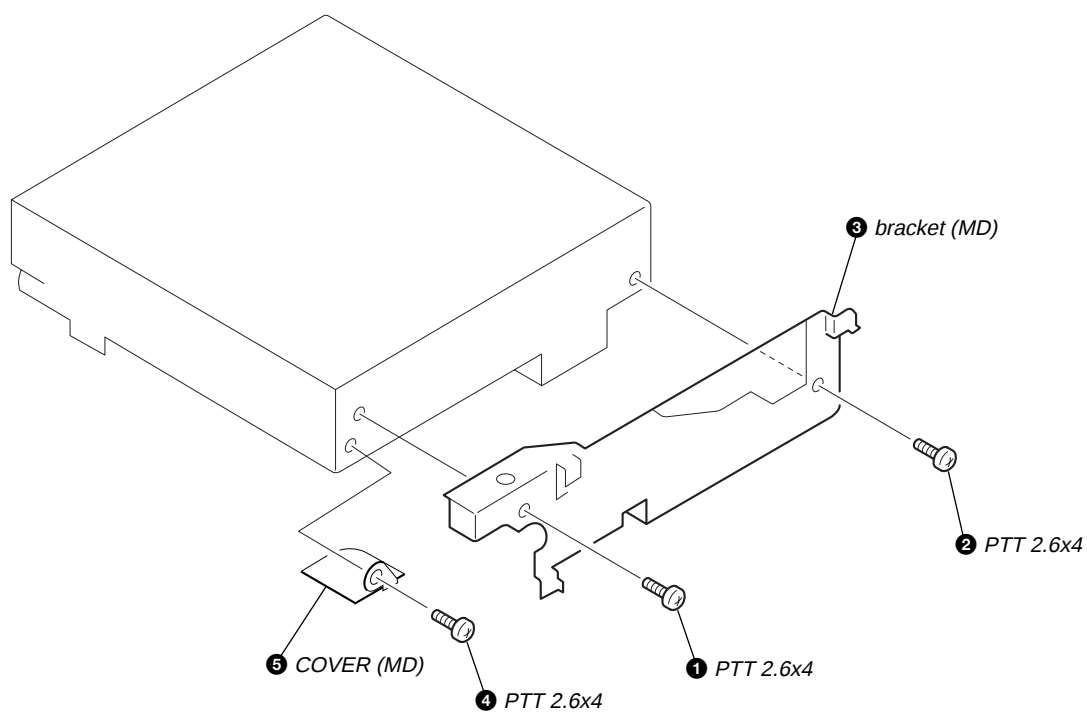


## 2-8. MOTOR BLOCK

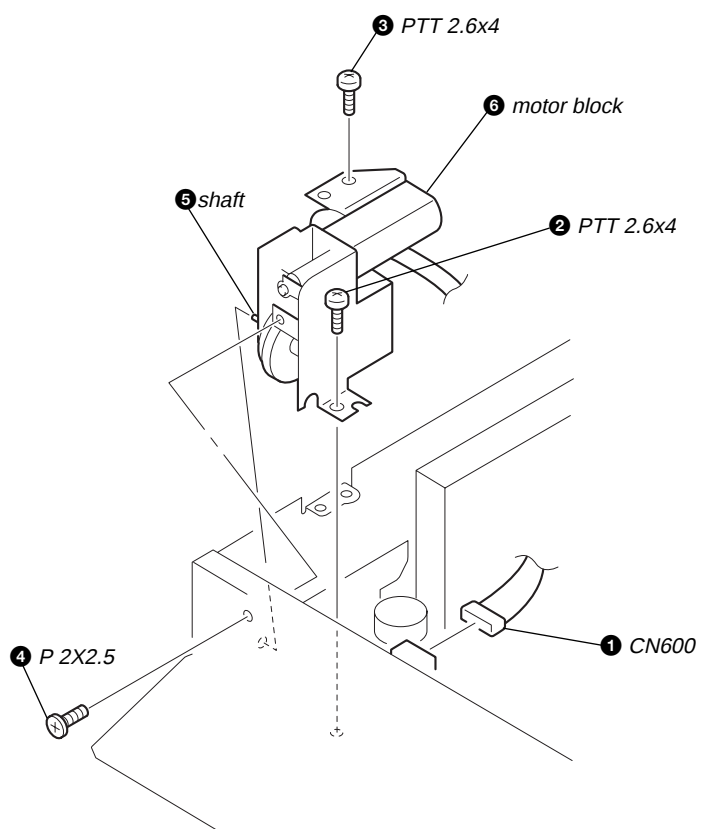


## 2-9. BASE PANEL ASSY

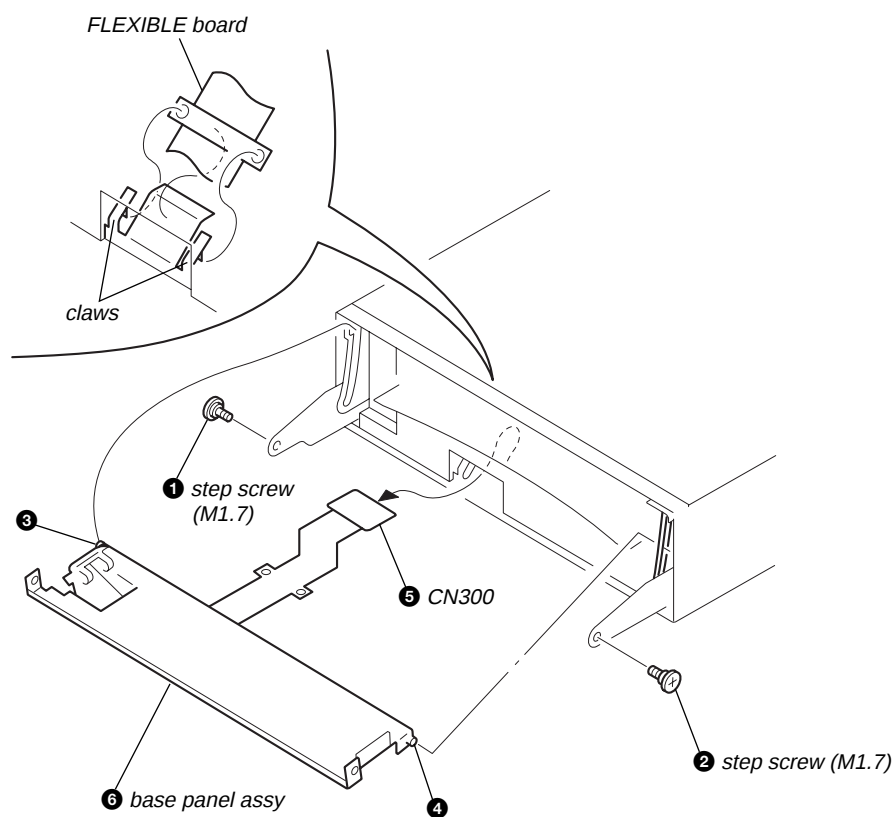


## 2-10. SUB PANEL ASSY

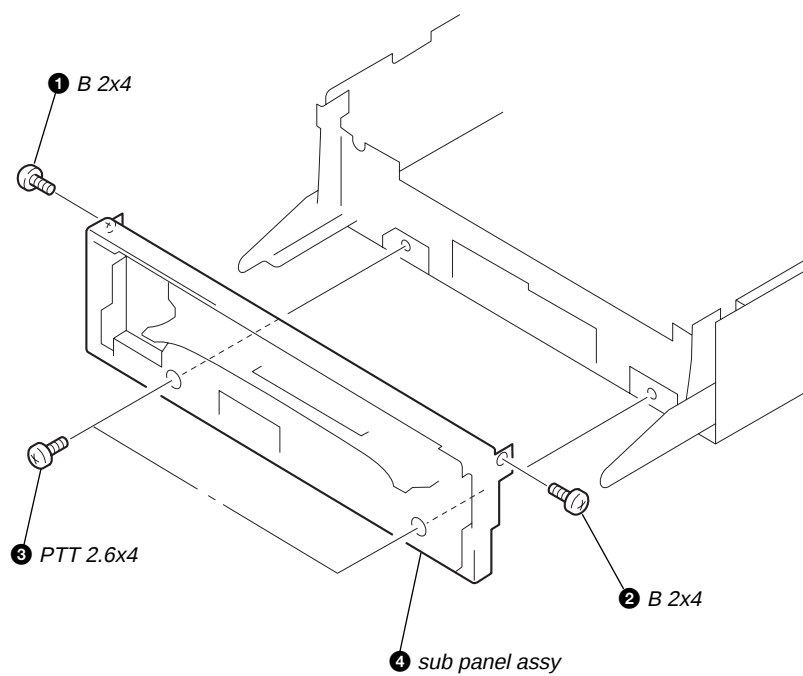


## 2-11. CHASSIS (FRONT) ASSY

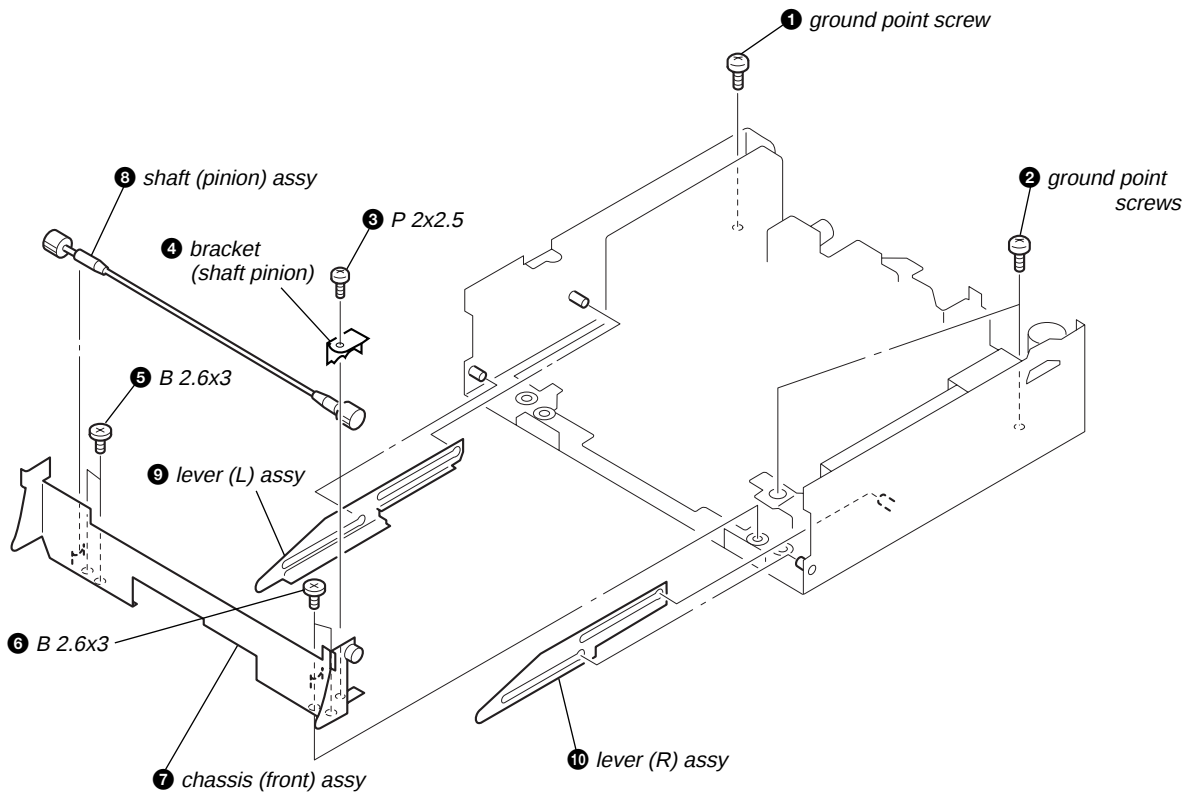


## 2-12. MAIN BOARD

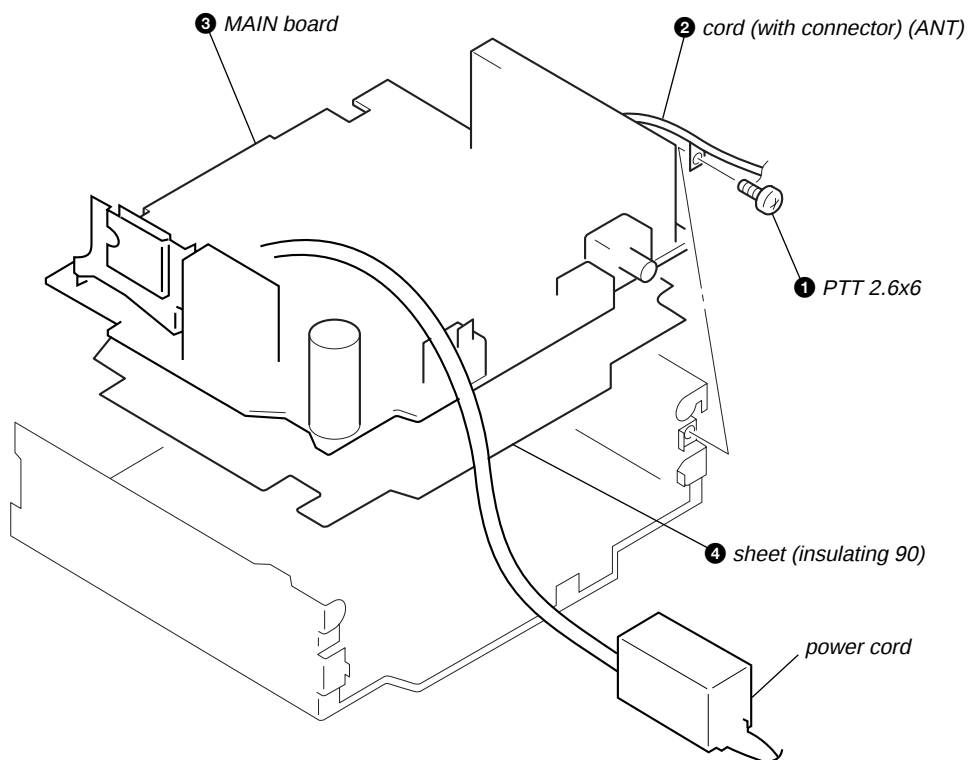


## 2-13. CHASSIS (T) SUB ASSY

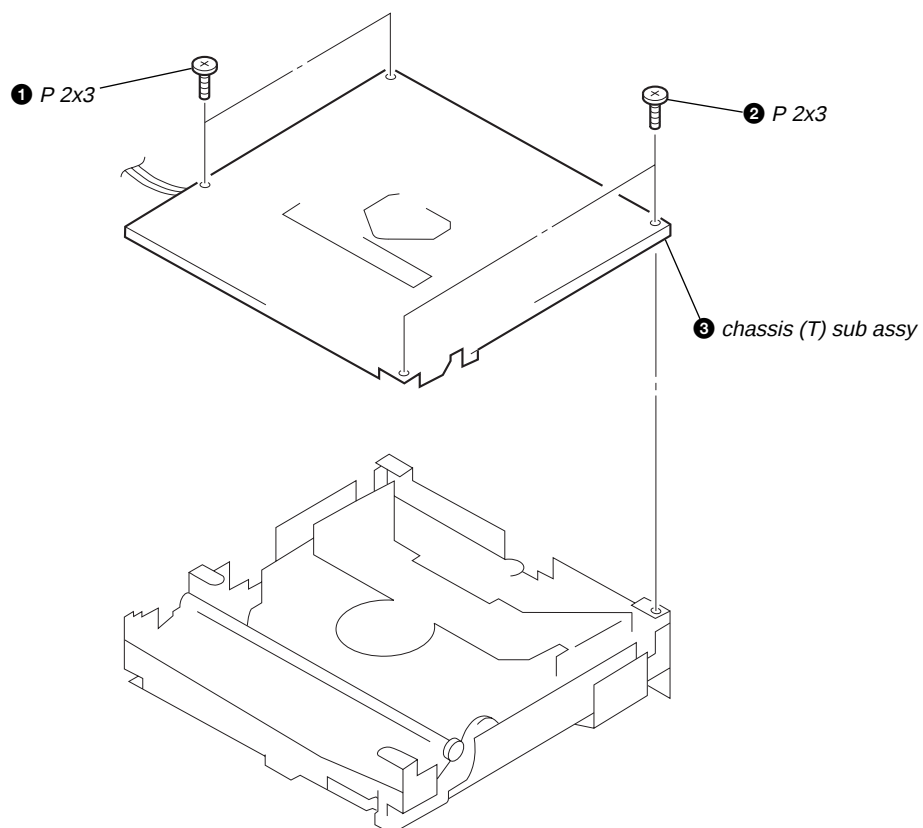

## 2-14. LEVER ASSY

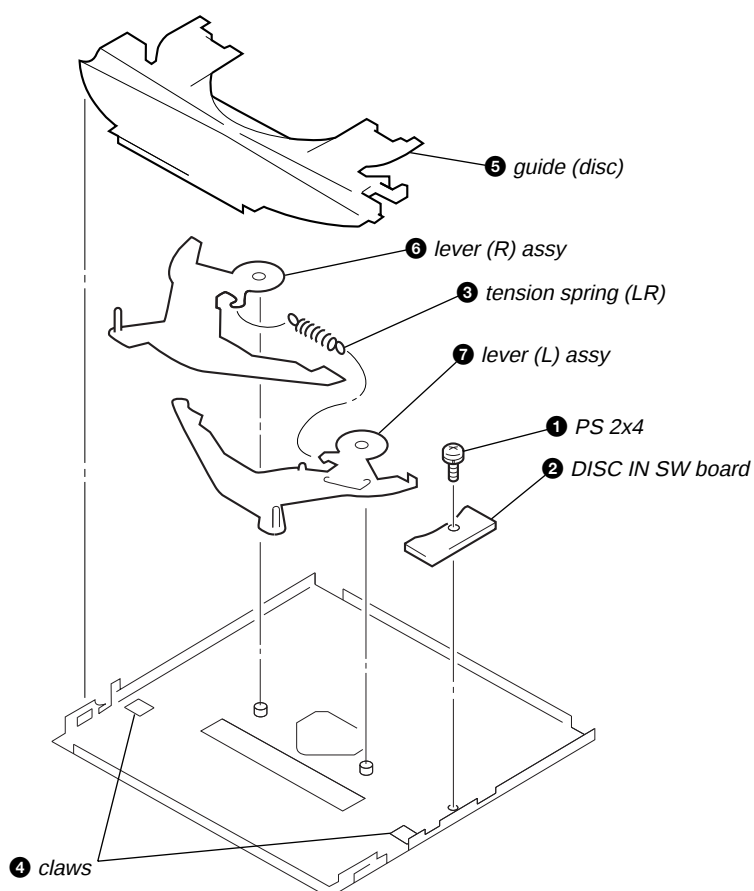


## 2-15. SERVO BOARD

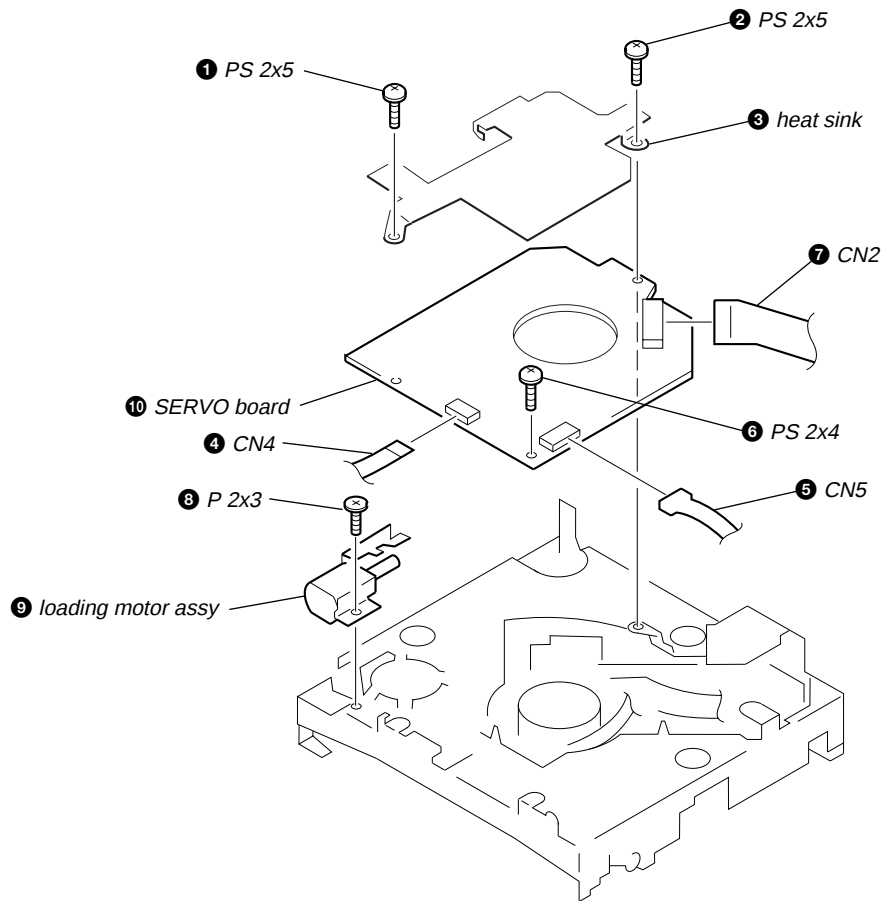


## 2-16. ROLLER ASSY


- When installing, take note of the positions arm (roller) and washers. (Fig. 1)

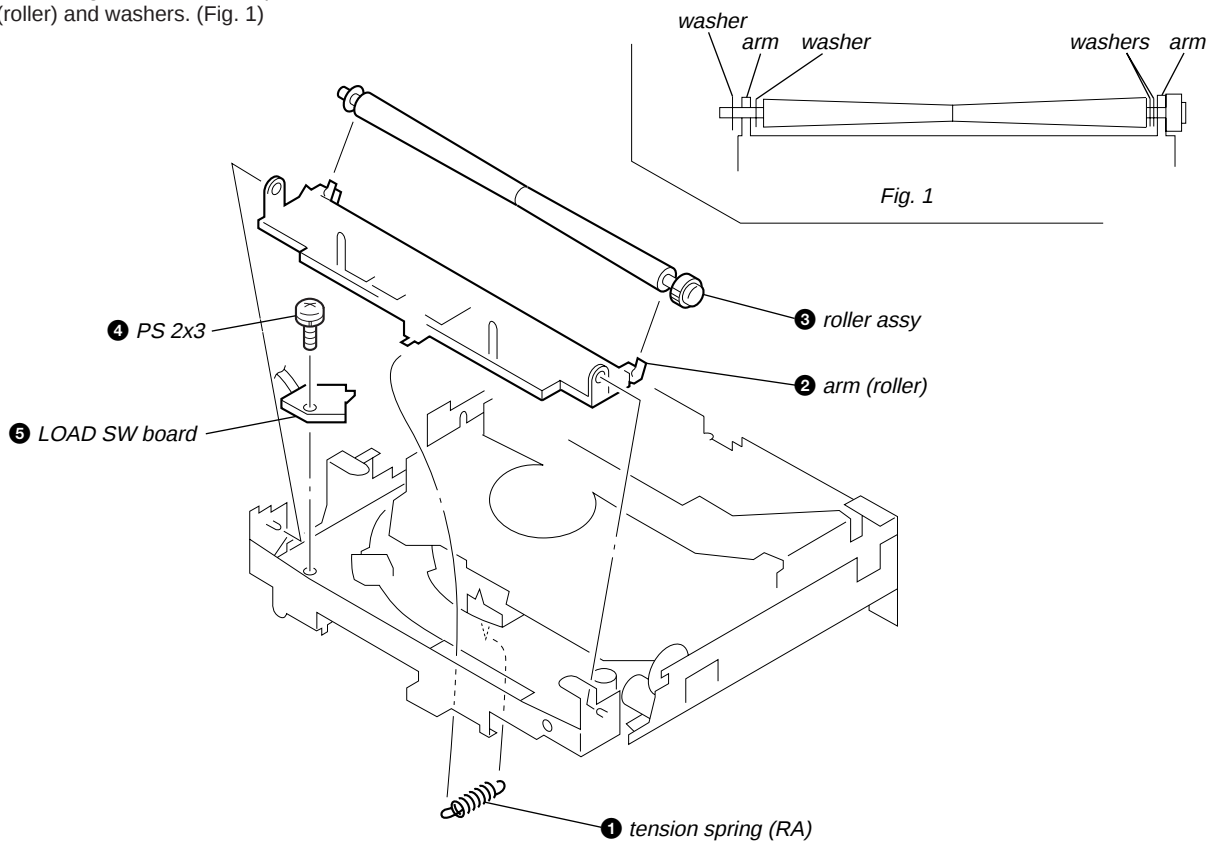

## 2-17. CHASSIS (OP) (O/S) ASSY

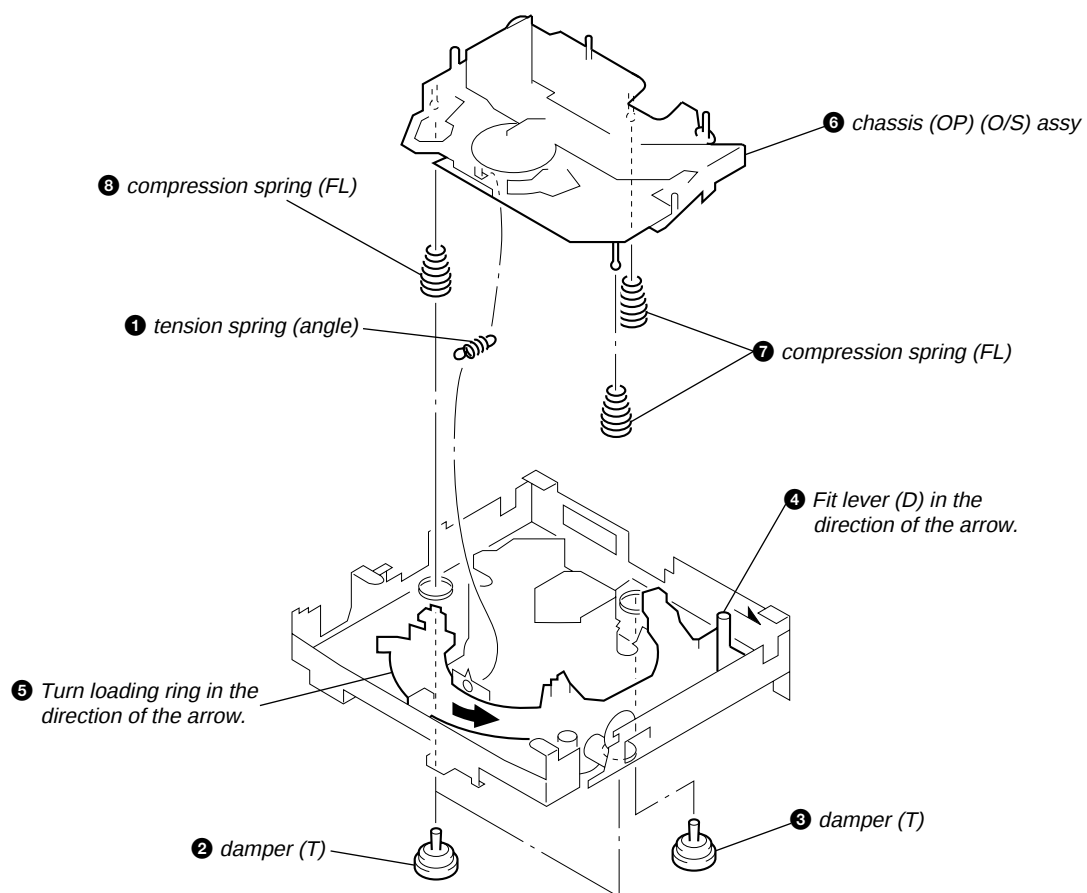

## 2-18. OPTICAL PICK-UP BLOCK

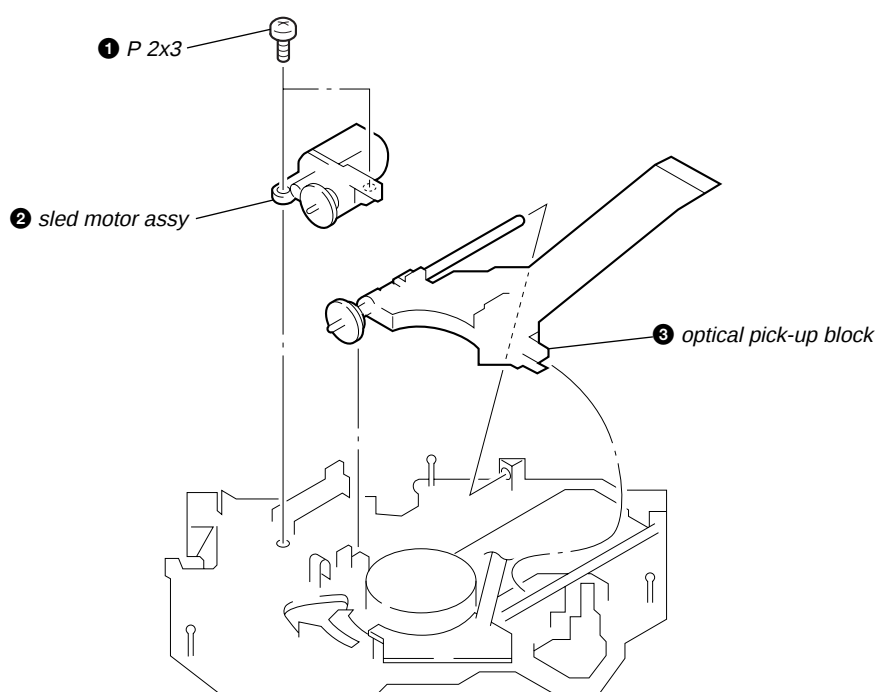

## SECTION 3 ELECTRICAL ADJUSTMENTS

### CD SECTION

CD section adjustments are done automatically in this set.

### TUNER SECTION

**0 dB = 1  $\mu$ V**

#### Cautions during repair

When the tuner unit is defective, replace it by a new one because its internal block is difficult to repair.

### TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and AM Auto Scan/Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Set the "OFF" mode.
2. Push the preset **[4]** button.
3. Push the preset **[5]** button.
4. Press the preset **[1]** button for more than two seconds.
5. Then the display indicates all lights, the test mode is set.

<Release the Test Mode>

1. Push the **[OFF]** button.

#### Note on Adjustment


The adjustments of tuner section, should be performed according to the following sequence.

1. FM Auto Scan/Stop Level Adjustment
2. FM Stereo Separation Adjustment (WIDE)
3. FM Stereo Separation Adjustment (NARROW)
4. AM Auto Scan/Stop Level Adjustment

### FM Auto Scan/Stop Level Adjustment


Setting :

SOURCE button : FM

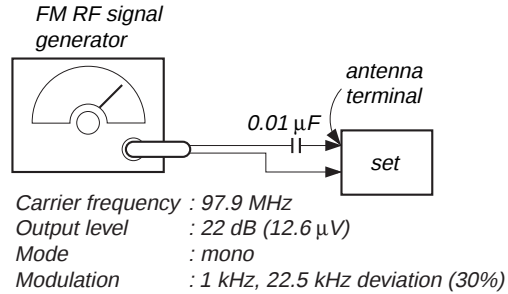


#### Procedure :

1. Set to the test mode.
2. Push the **[SOURCE]** button and set to FM.  
Display

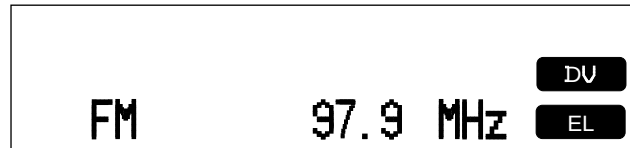


3. Push the preset **[3]** button.

Display

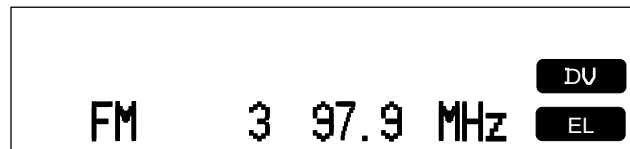

4. Adjust with the volume RV2 on TU701 so that the "FM" indication turns to "FM0" indication on the display window. But, in case of already indicated "FM0", turn the RV2 so that put out light "0" indication and adjustment.


Display

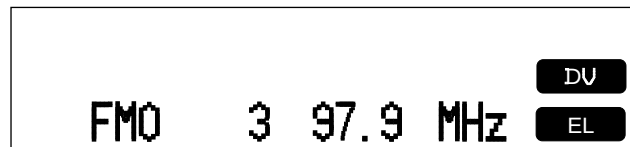

Adjustment Location : See page 46.

**FM Stereo Separation Adjustment (WIDE)****Setting :**

SOURCE button : FM

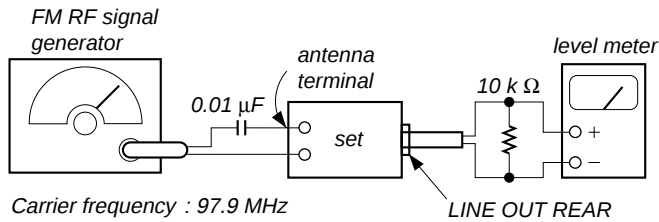

Carrier frequency : 97.9 MHz

Output level : 70 dB (3.2 mV)

Mode : stereo

Modulation : main : 1 kHz, 33.75 kHz deviation (45%)  
 sub : 1 kHz, 33.75 kHz deviation (45%)  
 19 kHz pilot : 7.5 kHz deviation (10%)

**Procedure :**

1. Set to the test mode.
2. Push the **[SHIFT]** button.
3. Push the **[4]** button three times.
4. Push the **[5]** button once and set to WIDE mode.

| FM stereo signal generator output channel | Level meter connection | Level meter reading (dB)                      |
|-------------------------------------------|------------------------|-----------------------------------------------|
| L-CH                                      | L-CH                   | Ⓐ                                             |
| R-CH                                      | L-CH                   | Ⓑ<br>Adjust RV3 on TU701 for minimum reading. |
| R-CH                                      | R-CH                   | Ⓒ                                             |
| L-CH                                      | R-CH                   | Ⓓ<br>Adjust RV3 on TU701 for minimum reading. |


L-CH stereo separation : Ⓐ – Ⓑ

R-CH stereo separation : Ⓒ – Ⓓ

The separations of both channels should be equal.

**Specification :** Separation more than 24 dB**Adjustment Location :** See page 46.**FM Stereo Separation Adjustment (NARROW)****Setting :**

SOURCE button : FM

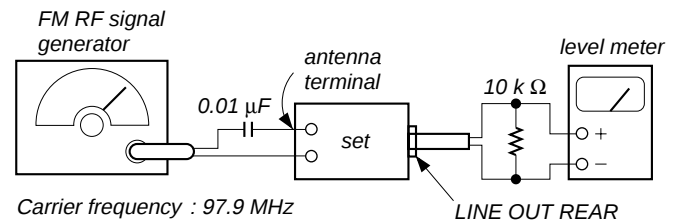

Carrier frequency : 97.9 MHz

Output level : 70 dB (3.2 mV)

Mode : stereo

Modulation : main : 1 kHz, 33.75 kHz deviation (45%)  
 sub : 1 kHz, 33.75 kHz deviation (45%)  
 19 kHz pilot : 7.5 kHz deviation (10%)

**Procedure :**

1. Set to the test mode.
2. Push the **[SHIFT]** button.
3. Push the **[4]** button three times.
4. Push the **[5]** button twice and set to NARROW mode.

| FM stereo signal generator output channel | Level meter connection | Level meter reading (dB)                      |
|-------------------------------------------|------------------------|-----------------------------------------------|
| L-CH                                      | L-CH                   | Ⓐ                                             |
| R-CH                                      | L-CH                   | Ⓑ<br>Adjust RV4 on TU701 for minimum reading. |
| R-CH                                      | R-CH                   | Ⓒ                                             |
| L-CH                                      | R-CH                   | Ⓓ<br>Adjust RV4 on TU701 for minimum reading. |

L-CH stereo separation : Ⓐ – Ⓑ

R-CH stereo separation : Ⓒ – Ⓓ


The separations of both channels should be equal.

**Specification :** Separation more than 18 dB**Adjustment Location :** See page 46.

## AM Auto Scan/Stop Level Adjustment

### Setting :

SOURCE → MODE button : AM

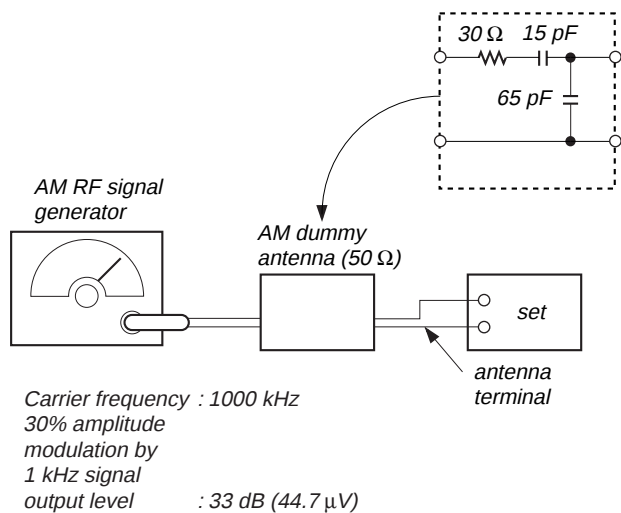


### Procedure :


1. Set to the test mode. (See page 44.)
2. Push the **SOURCE** button.
3. Push the **MODE** button and set to AM.  
Display



4. Push the preset **[3]** button.  
Display

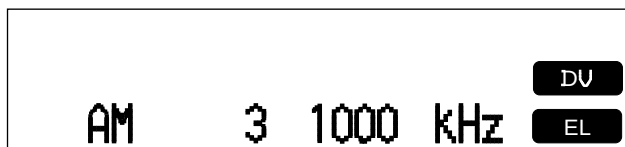


5. Adjust with the volume RV1 on TU701 so that the "AM" indication turns to "AM0" indication on the display window. But, in case of already indicated "AM0", turn the RV1 so that put out light "0" indication and adjustment.  
Display

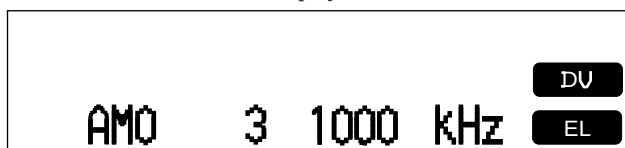

Adjustment Location : tuner unit (TU701)

Adjustment Location : tuner unit (TU701)

—set upper view—

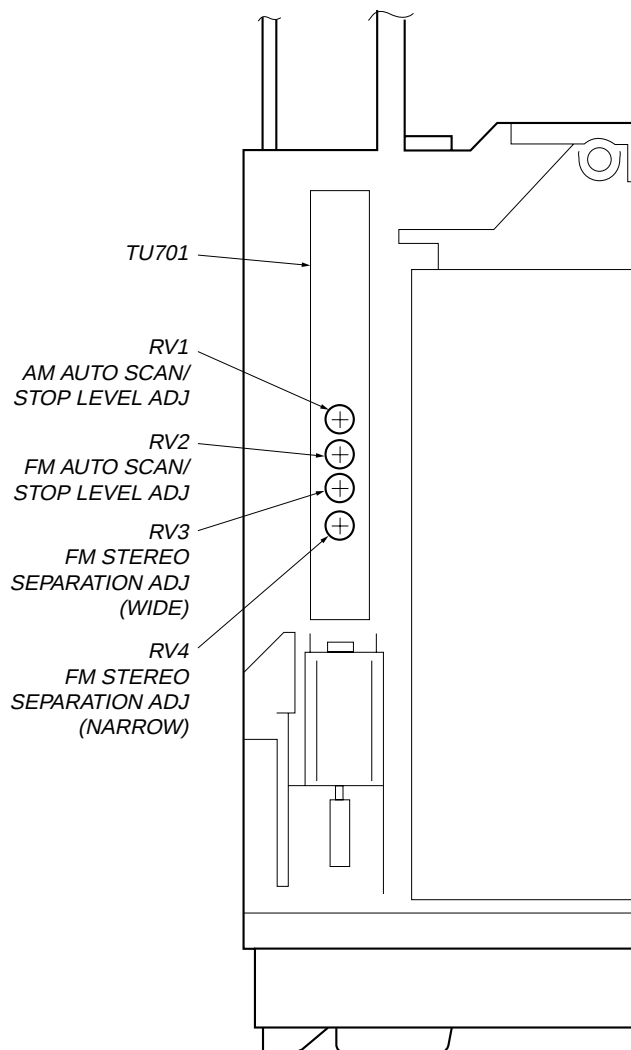

## SECTION 4 DIAGRAMS

### 4-1. IC PIN DESCRIPTIONS

#### • IC5 CXP84640-011Q (CD SYSTEM CONTROL)

| Pin No. | Pin Name             | I/O | Pin Description                                   |
|---------|----------------------|-----|---------------------------------------------------|
| 1 – 5   | NCO                  | —   | Not used in this set.                             |
| 6       | FP OPEN              | I   | Front panel open detection input                  |
| 7       | FP CLOSE             | O   | Front panel close control output                  |
| 8       | LINKOFF              | I   | Bus interface link input (Not used in this set.)  |
| 9       | DRV OE               | O   | Focus/tracking coil/sled motor control output     |
| 10      | $\overline{D} SW$    | I   | Down switch input (SW4)                           |
| 11 – 13 | NCO                  | —   | Not used in this set.                             |
| 14      | LM EJ                | O   | Loading motor control output                      |
| 15      | LM LOD               | O   | Loading motor control output                      |
| 16      | EMPH O               | O   | De-emphasis ON/OFF control output                 |
| 17      | $\overline{CDMON}$   | O   | CD mechanism deck power control output            |
| 18      | $\overline{CD ON}$   | O   | CD power control output                           |
| 19      | A MUT                | O   | System attenuate control output                   |
| 20      | $\overline{LD ON}$   | O   | Lazer power ON/OFF control output                 |
| 21      | $\overline{CD RST}$  | O   | CD system reset output                            |
| 22 – 24 | —                    | —   | Not used in this set.                             |
| 25      | PH3                  | I   | Not used in this set.                             |
| 26      | TSTIN0               | I   | Not used in this set.                             |
| 27      | TSTIN1               | I   | Not used in this set.                             |
| 28      | $\overline{TST CLV}$ | I   | Not used in this set.                             |
| 29      | NCO                  | —   | Not used in this set.                             |
| 30      | $\overline{RESET}$   | I   | System reset input (“L” = Reset)                  |
| 31      | $\overline{X IN}$    | I   | X’tal oscillator input of system clock. (10 MHz)  |
| 32      | $\overline{X OUT}$   | O   | X’tal oscillator output of system clock. (10 MHz) |
| 33      | GND                  | —   | Analog GND                                        |
| 34      | $\overline{XT OUT}$  | O   | Not used in this set.                             |
| 35      | $\overline{XT IN}$   | I   | Not used in this set.                             |
| 36      | AVSS                 | —   | A/D converter GND                                 |
| 37      | AVREF                | I   | A/D converter reference voltage input             |
| 38      | TEP L                | I   | Not used in this set.                             |
| 39      | TEP H                | I   | Not used in this set.                             |
| 40      | NCO                  | —   | Not used in this set.                             |
| 41      | PH2                  | I   | Not used in this set.                             |
| 42      | SCLK                 | O   | CD-TEXT data read clock output                    |
| 43      | $\overline{ESPXQOK}$ | O   | XQOK signal output to DRAM controller.            |
| 44      | ESPSDT               | I   | Serial data input from DRAM controller.           |
| 45      | $\overline{GRSRST}$  | O   | Reaet signal output to DRAM controller.           |
| 46      | GRSCOR               | I   | Sub-cord sync input from DRAM controller.         |
| 47      | CD XLAT              | O   | CD signal process serial latch output             |
| 48      | TX CLK               | O   | EEPROM serial clock output                        |
| 49      | TX DATA              | O   | EEPROM serial data output                         |
| 50      | UNISO                | O   | Not used in this set.                             |
| 51      | BUS CLK              | I/O | Bus system serial clock input/output              |
| 52      | BUS SI               | I   | Bus system serial interface input                 |
| 53      | BUS SO               | O   | Bus system serial interface output                |
| 54      | F OK                 | I   | Focus OK signal input                             |
| 55      | GFS                  | I   | GFS signal detection input                        |
| 56      | SCOR                 | O   | Sub-cord sync output                              |
| 57      | SENS                 | I   | SENS signal input                                 |
| 58      | —                    | I   | Fixed at “H” in this set.                         |
| 59      | CD CKO               | O   | CD signal process serial clock output             |

| Pin No. | Pin Name                    | I/O | Pin Description                                    |
|---------|-----------------------------|-----|----------------------------------------------------|
| 60      | BU.IN                       | I   | Back-up power detection input                      |
| 61      | $\overline{\text{BUSON}}$   | I   | Bus on control input                               |
| 62      | $\overline{\text{IN SW}}$   | I   | Disc in switch input (SW1)                         |
| 63      | $\overline{\text{SELF SW}}$ | I   | Self switch input (SW2)                            |
| 64      | $\overline{\text{TX CE}}$   | O   | EEPROM chip enable output                          |
| 65      | SCK2                        | O   | Sub Q read clock output                            |
| 66      | SI2                         | I   | Sub Q 80 bit, PCM peak and level data 16 bit input |
| 67      | CD DATA                     | O   | CD signal process serial data output               |
| 68      | $\overline{\text{ESPXWRE}}$ | O   | Write signal output to DRAM controller.            |
| 69      | $\overline{\text{ESPXRDE}}$ | O   | Read signal output to DRAM controller.             |
| 70      | $\overline{\text{ESPXLT}}$  | O   | Serial data latch output to DRAM controller.       |
| 71      | $\overline{\text{ESPXSOE}}$ | O   | XSOE signal output to DRAM controller.             |
| 72      | VDD                         | —   | Power supply                                       |
| 73      | HIN                         | I   | Fixed at “H” in this set.                          |
| 74      | TEXT.ON/OFF                 | I   | Fixed at “H” in this set.                          |
| 75      | PH1                         | I   | Not used in this set.                              |
| 76      | FBTBSSEL                    | I   | Not used in this set.                              |
| 77      | $\overline{\text{CDOSEL}}$  | I   | Not used in this set.                              |
| 78 – 80 | —                           | —   | Not used in this set.                              |

• IC501 CXD2548R (DIGITAL SERVO, DIGITAL SIGNAL PROCESSOR)

| Pin No. | Pin Name | I/O | Pin Description                                               |
|---------|----------|-----|---------------------------------------------------------------|
| 1       | SYSM     | I   | System mute input (Not used.)                                 |
| 2       | RMUT1    | O   | R-ch, “0” detection output. (“H” : ON, “L” : OFF) (Not used.) |
| 3       | LMUT2    | O   | L-ch, “0” detection output. (“H” : ON, “L” : OFF) (Not used.) |
| 4       | CKOUT    | O   | Master clock frequency division output (Not used.)            |
| 5       | VDD0     | —   | Digital power supply                                          |
| 6       | SBSO     | O   | Serial output of sub-P to W.                                  |
| 7       | EXCK     | I   | Clock input for SBSO read output.                             |
| 8       | SQCK     | I   | Clock input for SQSO read output.                             |
| 9       | SQSO     | O   | SubQ 80 bit, PCM peak and level data 16 bit output.           |
| 10      | SENS     | O   | SENS output. Output to CPU.                                   |
| 11      | SCLK     | I   | Clock input for SENS real data read.                          |
| 12      | DATA     | I   | Serial data input from CPU.                                   |
| 13      | XLAT     | I   | Latch input from CPU. Latch serial data at the falling edge.  |
| 14      | CLOK     | I   | Serial data transfer clock input from CPU.                    |
| 15      | XRST     | I   | System reset (“L” : Reset)                                    |
| 16      | ACDT     | O   | Not used.                                                     |
| 17      | PWM1     | I   | External control input of spindle motor.                      |
| 18      | XLON     | O   | Microcomputer extension interface (Output) (Not used.)        |
| 19      | SPOA     | I   | Microcomputer extension interface (Input A) (Not used.)       |
| 20      | WFCK     | O   | WFCK (Write Flame Clock) output                               |
| 21      | GTOP     | O   | GTOP output                                                   |
| 22      | XUGF     | O   | XUGF output (Not used.)                                       |
| 23      | XPCK     | O   | XPLCK output (Not used.)                                      |
| 24      | GFS      | O   | GFS output                                                    |
| 25      | RFCK     | O   | RFCK output                                                   |
| 26      | C2PO     | O   | C2PO output (Not used.)                                       |
| 27      | XROF     | O   | XROF output                                                   |
| 28      | SCOR     | O   | “H” output at either detection, sub code sync S0 or S1.       |
| 29      | MNT0     | O   | MNT0 output (Not used.)                                       |
| 30      | MNT1     | O   | MNT1 output (Not used.)                                       |
| 31      | MNT3     | O   | MNT3 output (Not used.)                                       |
| 32      | VSS1     | —   | Digital GND                                                   |
| 33      | DOUT     | O   | Digital-Out output                                            |
| 34      | ATSK     | I   | For anti-shock.                                               |
| 35      | MIRR     | O   | Mirror signal output (Not used.)                              |
| 36      | DFCT     | O   | Diffect signal output (Not used.)                             |
| 37      | FOK      | O   | Focus OK signal output                                        |
| 38      | VDD1     | —   | Digital power supply                                          |
| 39      | VPCO1    | O   | Charge pump output for wideband EFM PLL.                      |
| 40      | VPCO2    | O   | VCO2 charge pump output for wideband EFM PLL.                 |
| 41      | VCK.I    | I   | VCO2 oscillator input for wideband EFM PLL.                   |
| 42      | V16M     | O   | VCO2 oscillator output for wideband EFM PLL.                  |
| 43      | VCTL     | I   | VCO2 control input for wideband EFM PLL.                      |
| 44      | PCO      | O   | Charge pump output for master PLL.                            |
| 45      | FILO     | O   | Filter output for master PLL (Slave = digital PLL).           |
| 46      | FILI     | I   | Filter input for master PLL.                                  |
| 47      | AVSS4    | —   | Analog GND                                                    |
| 48      | CLTV     | I   | VCO control voltage input for master.                         |
| 49      | AVDD4    | —   | Analog power supply                                           |
| 50      | RFAC     | I   | EFM signal input                                              |
| 51      | BIAS     | I   | Asymmetry circuit constant current input                      |
| 52      | ASY.I    | I   | Asymmetry compare voltage input                               |

| Pin No. | Pin Name | I/O | Pin Description                                                |
|---------|----------|-----|----------------------------------------------------------------|
| 53      | ASY.O    | O   | EFM full-swing output (“L” : VSS, “H” : VDD)                   |
| 54      | VC       | I   | Center voltage input                                           |
| 55      | FE       | I   | Focus error signal input                                       |
| 56      | SE       | I   | Sled error signal input                                        |
| 57      | TE       | I   | Tracking error signal input                                    |
| 58      | CE       | I   | Center error signal input                                      |
| 59      | RFDC     | I   | RF signal input                                                |
| 60      | RFC      | I   | Condenser connection pin for LPF time constant of RF signal.   |
| 61      | ADIO     | O   | OP amplifier output (Not used.)                                |
| 62      | AVSS3    | —   | Analog GND                                                     |
| 63      | IGEN     | I   | Current source reference resistor connection for OP amplifier. |
| 64      | AVDD3    | —   | Analog power supply                                            |
| 65, 66  | TES2, 3  | I   | TEST pin (Fixed at “L”.)                                       |
| 67      | VSS2     | —   | Digital GND                                                    |
| 68      | TEST     | I   | TEST pin (Fixed at “L”.)                                       |
| 69      | SFDR     | O   | Sled drive output                                              |
| 70      | SRDR     | O   | Sled drive output                                              |
| 71      | TFDR     | O   | Tracking drive output                                          |
| 72      | TRDR     | O   | Tracking drive output                                          |
| 73      | FFDR     | O   | Focus drive output                                             |
| 74      | FRDR     | O   | Focus drive output                                             |
| 75      | VDD2     | —   | Digital power supply                                           |
| 76      | COUT     | O   | Track number count signal output (Not used.)                   |
| 77      | LOCK     | O   | Not used.                                                      |
| 78      | MDS      | O   | Servo control output of spindle motor. (Not used.)             |
| 79      | MDP      | O   | Servo control output of spindle motor.                         |
| 80      | SSTP     | I   | Disc most inner track detection signal input                   |
| 81      | FSTO     | O   | 2/3 frequency division output of pins 103 and 104.             |
| 82      | FSTI     | I   | Reference clock input for digital servo.                       |
| 83      | XTSL     | I   | X’tal select input (“L” : 16.9344 MHz)                         |
| 84      | C4M      | O   | 4.2336 MHz output                                              |
| 85      | WDCK     | O   | D/A interface. Word clock $f = 2F_s$                           |
| 86      | VDD3     | —   | Digital power supply                                           |
| 87      | LRCK     | O   | D/A interface. LR clock $f = F_s$                              |
| 88      | LRCKI    | I   | LR clock input to DAC. (48 bit slot) (Not used.)               |
| 89      | PCMD     | O   | D/A interface. Serial data (2’s COMP, MSB first)               |
| 90      | PCMDI    | I   | Audio data input to DAC. (48 bit slot) (Not used.)             |
| 91      | BCK      | O   | D/A interface. Bit clock                                       |
| 92      | BCKI     | I   | Bit clock input to DAC. (48 bit slot) (Not used.)              |
| 93      | EMPH     | O   | Not used.                                                      |
| 94      | EMPHI    | I   | De-emphasis ON/OFF of DAC. (“H” : ON, “L” : OFF) (Not used.)   |
| 95      | VSS3     | —   | Digital GND                                                    |
| 96      | AVSS1    | —   | L-ch, Analog GND.                                              |
| 97      | AVDD1    | —   | L-ch, Analog power supply.                                     |
| 98      | AOUT1    | O   | L-ch, Analog output. (Not used.)                               |
| 99      | AIN1     | I   | L-ch, OP amplifier input. (Not used.)                          |
| 100     | LOUT1    | O   | L-ch, LINE output. (Not used.)                                 |
| 101     | AVSS1    | —   | L-ch, Analog GND.                                              |
| 102     | XVDD     | —   | Analog power supply for master clock.                          |
| 103     | XTAI     | I   | X’tal oscillator input of master clock (16.9344 MHz).          |
| 104     | XTAO     | O   | X’tal oscillator output of master clock. (Not used.)           |
| 105     | XVSS     | —   | Analog GND for master clock.                                   |
| 106     | AVSS2    | —   | R-ch, Analog GND.                                              |

| Pin No. | Pin Name | I/O | Pin Description                       |
|---------|----------|-----|---------------------------------------|
| 107     | ROUT2    | O   | R-ch, LINE output. (Not used.)        |
| 108     | AIN2     | I   | R-ch, OP amplifier input. (Not used.) |
| 109     | AOUT2    | O   | R-ch, Analog output. (Not used.)      |
| 110     | AVDD2    | —   | R-ch, Analog power supply.            |
| 111     | AVSS2    | —   | R-ch, Analog GND.                     |
| 112     | VSS0     | —   | Digital GND                           |

• IC300 MB90F574PFV-G-139-BND (SYSTEM CONTROL)

| Pin No. | Pin Name                    | I/O | Pin Description                                                   |
|---------|-----------------------------|-----|-------------------------------------------------------------------|
| 1       | TIR WR                      | O   | TIR IC data write output (Not used in this set.)                  |
| 2       | TIR RD                      | O   | TIR IC data read output (Not used in this set.)                   |
| 3       | TIR CE                      | O   | TIR IC data chip enable output (Not used in this set.)            |
| 4       | $\overline{\text{TIR CE}}$  | O   | XTIR IC data chip enable output (Not used in this set.)           |
| 5       | TIR BUSY                    | I   | TIR IC busy input (Not used in this set.)                         |
| 6       | TIR PDOWN                   | O   | TIR IC power down output (Not used in this set.)                  |
| 7       | DIVER                       | O   | FM diversity ON/OFF output (Not used in this set.)                |
| 8       | VCC                         | —   | Power supply pin (+5 V)                                           |
| 9       | AF SEEK                     | O   | AF SEEK output (Not used in this set.)                            |
| 10      | WIDE                        | O   | WIDE/NARROW select output                                         |
| 11      | CAUTION                     | I   | Caution alarm setting (Fixed at “H” in this set.)                 |
| 12      | $\overline{\text{NOSE SW}}$ | I   | Nose detection input                                              |
| 13      | COLOR                       | O   | Color control output (“H”:green, “L”:amber)                       |
| 14      | $\overline{\text{BUSON}}$   | O   | Bus ON control output                                             |
| 15      | BEEP                        | O   | BEEP output                                                       |
| 16      | TIR RES                     | O   | TIR IC reset (Power down) output (Not used in this set.)          |
| 17      | DF LAT                      | O   | Digital filter latch output                                       |
| 18      | DF SO                       | O   | Digital filter serial data output                                 |
| 19      | DF CKO                      | O   | Digital filter clock output                                       |
| 20      | UNISI                       | I   | Serial data input (for UNI LINK)                                  |
| 21      | UNISO                       | O   | Serial data output (for UNI LINK)                                 |
| 22      | UNICK                       | O   | Serial clock output (for UNI LINK)                                |
| 23      | NCO                         | —   | Not used.                                                         |
| 24      | SIRCS                       | I   | Remote commander input                                            |
| 25      | PLLSI                       | I   | PLL data input                                                    |
| 26      | PLLSO                       | O   | PLL data output                                                   |
| 27      | PLLCKO                      | O   | PLL clock output                                                  |
| 28      | PLL CE                      | O   | PLL chip enable output                                            |
| 29      | P MOT+                      | O   | Front panel motor control (+) output                              |
| 30      | P MOT–                      | O   | Front panel motor control (–) output                              |
| 31      | I DET                       | I   | Panel motor lock detection input                                  |
| 32      | POS0                        | I   | Position detection input 0 (Open end)                             |
| 33      | GND                         | —   | GND                                                               |
| 34      | C                           | —   | Power stabilization capacitor pin                                 |
| 35      | POS1                        | I   | Position detection input 1 (Close end)                            |
| 36      | POS2                        | I   | Position detection input 2 (10 DEG.)                              |
| 37      | POS3                        | I   | Position detection input 3 (20 DEG.)                              |
| 38      | DVCC                        | —   | D/A converter VREF input                                          |
| 39      | DVSS                        | —   | GND of D/A converter.                                             |
| 40      | MOTREF                      | O   | Motor reference voltage output                                    |
| 41      | LCDANG                      | O   | LCD view angle adjustment analog output                           |
| 42      | AVCC                        | —   | Analog power supply pin (+5 V)                                    |
| 43      | AVRH                        | —   | A/D converter VREF+ input                                         |
| 44      | AVRL                        | —   | A/D converter VREF– input                                         |
| 45      | AVSS                        | —   | Analog GND                                                        |
| 46      | DSTSEL0                     | I   | Destination select input 0 (Fixed at “H” in this set.)            |
| 47      | H TEMP                      | I   | High templatue detection analog input (Fixed at “H” in this set.) |
| 48      | L TEMP                      | I   | Low templatue detection analog input (Fixed at “H” in this set.)  |
| 49      | MPT                         | I   | Tuner multi-pass input (Not used in this set.)                    |
| 50      | VSM                         | I   | S-Meter voltage detection input                                   |
| 51      | RC IN0                      | I   | Rotary commander input 0                                          |
| 52, 53  | KEYIN0, 1                   | I   | Key input 0, 1                                                    |

| Pin No. | Pin Name                   | I/O | Pin Description                                               |
|---------|----------------------------|-----|---------------------------------------------------------------|
| 54      | VCC                        | —   | Power supply pin (+5 V)                                       |
| 55      | RAMBU                      | I   | RAM reset detection input                                     |
| 56      | $\overline{\text{TESTIN}}$ | I   | Test mode setting detection input                             |
| 57      | $\overline{\text{AD ON}}$  | O   | Power control output of A/D conversion.                       |
| 58, 59  | RE IN0, 1                  | I   | Rotary encoder input 0, 1                                     |
| 60      | $\overline{\text{BOOT}}$   | I   | Compulsory boot mode input                                    |
| 61      | DIMMER                     | O   | Dimmer control output                                         |
| 62      | TIR IND                    | O   | TIR indicator control output (Not used in this set.)          |
| 63      | GND                        | —   | GND                                                           |
| 64      | $\overline{\text{SYSRST}}$ | O   | System reset output                                           |
| 65, 66  | NCO                        | —   | Not used.                                                     |
| 67      | EEDATA                     | I/O | EEPROM serial data input/output                               |
| 68      | EECLK                      | O   | EEPROM serial clock output                                    |
| 69      | NCO                        | —   | Not used.                                                     |
| 70      | RDSSI                      | I   | RDS serial clock input (Not used in this set.)                |
| 71      | RDCKO                      | I   | RDS serial data input (Not used in this set.)                 |
| 72      | DAVN                       | I   | RDS IC data taking in detection input (Not used in this set.) |
| 73      | X0A                        | —   | Low speed oscillation input (32.768 kHz)                      |
| 74      | X0B                        | —   | Low speed oscillation input (32.768 kHz)                      |
| 75      | RC IN1                     | I   | Rotary commander input                                        |
| 76      | BU IN                      | I   | Back-up power detection input                                 |
| 77      | KEY ACK                    | I   | Key input acknowledge                                         |
| 78      | $\overline{\text{ILLIN}}$  | I   | Illumination line detection input                             |
| 79      | TEL ATT                    | I   | Telephone mute detection input                                |
| 80      | NCO                        | —   | Not used.                                                     |
| 81      | $\overline{\text{ACC IN}}$ | I   | Accessory power detection input                               |
| 82      | EMPH I                     | I   | Emphasis input                                                |
| 83      | FP CLOSE                   | I   | Front panel close detection input                             |
| 84      | FP OPEN                    | O   | Front panel open control output                               |
| 85      | BOOT DP                    | O   | Display controller boot mode control output                   |
| 86      | HSTX                       | —   | Connect to power supply pin.                                  |
| 87      | MD2                        | —   | Connect to GND.                                               |
| 88, 89  | MD0, 1                     | —   | Connect to power supply pin.                                  |
| 90      | $\overline{\text{RESET}}$  | I   | Microcomputer reset input                                     |
| 91      | VSS                        | —   | GND                                                           |
| 92      | X0                         | —   | High speed oscillation input (3.68 MHz)                       |
| 93      | X1                         | —   | High speed oscillation input (3.68 MHz)                       |
| 94      | VCC                        | —   | Power supply pin (+5 V)                                       |
| 95      | TIMPOL                     | O   | Time poling setting (Fixed at “H” in this set.)               |
| 96      | PW ON                      | O   | System power control output                                   |
| 97      | ILL ON                     | O   | Illumination power control output                             |
| 98      | DIRECT                     | O   | Direct volume control output                                  |
| 99      | ATT                        | O   | System mute control output                                    |
| 100     | ANTREM                     | O   | Antenna remote control output                                 |
| 101     | VOLCE0                     | O   | Input selector/tone/sub volume serial chip enable output      |
| 102     | VOLCE1                     | O   | Electric volume serial chip enable output (L-CH)              |
| 103     | VOLCE2                     | O   | Electric volume serial chip enable output (R-CH)              |
| 104     | VOLCKO                     | O   | Volume serial clock output                                    |
| 105     | VOLSO                      | O   | Volume serial data output                                     |
| 106     | ENC+                       | I   | Rotary commander and encoder input (+)                        |
| 107     | ENC-                       | I   | Rotary commander and encoder input (-)                        |
| 108     | FM ON                      | O   | FM ON control output                                          |
| 109     | AM ON                      | O   | AM ON control output                                          |


| Pin No. | Pin Name | I/O | Pin Description                                                      |
|---------|----------|-----|----------------------------------------------------------------------|
| 110     | SEEKOUT  | O   | SEEK OUT output                                                      |
| 111     | AM STIN  | I   | AM stereo input (Not used in this set.)                              |
| 112     | FM STIN  | I/O | Used in conjunction with stereo input/monaural output (FM mode)      |
| 113     | SD IN    | I   | Signal detector input                                                |
| 114     | TU ATT   | O   | Tuner mute output (Not used in this set.)                            |
| 115     | TIR D0   | I/O | TIR IC data 0 input/output (Not used in this set.)                   |
| 116     | TIR D1   | I/O | TIR IC data 1 input/output (Not used in this set.)                   |
| 117     | TIR D2   | I/O | TIR IC data 2 input/output (Not used in this set.)                   |
| 118     | TIR D3   | I/O | TIR IC data 3 input/output (Not used in this set.)                   |
| 119     | VSS      | —   | GND                                                                  |
| 120     | TIRPLAY  | O   | TIR IC play mode audio select control output (Not used in this set.) |

• IC500 HD6413002F16 (DISPLAY CONTROL)


| Pin No. | Pin Name    | I/O | Pin Description                                            |
|---------|-------------|-----|------------------------------------------------------------|
| 1       | VDD         | —   | Power supply pin (+5 V)                                    |
| 2       | SIRCS       | I   | Remote commander input                                     |
| 3       | SIRCS       | I   | Remote commander input                                     |
| 4       | LCD-RST     | O   | LCD controller reset control output                        |
| 5       | ILL ON      | O   | LCD controller power supply control output                 |
| 6       | EL ON       | O   | LCD back light EL power supply control output              |
| 7       | LCD-ST      | O   | LCD controller information start request signal output     |
| 8       | CS-CTL      | O   | SRAM master chip enable control output                     |
| 9       | BOOTI       | I   | Compulsory boot mode input                                 |
| 10      | (RESO)      | O   | Connect to GND.                                            |
| 11      | VSS         | O   | GND                                                        |
| 12      | LCD-SO      | O   | LCD controller serial data output                          |
| 13      | UNI-SO      | O   | BUS interface data output                                  |
| 14      | LCD-RX      | I   | LCD controller serial data input                           |
| 15      | UNI-SI      | I   | BUS interface data input                                   |
| 16      | UNI-CO      | O   | LCD controller serial clock output                         |
| 17      | UNI-CI      | I   | LCD controller serial clock input                          |
| 18 – 21 | D0 – D3     | I/O | External RAM, ROM data bus input/output                    |
| 22      | VSS         | —   | GND                                                        |
| 23 – 34 | D4 – D15    | I/O | External RAM, ROM data bus input/output                    |
| 35      | VDD         | —   | Power supply pin (+5 V)                                    |
| 36 – 43 | A0 – A7     | O   | External RAM, ROM address bus output                       |
| 44      | VSS         | —   | GND                                                        |
| 45 – 56 | A8 – A19    | O   | External RAM, ROM address bus output                       |
| 57      | VSS         | —   | GND                                                        |
| 58      | WAIT        | O   | Not used.                                                  |
| 59      | (P61)       | —   | Not used.                                                  |
| 60      | (P62)       | —   | Not used.                                                  |
| 61      | NC          | —   | Not used.                                                  |
| 62      | STBY        | I   | Hardware standby input (Fixed at “H”).                     |
| 63      | SYSRST      | I   | Reset input                                                |
| 64      | BU-IN       | I   | Back-up power detection input                              |
| 65      | VSS         | —   | GND                                                        |
| 66      | EXTAL       | O   | Oscillation output (14.74 MHz)                             |
| 67      | XTAL        | I   | Oscillation input (14.74 MHz)                              |
| 68      | VDD         | —   | Power supply pin (+5 V)                                    |
| 69      | AS          | —   | Not used.                                                  |
| 70      | RD          | O   | Read signal output                                         |
| 71      | HWR         | O   | High write signal output                                   |
| 72      | LWR         | O   | Low write signal output                                    |
| 73      | MD0         | I   | Microcomputer operation mode input (Fixed at “L”).         |
| 74      | MD1         | I   | Microcomputer operation mode input (Fixed at “L”).         |
| 75      | MD2         | I   | Microcomputer operation mode input (Fixed at “H”).         |
| 76      | AVDD        | I   | A/D converter power supply input                           |
| 77      | VREF        | I   | A/D converter reference voltage input                      |
| 78 – 83 | (AN0 – AN5) | —   | Connect to GND.                                            |
| 84      | BU-IN       | I   | Back-up power detection input                              |
| 85      | PBS         | I   | Parking brake input                                        |
| 86      | AVSS        | —   | A/D converter GND                                          |
| 87      | BUS-ON      | I   | BUS-interface BUS-ON input                                 |
| 88      | SRAM-CS     | O   | SRAM chip enable output                                    |
| 89      | DEC-CS      | O   | Demodulator LSI chip enable output (Not used in this set.) |

| Pin No. | Pin Name                    | I/O | Pin Description                                        |
|---------|-----------------------------|-----|--------------------------------------------------------|
| 90      | $\overline{\text{DEC-INT}}$ | O   | Demodulator LSI initial output (Not used in this set.) |
| 91      | $\overline{\text{ROM-CS}}$  | O   | PROM chip enable output                                |
| 92      | VSS                         | —   | GND                                                    |
| 93      | UNI-REQ                     | O   | Not used.                                              |
| 94      | LINK-OFF                    | O   | BUS interface link output                              |
| 95      | $\overline{\text{DEC-ON}}$  | O   | Not used.                                              |
| 96      | $\overline{\text{DEC-CLR}}$ | O   | Demodulator LSI reset output (Not used in this set.)   |
| 97 – 99 | A21 – A23                   | O   | Not used.                                              |
| 100     | A20                         | O   | External RAM, ROM address bus output                   |


4-2. BLOCK DIAGRAM — CD SECTION —

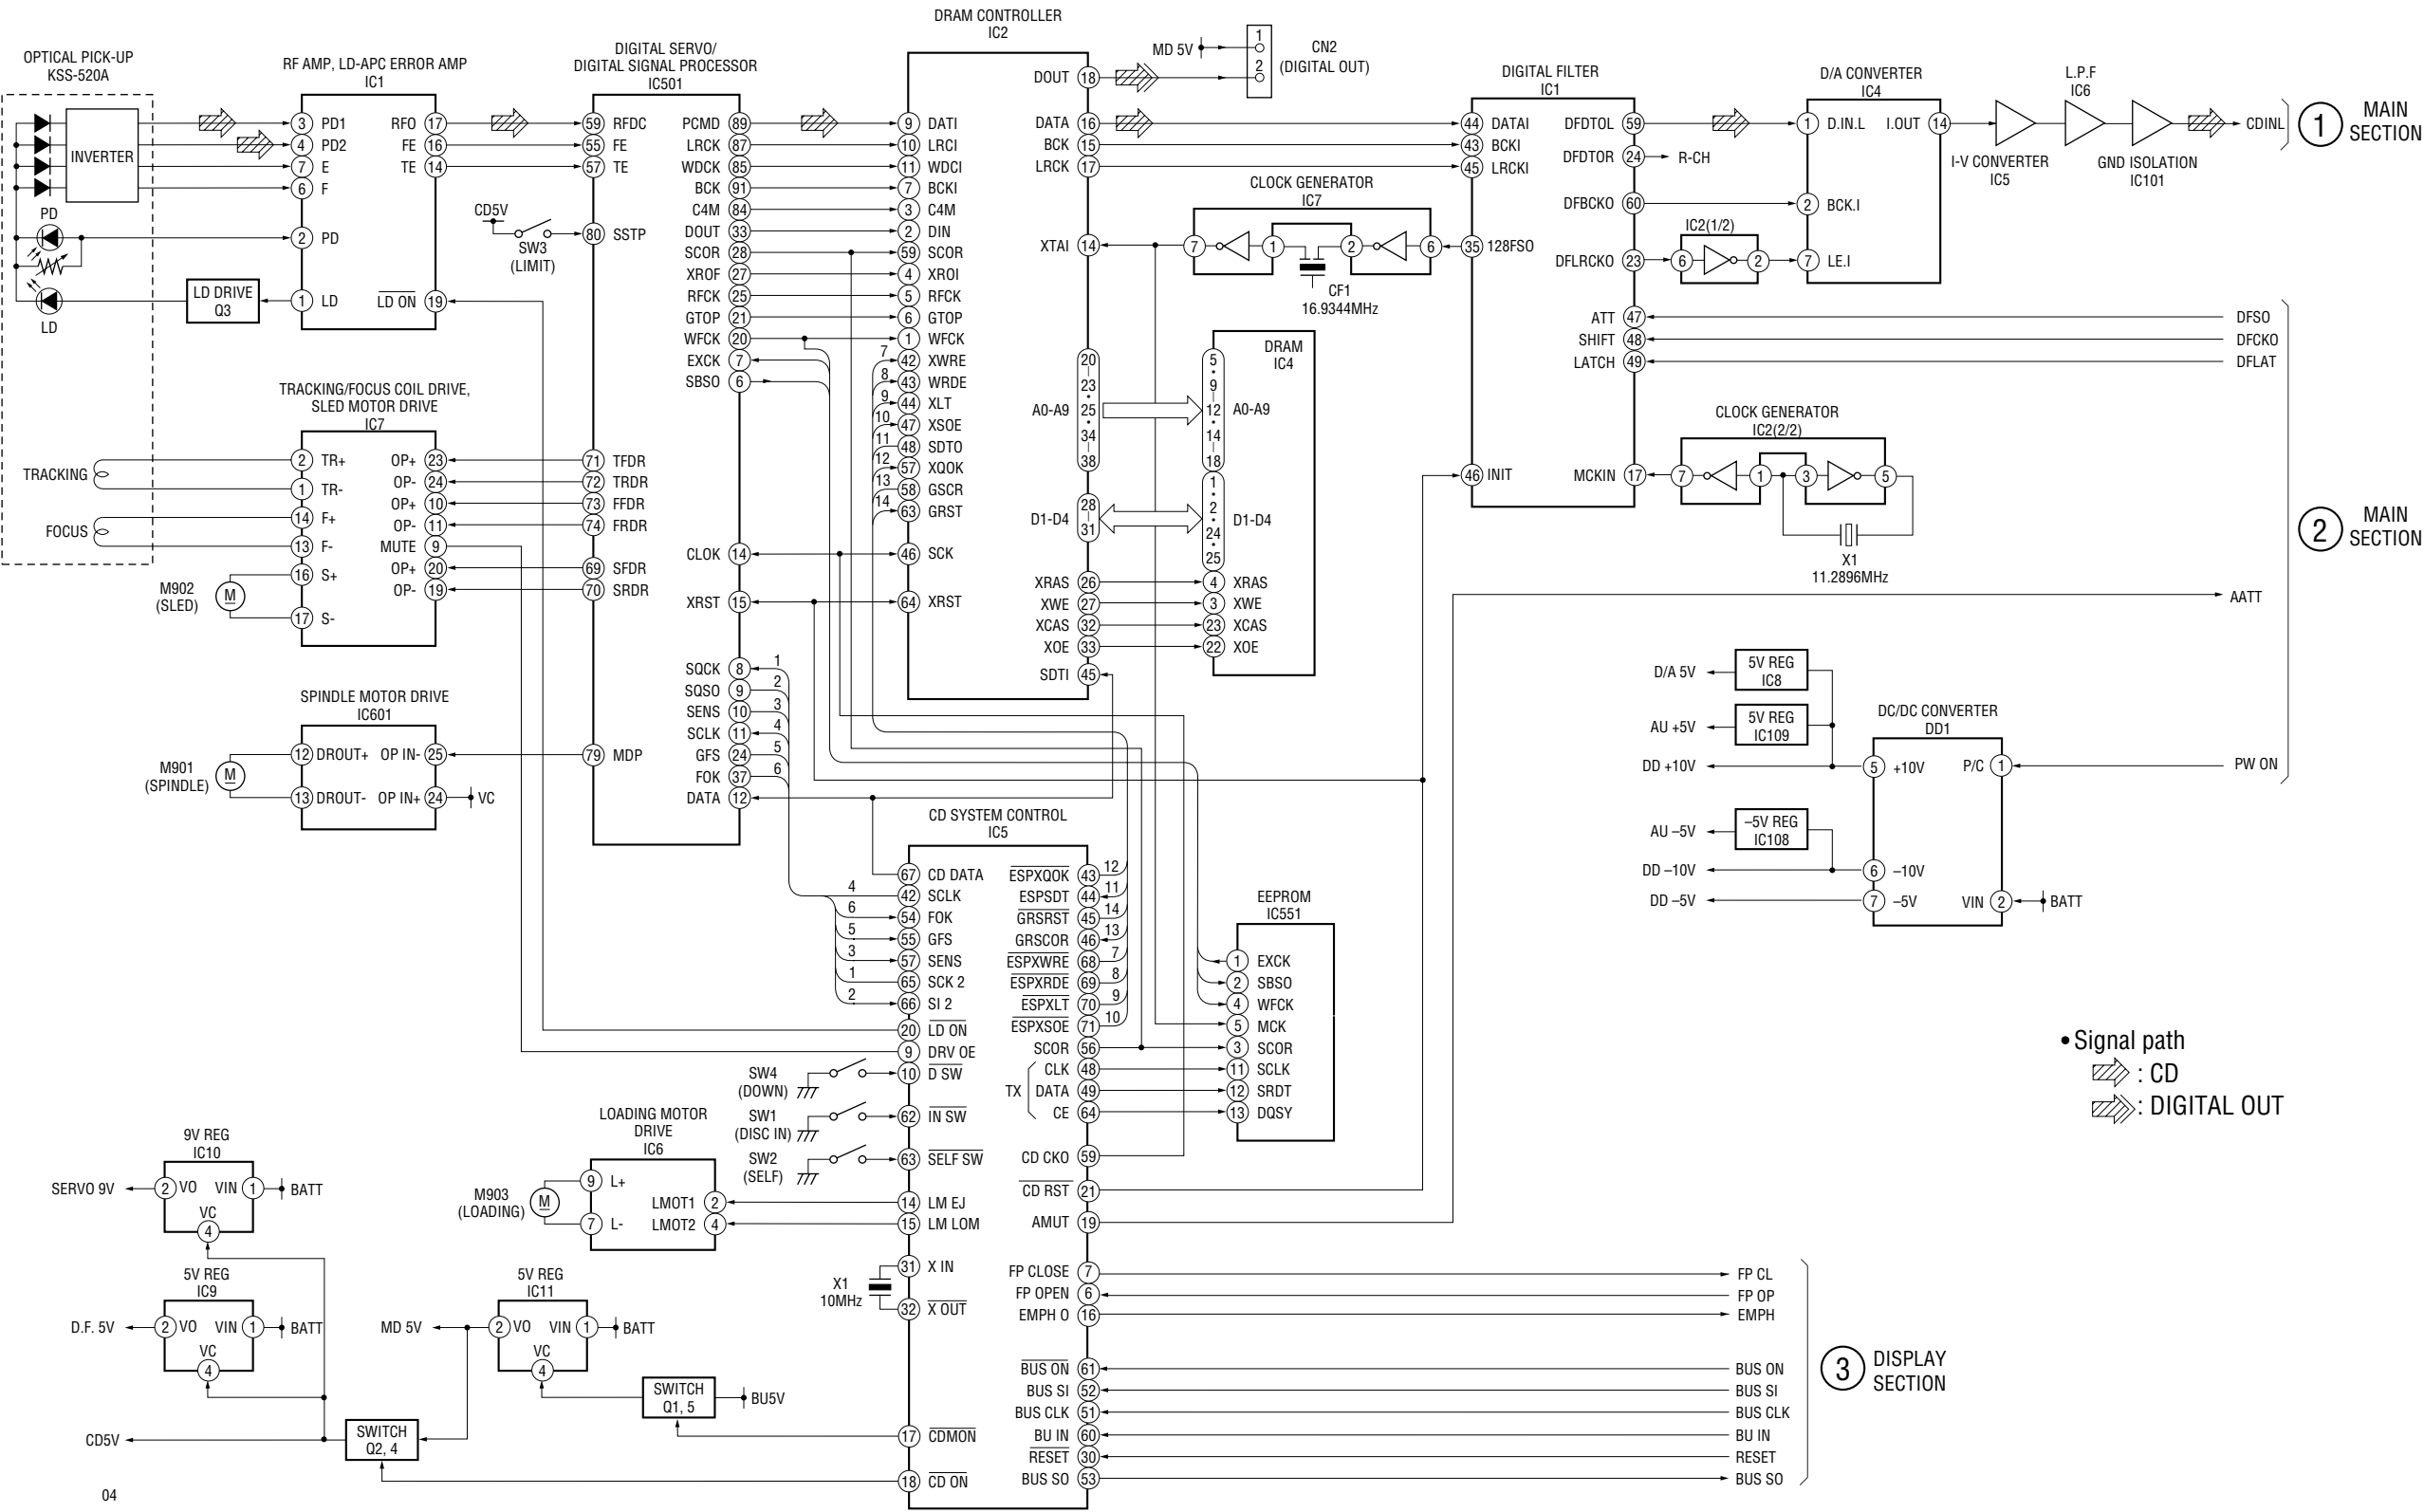


## 4-3. BLOCK DIAGRAM — MAIN SECTION —

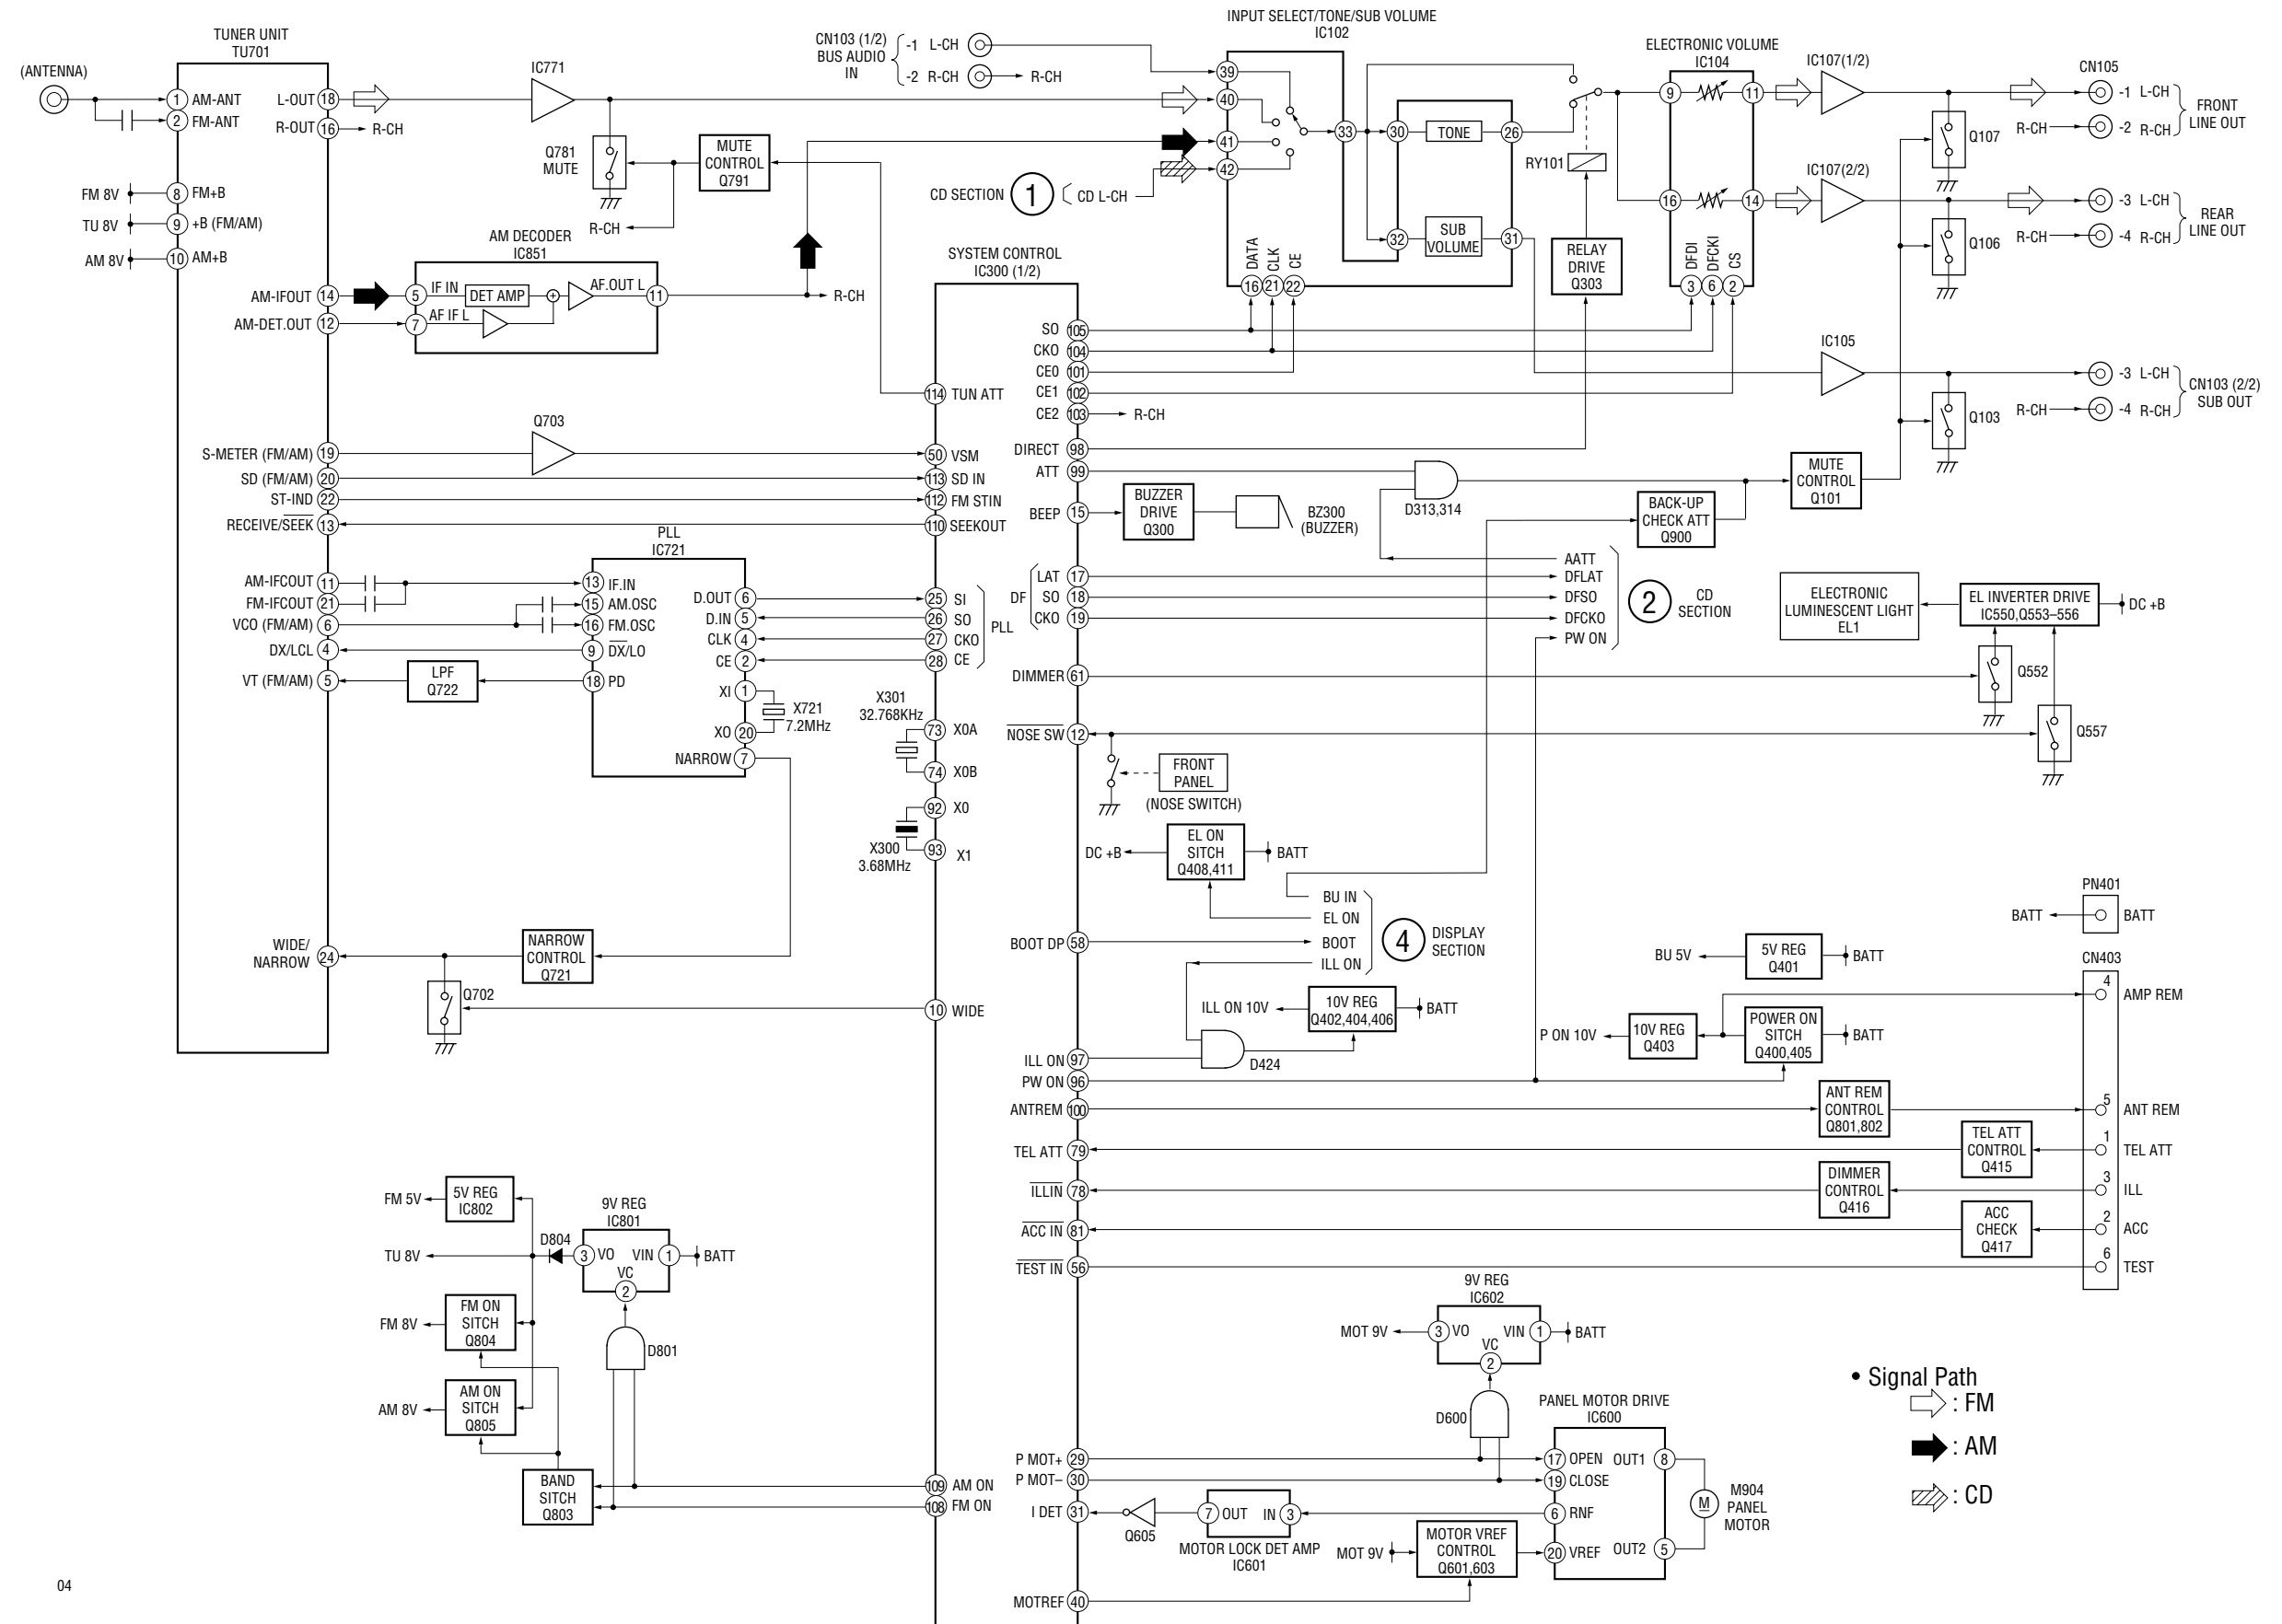

4-4. BLOCK DIAGRAM — DISPLAY SECTION —


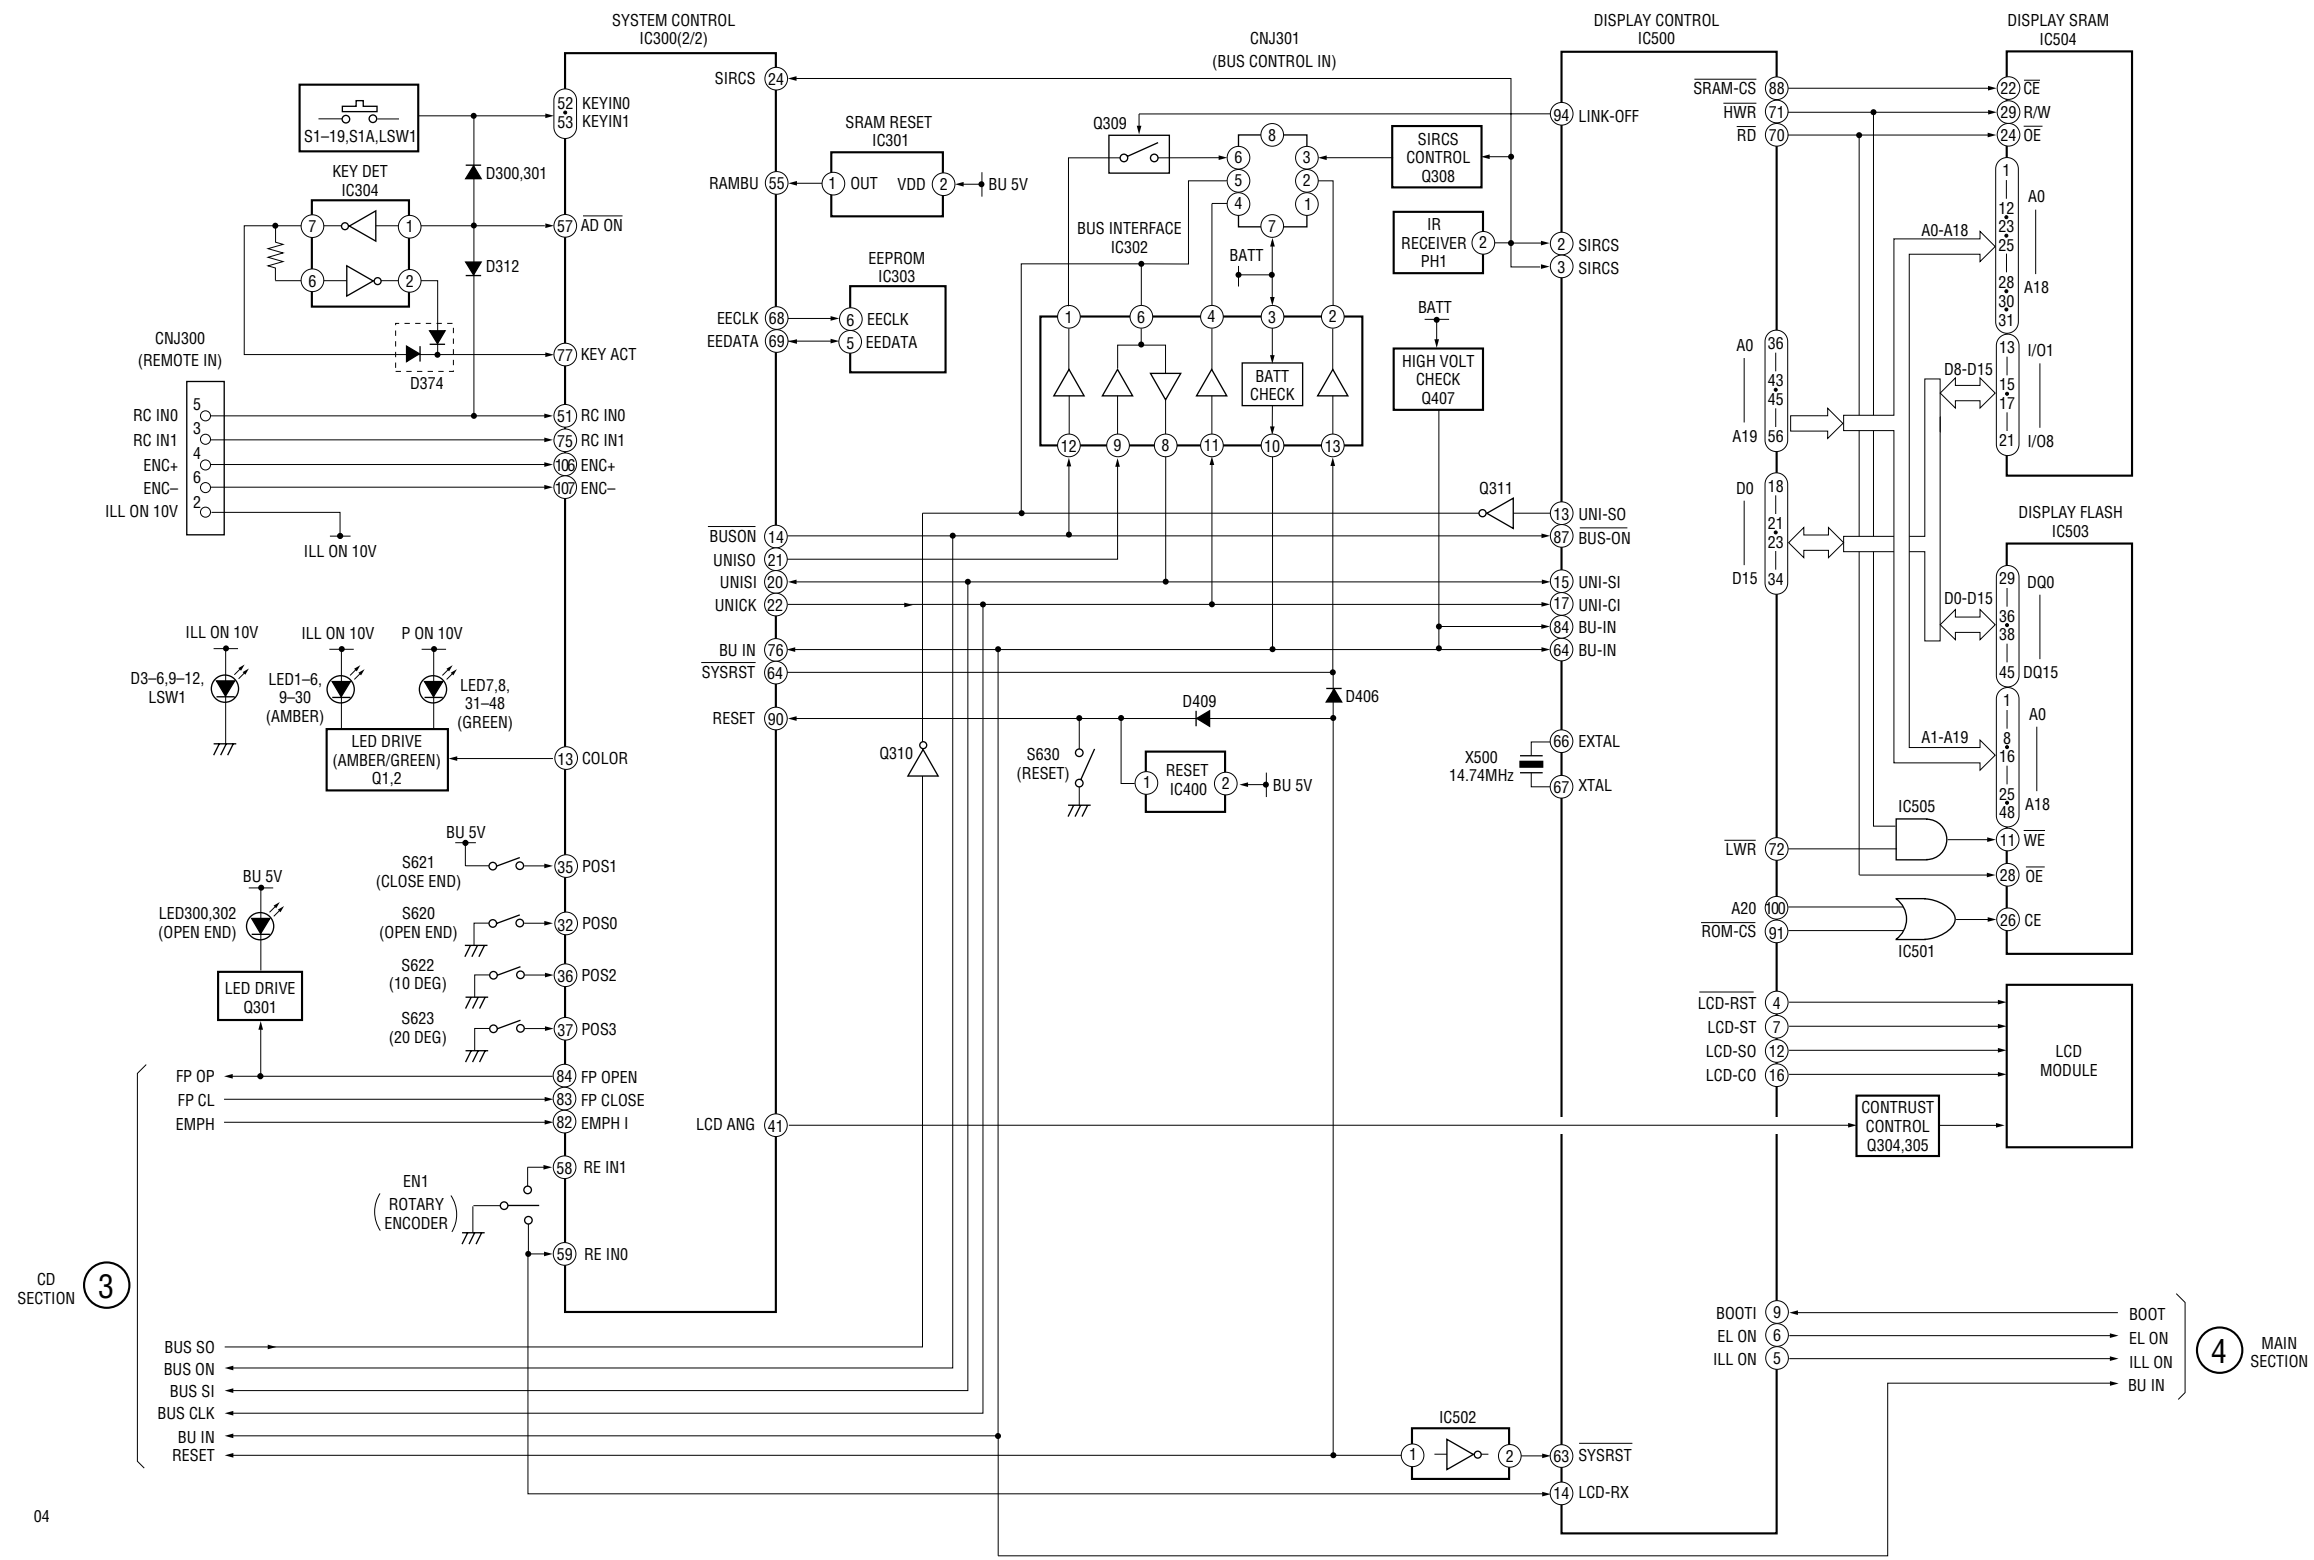


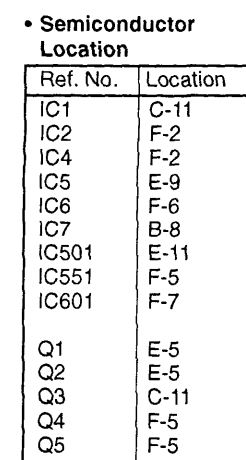


**Note:**

-  : parts extracted from the conductor side.
-  : Through hole.
-  : Pattern from the side which enables seeing.  
(The other layers' patterns are not indicated.)


#### 4-6. PRINTED WIRING BOARDS — CD MECHANISM SECTION —

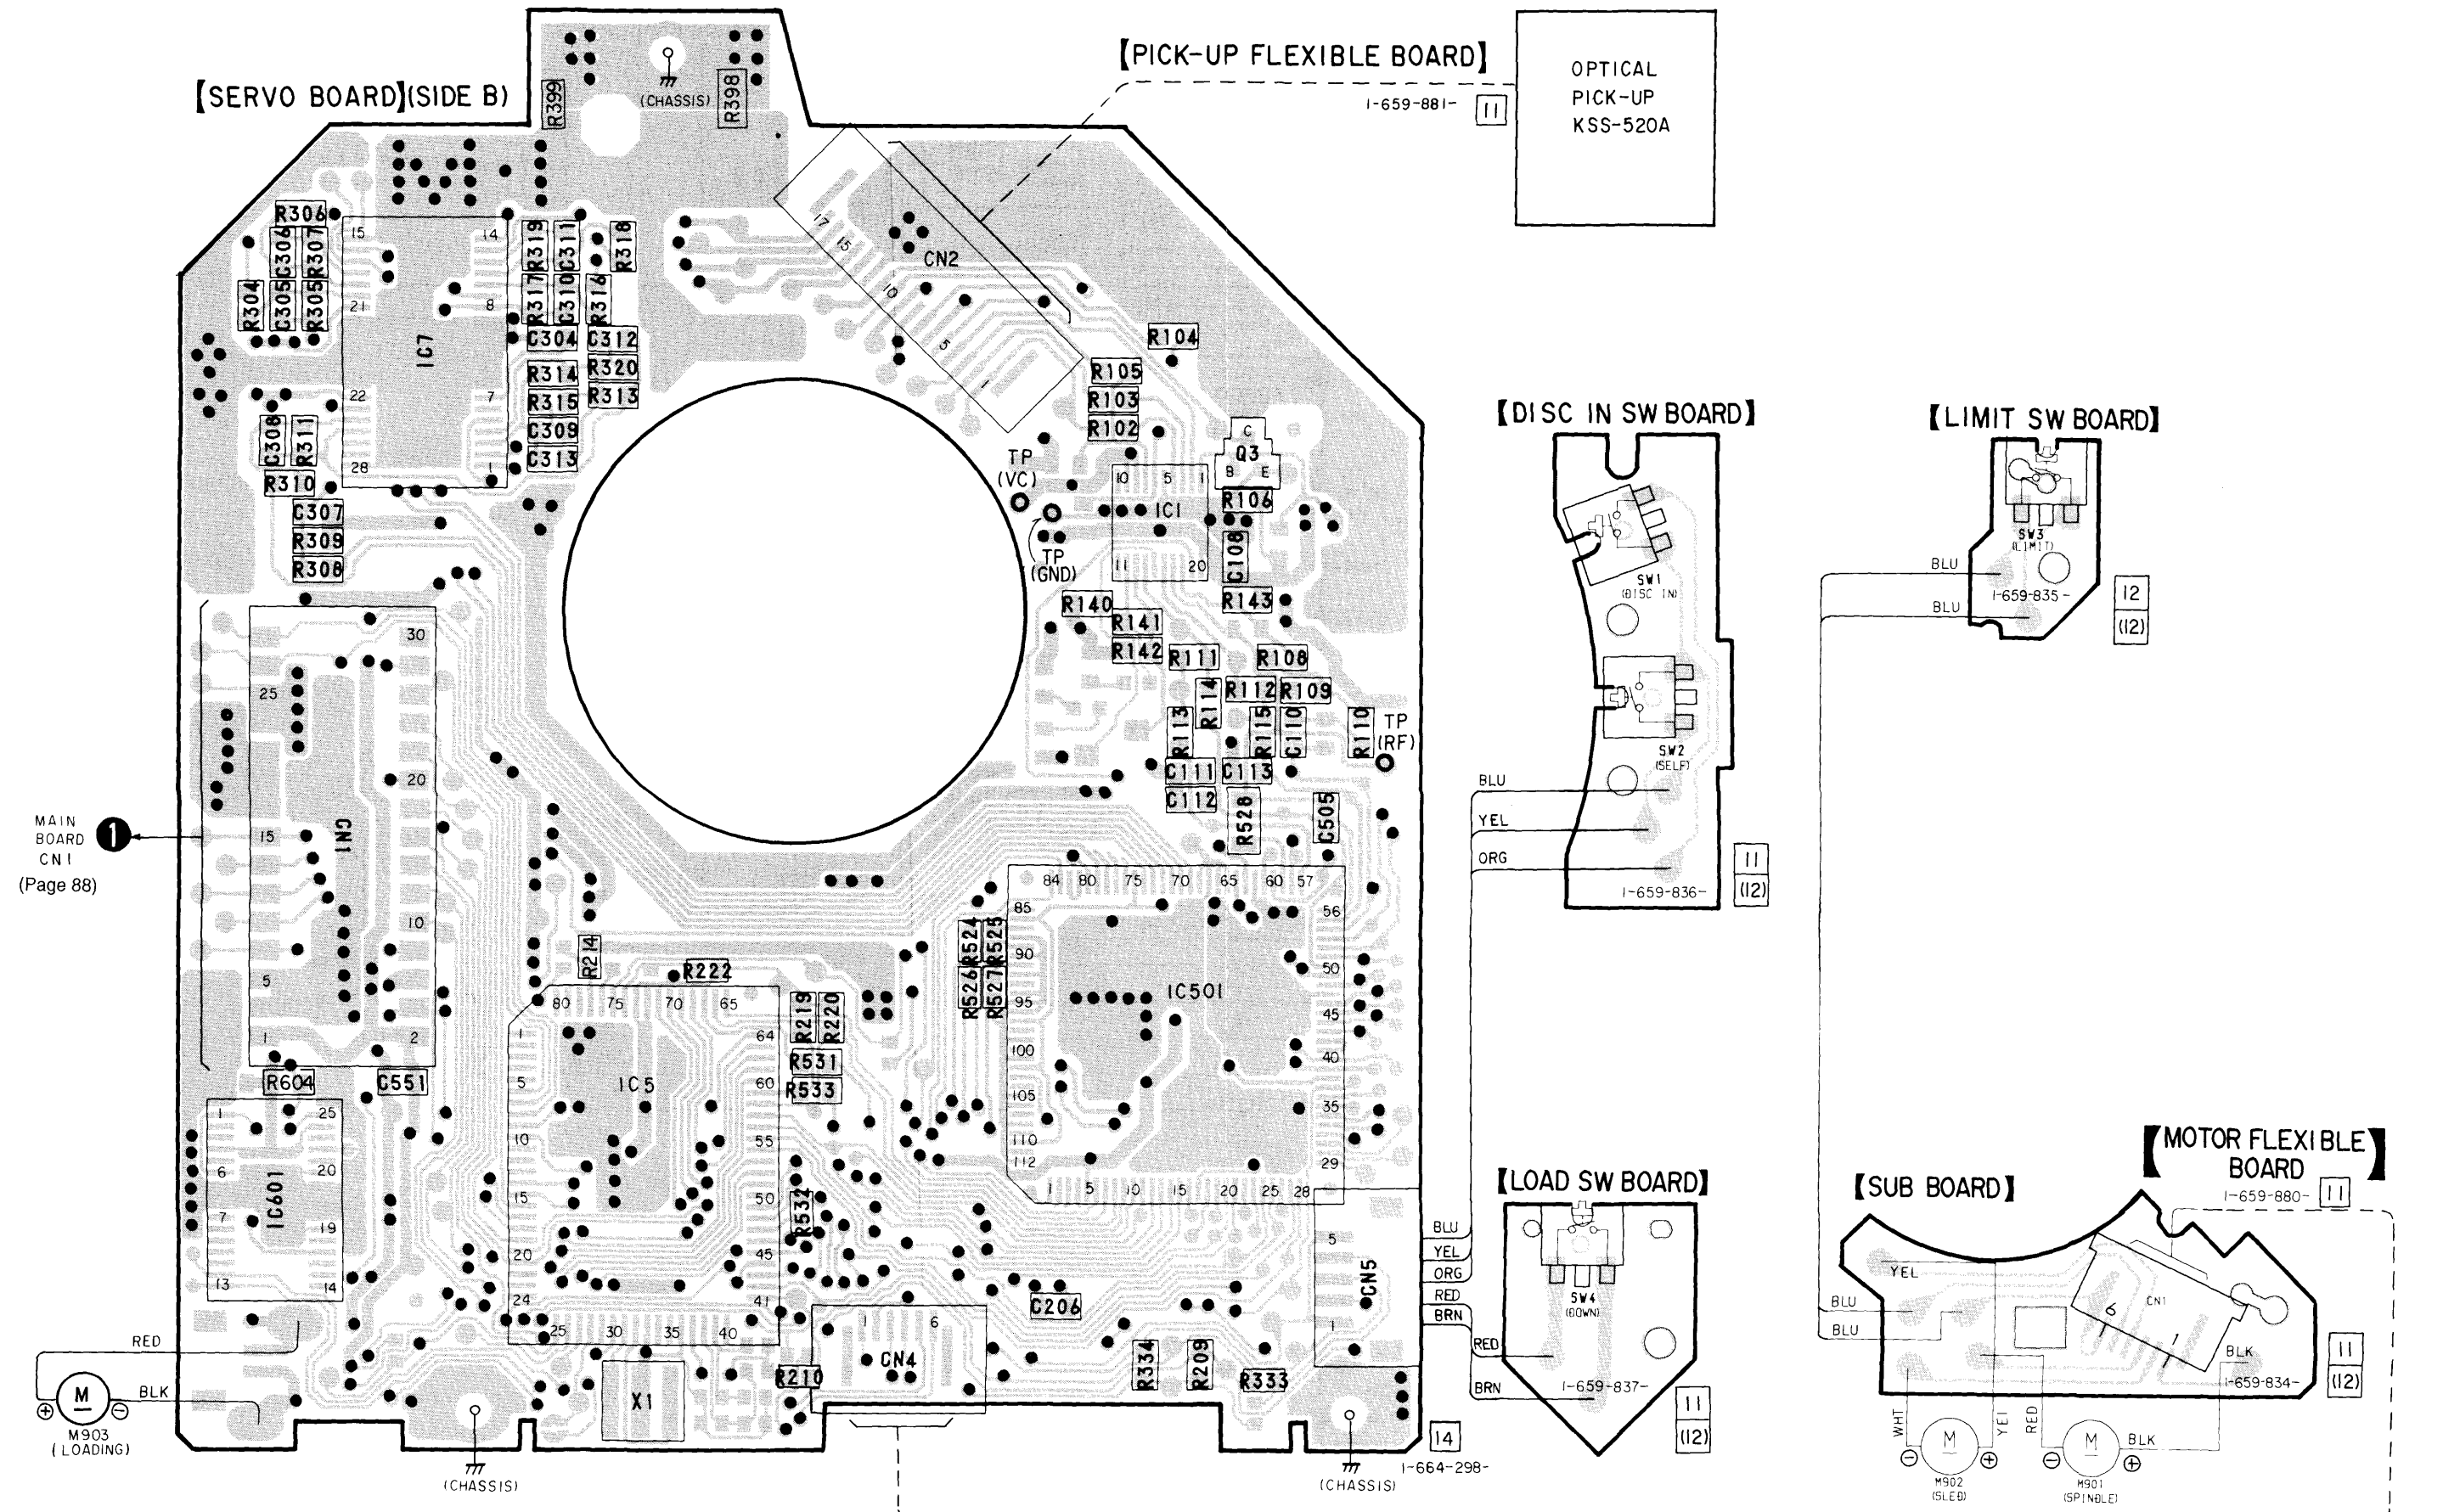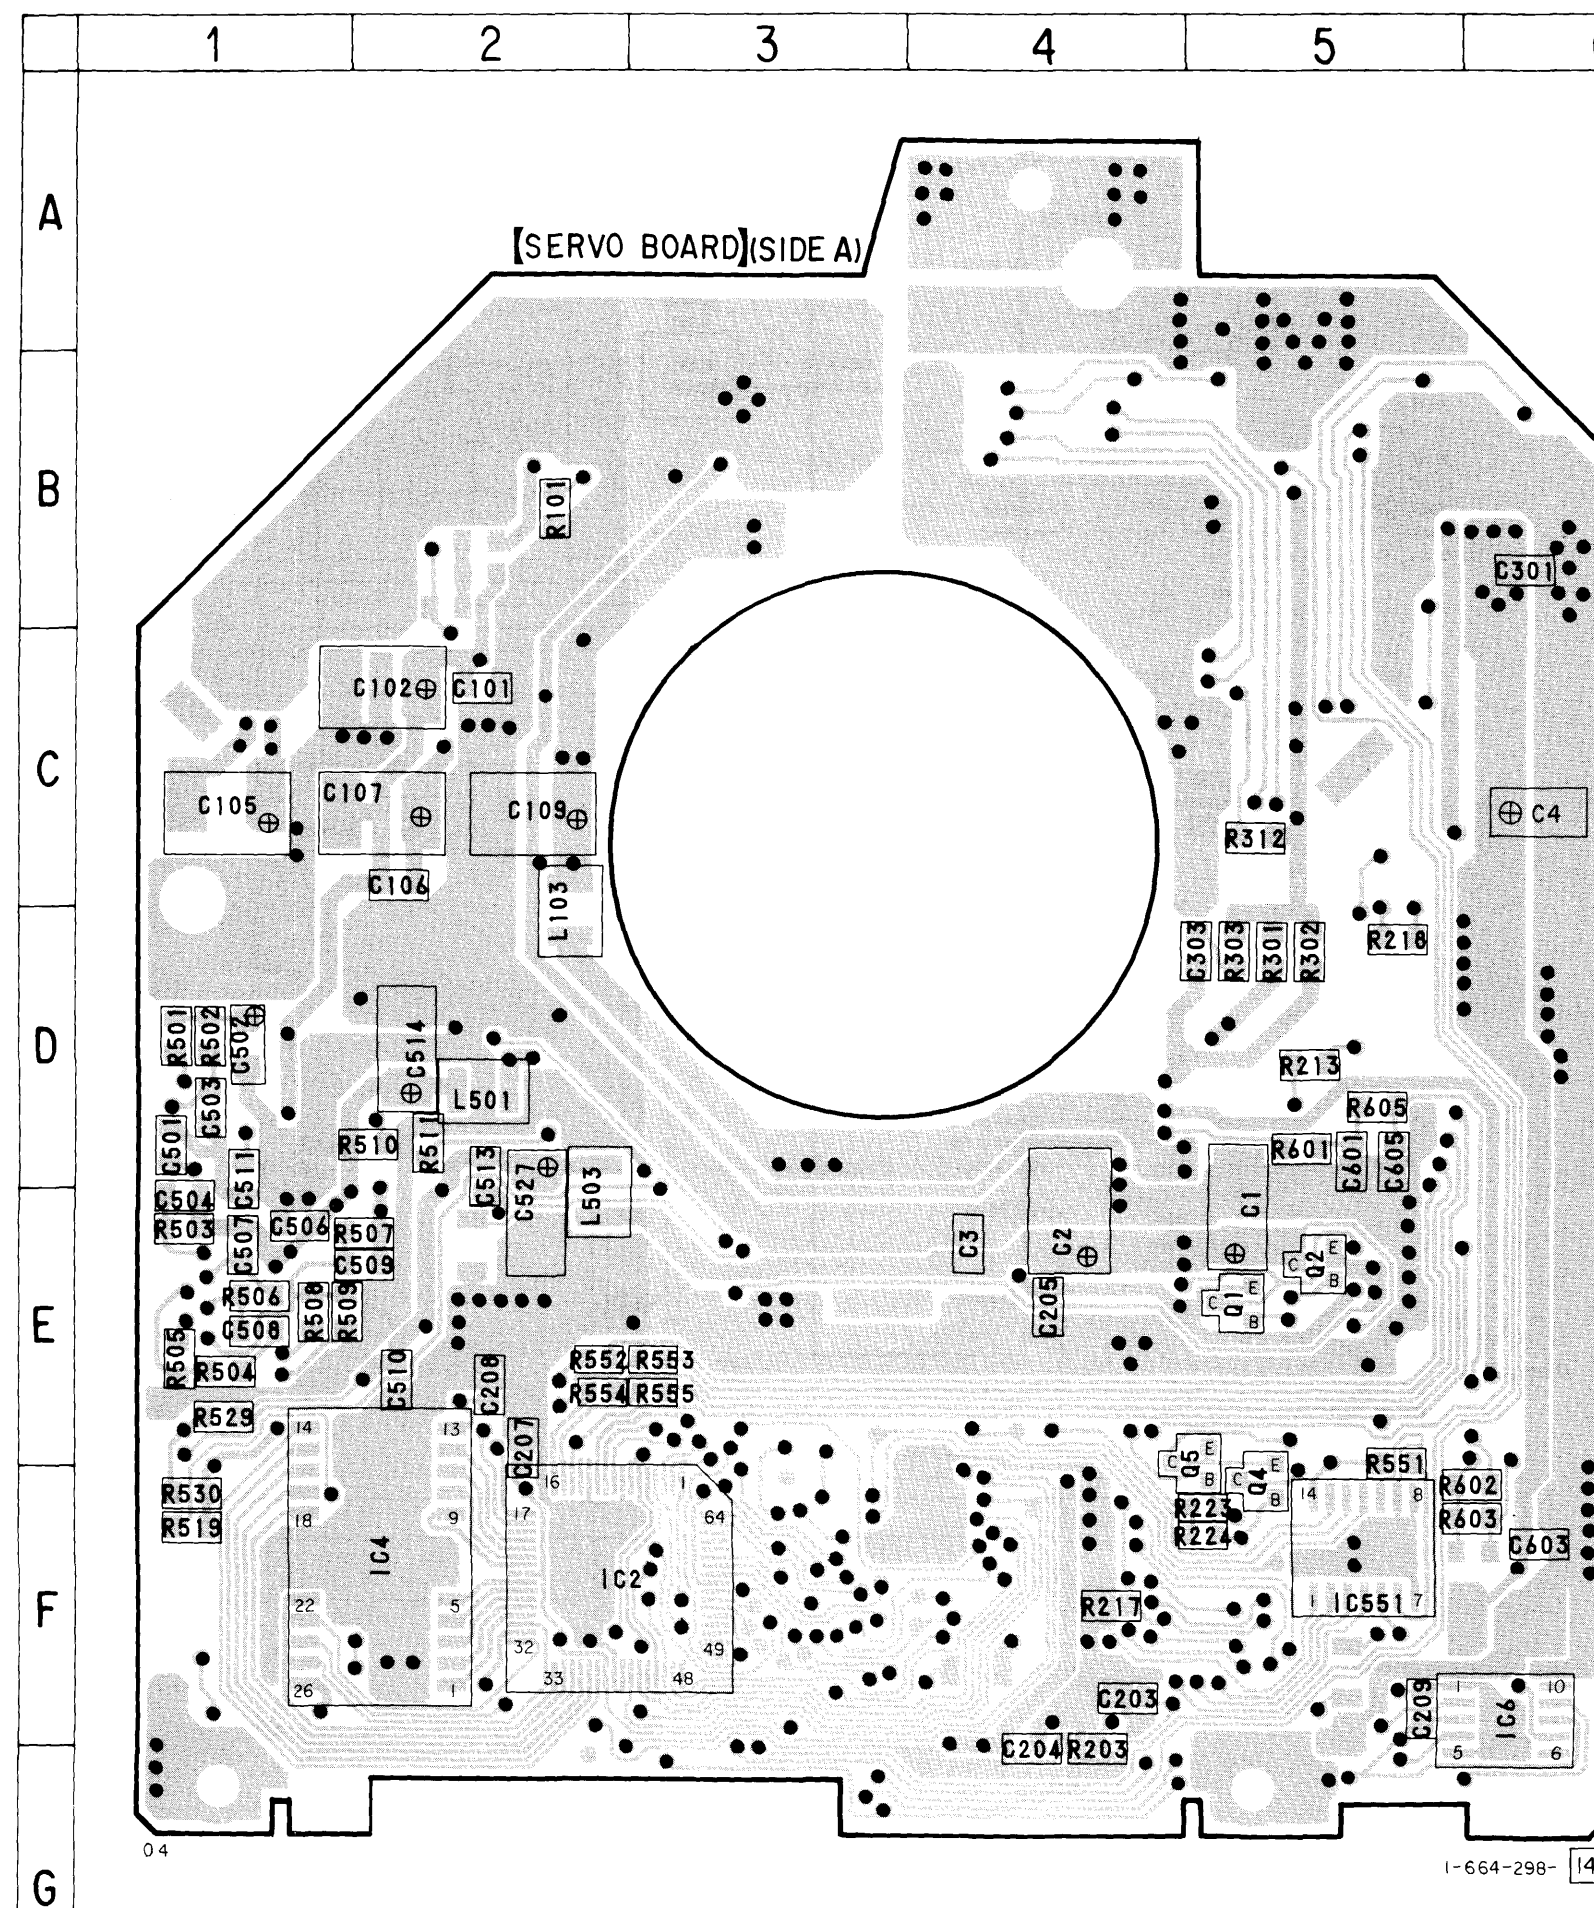

4-7. SCHEMATIC DIAGRAM — CD MECHANISM SECTION — • Refer to page 91 for IC Block Diagrams.

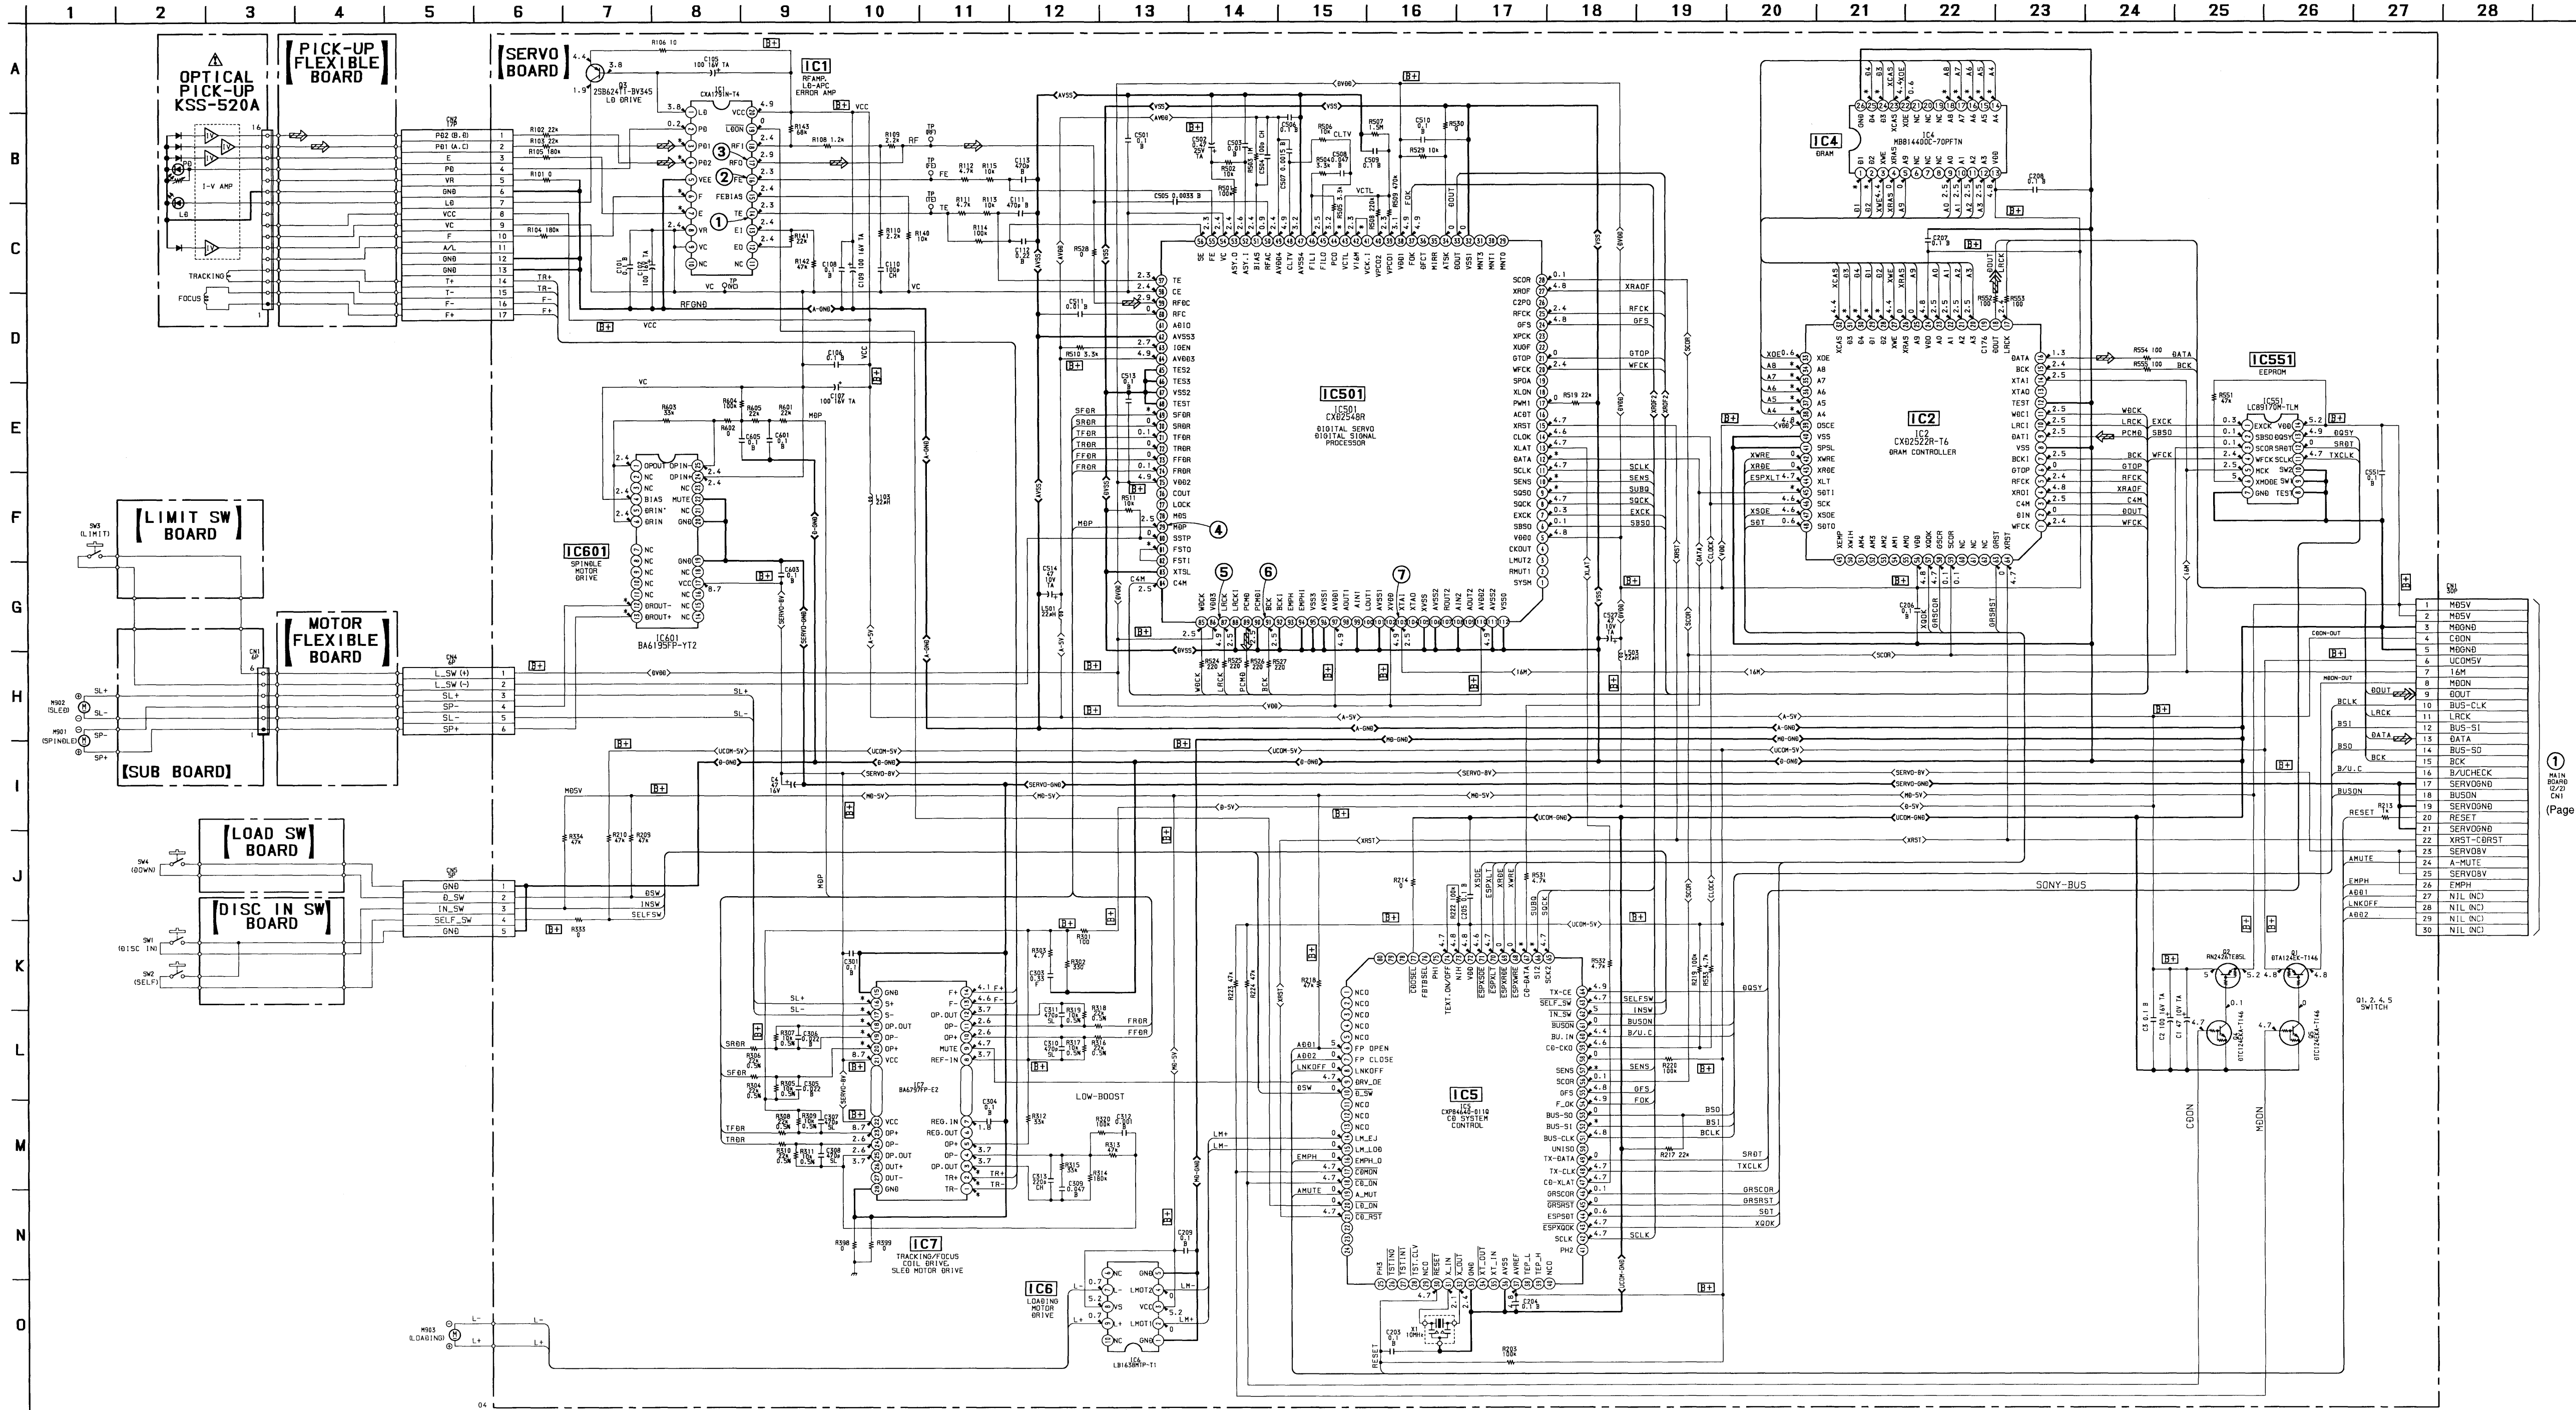


• Waveforms (MODE-PLAY)

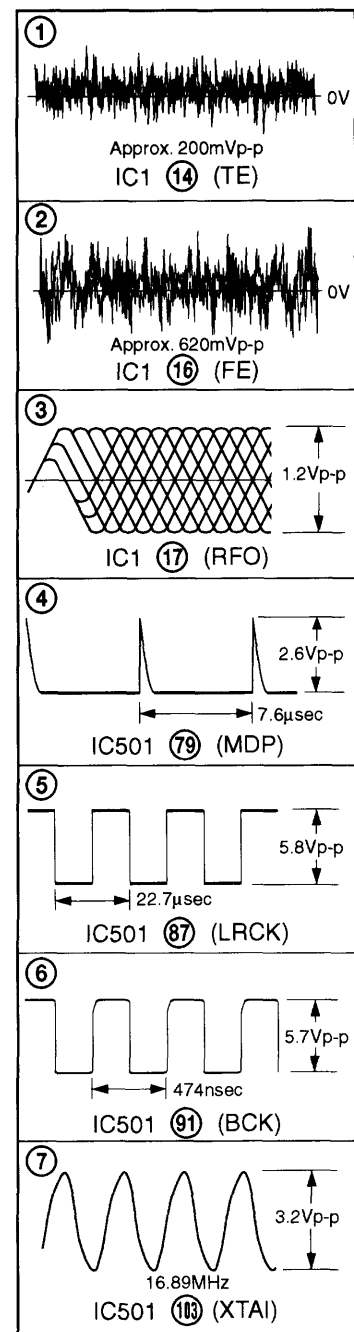

- Note:**
- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
  - All resistors are in  $\Omega$  and  $\frac{1}{2}\text{W}$  or less unless otherwise specified.
  - % : Indicates tolerance.
  - $\Delta$  : Internal component.
- Note:** The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


- $\square$  : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- no mark : CD PLAY.
- Impossible to measure.
- Voltages are taken with a VOM (input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- $\square$  : CD
- $\square$  : digital out


4-8. SCHEMATIC DIAGRAM — AUDIO SECTION — • Refer to page 91 for IC Block Diagrams.

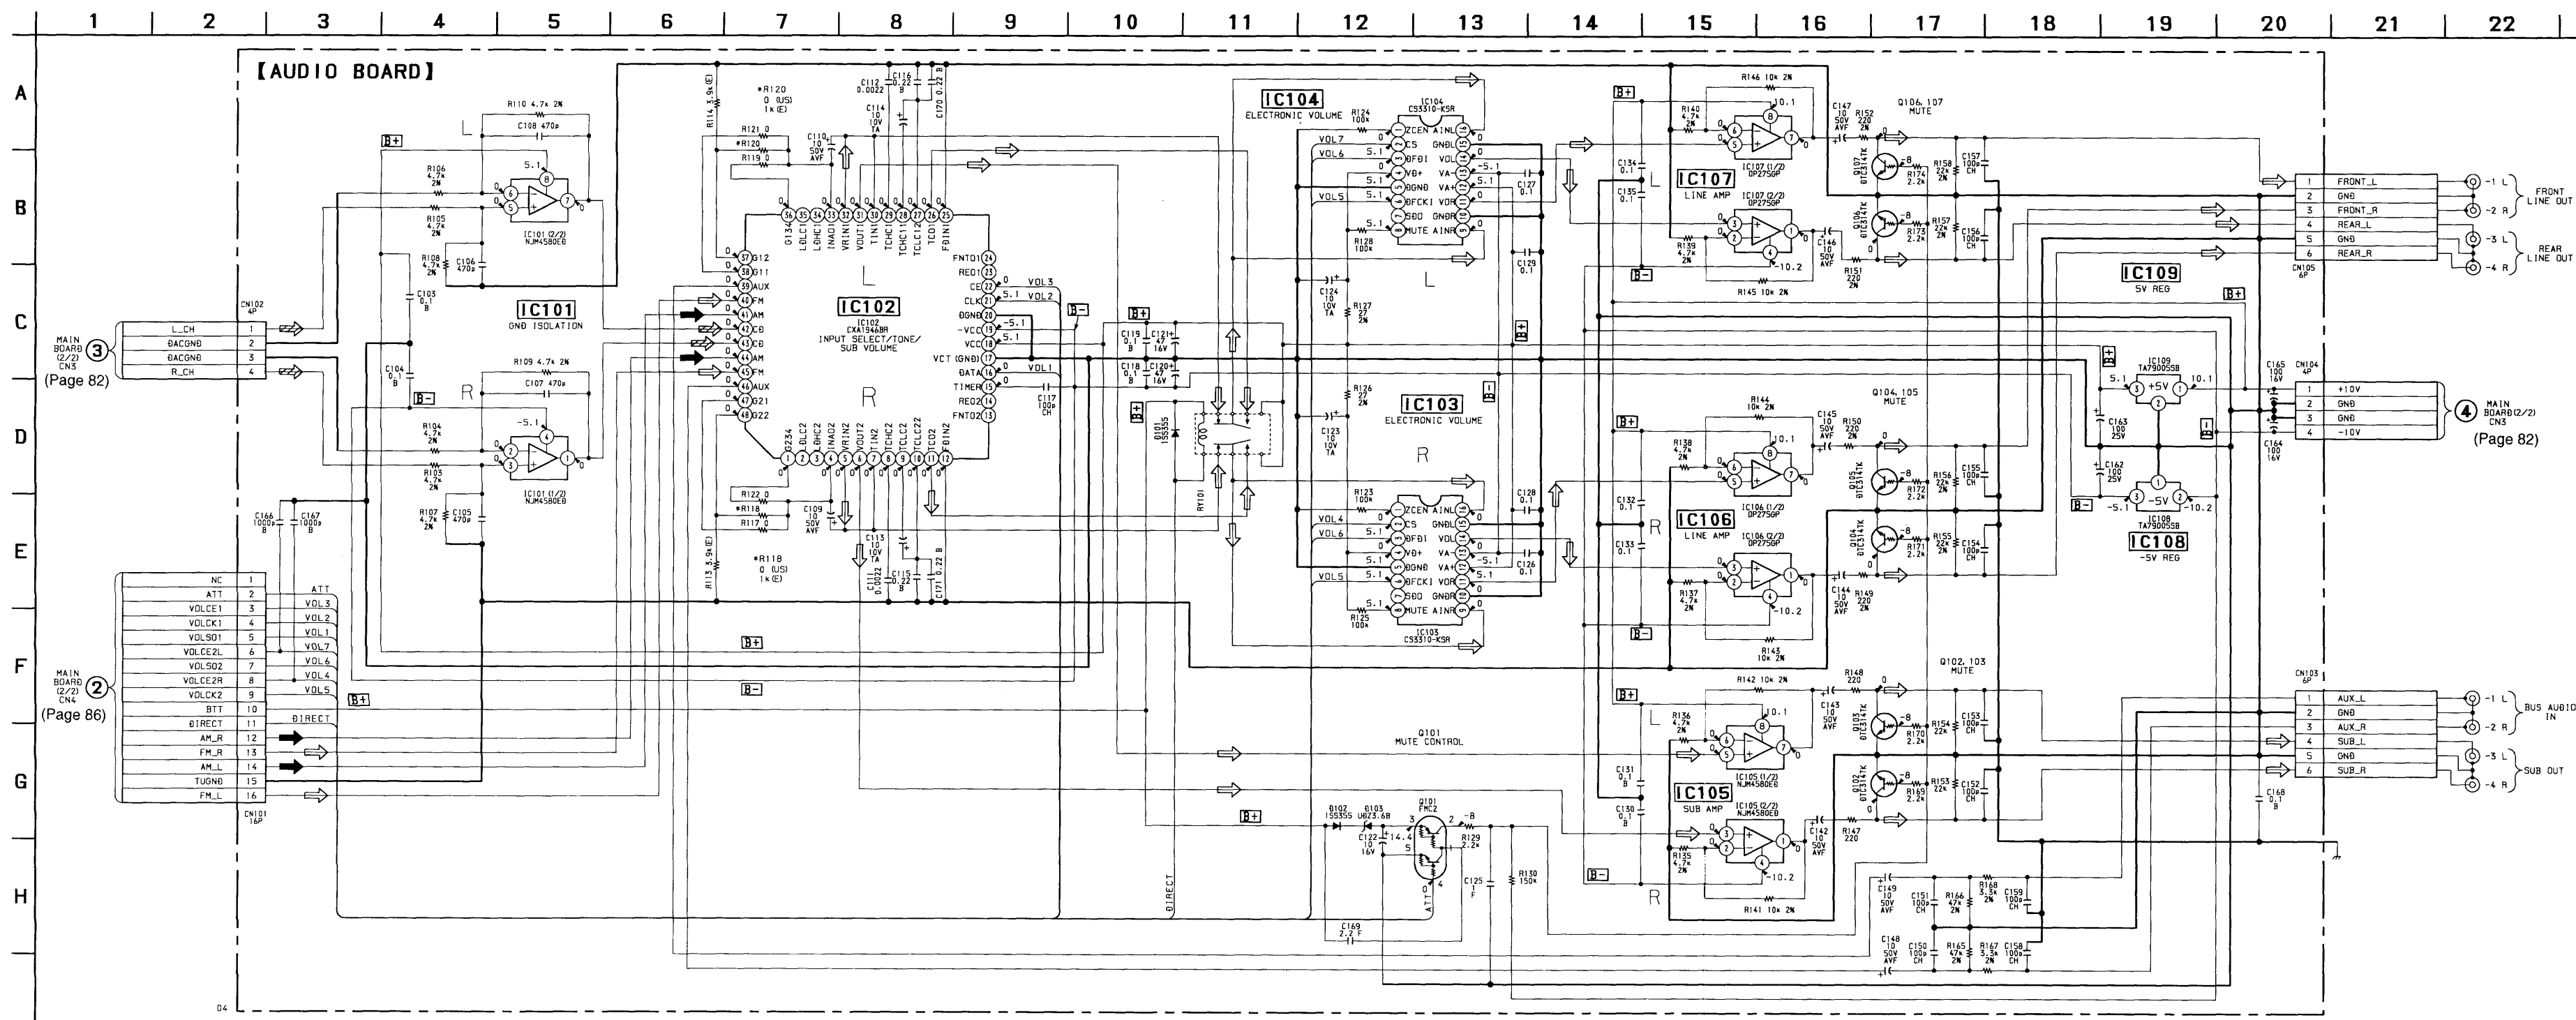**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{pF}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}\text{W}$  or less unless otherwise specified.
- % : indicates tolerance.
- $\text{B}+$  : B+ Line.
- $\text{B}-$  : B- Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltage is dc with respect to ground under no-signal (detuned) condition.
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- $\Rightarrow$  : FM
- $\Rightarrow$  : AM
- $\Rightarrow$  : CD

4-9. PRINTED WIRING BOARD — AUDIO SECTION —

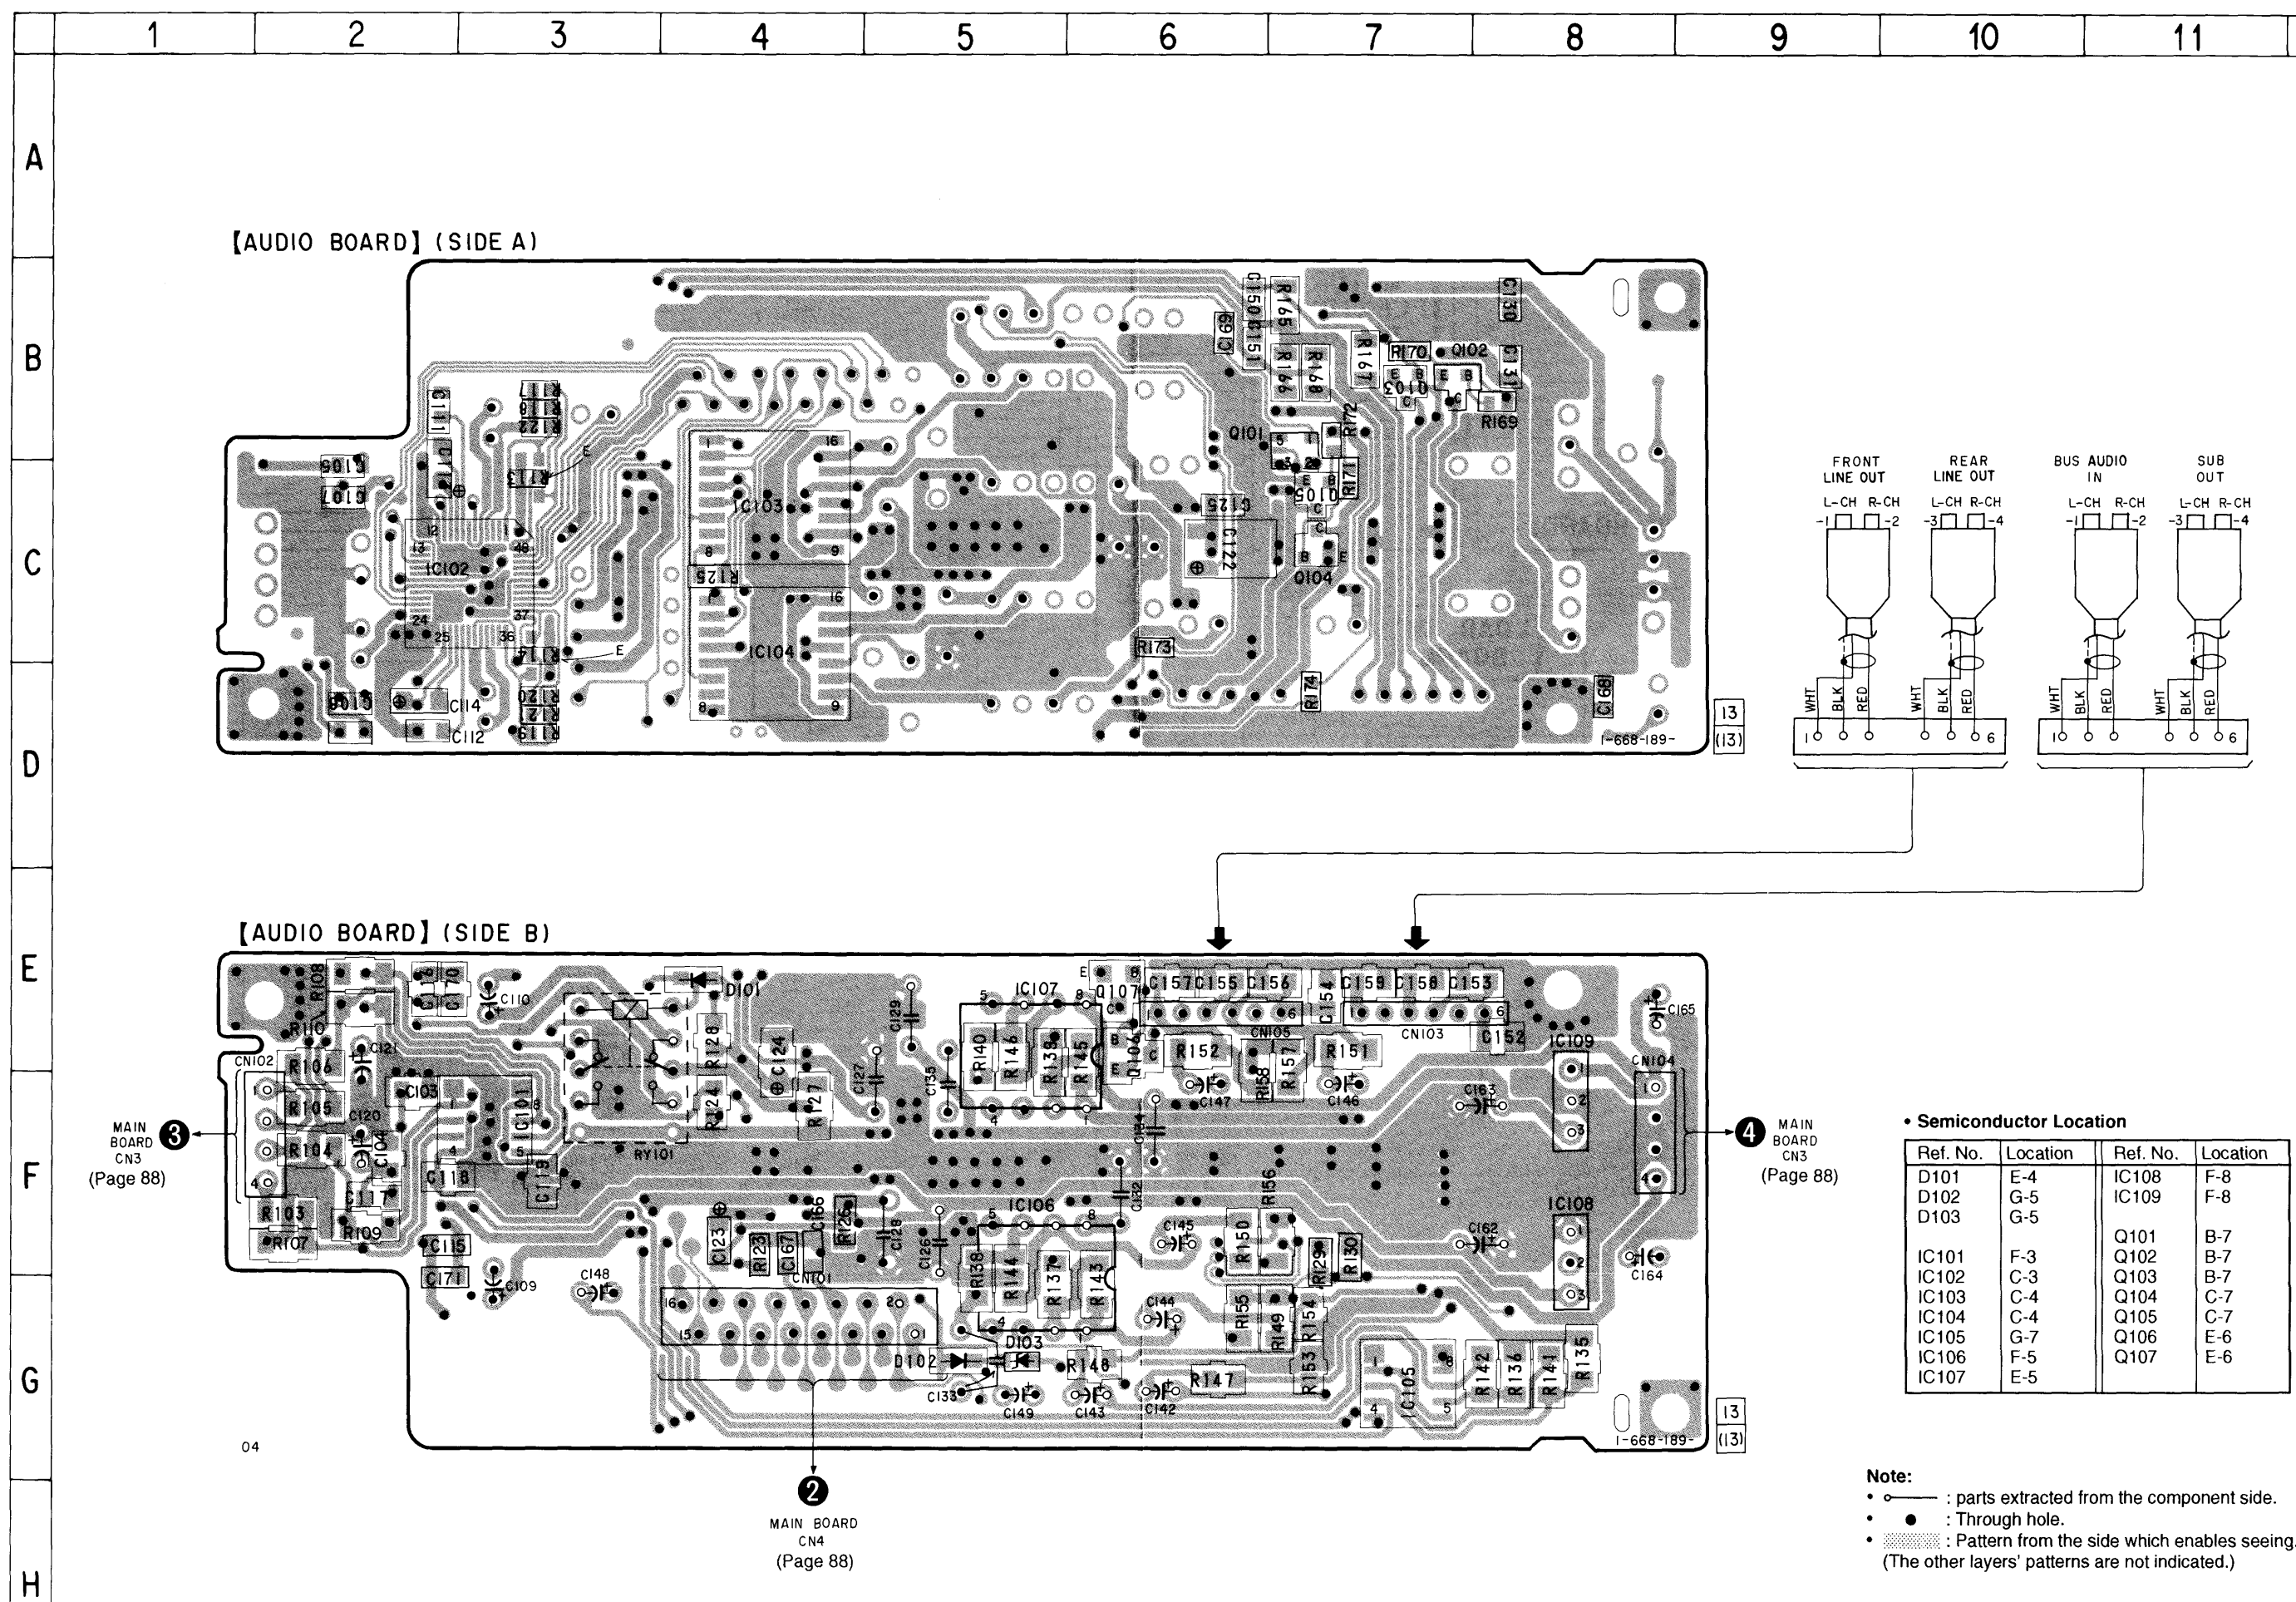


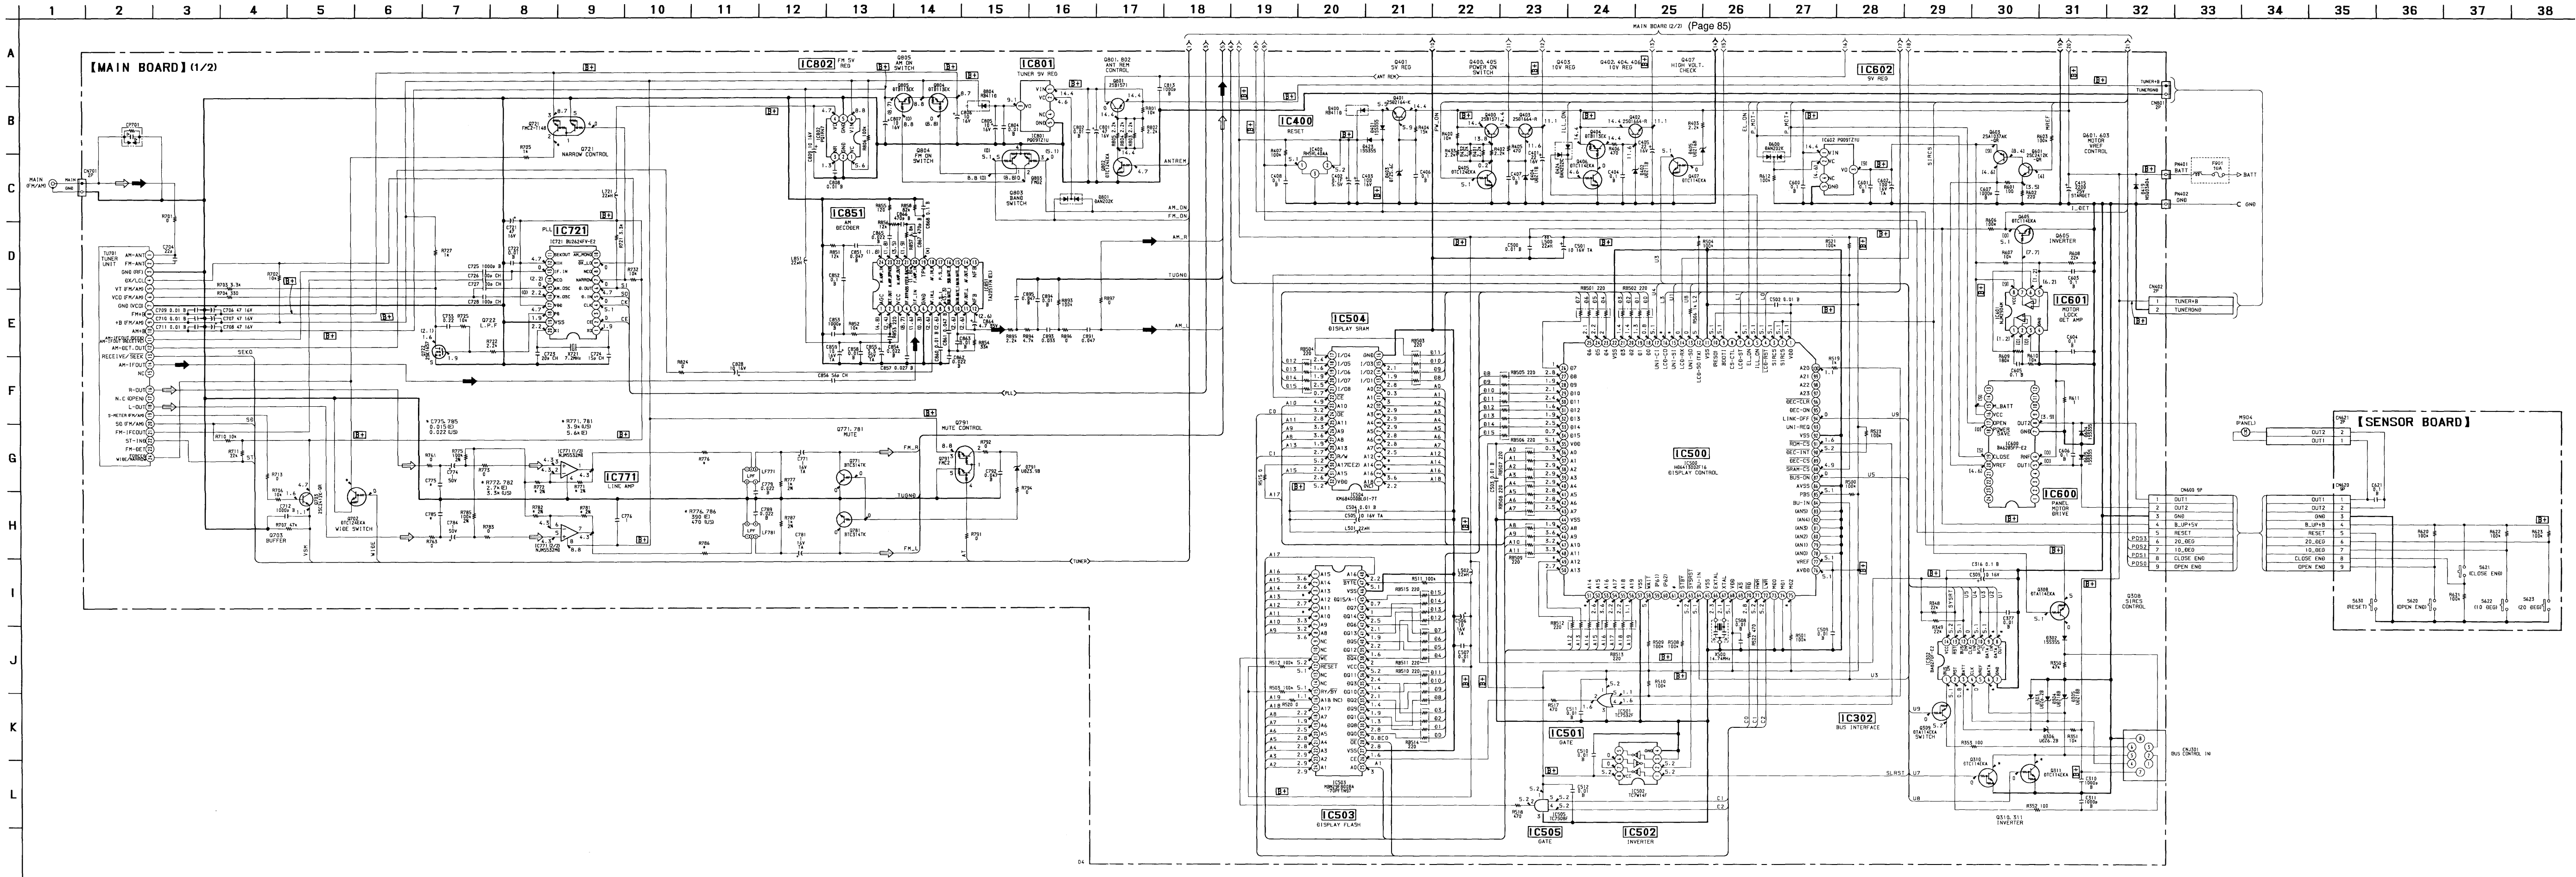


**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{pF}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}\text{W}$  or less unless otherwise specified.
- % : indicates tolerance.
- $\Delta$  : internal component.
- $\square$  : panel designation.
- $\square$  : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltage is dc with respect to ground under no-signal (detuned) condition.
- no mark : FM
- ( ) : AM
- < : CD PLAY
- [ ] : PANEL MOTOR operation
- \* : Impossible to measure
- Signal path
- $\rightarrow$  : FM
- $\rightarrow$  : AM

**4-11. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 91 for IC Block Diagrams**

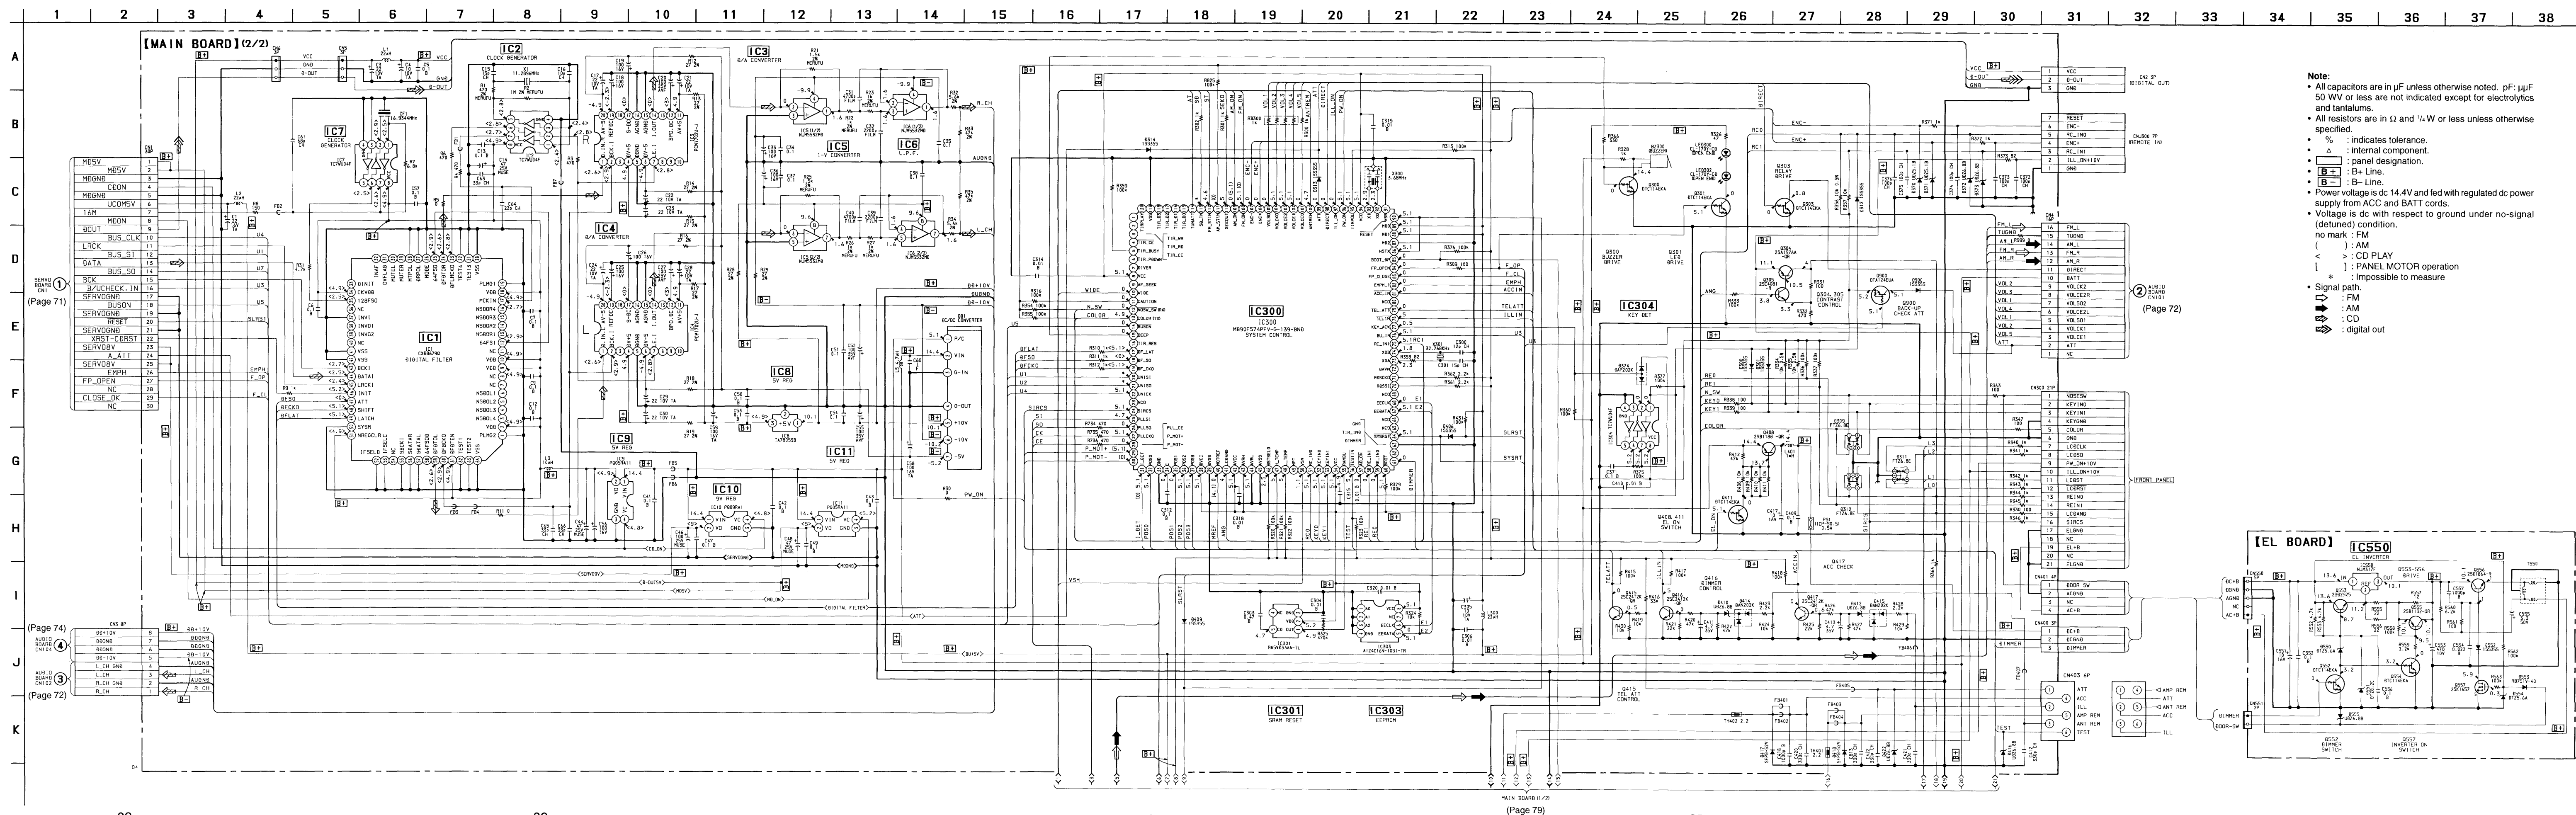

## 4-12. PRINTED WIRING BOARDS — MAIN SECTION —

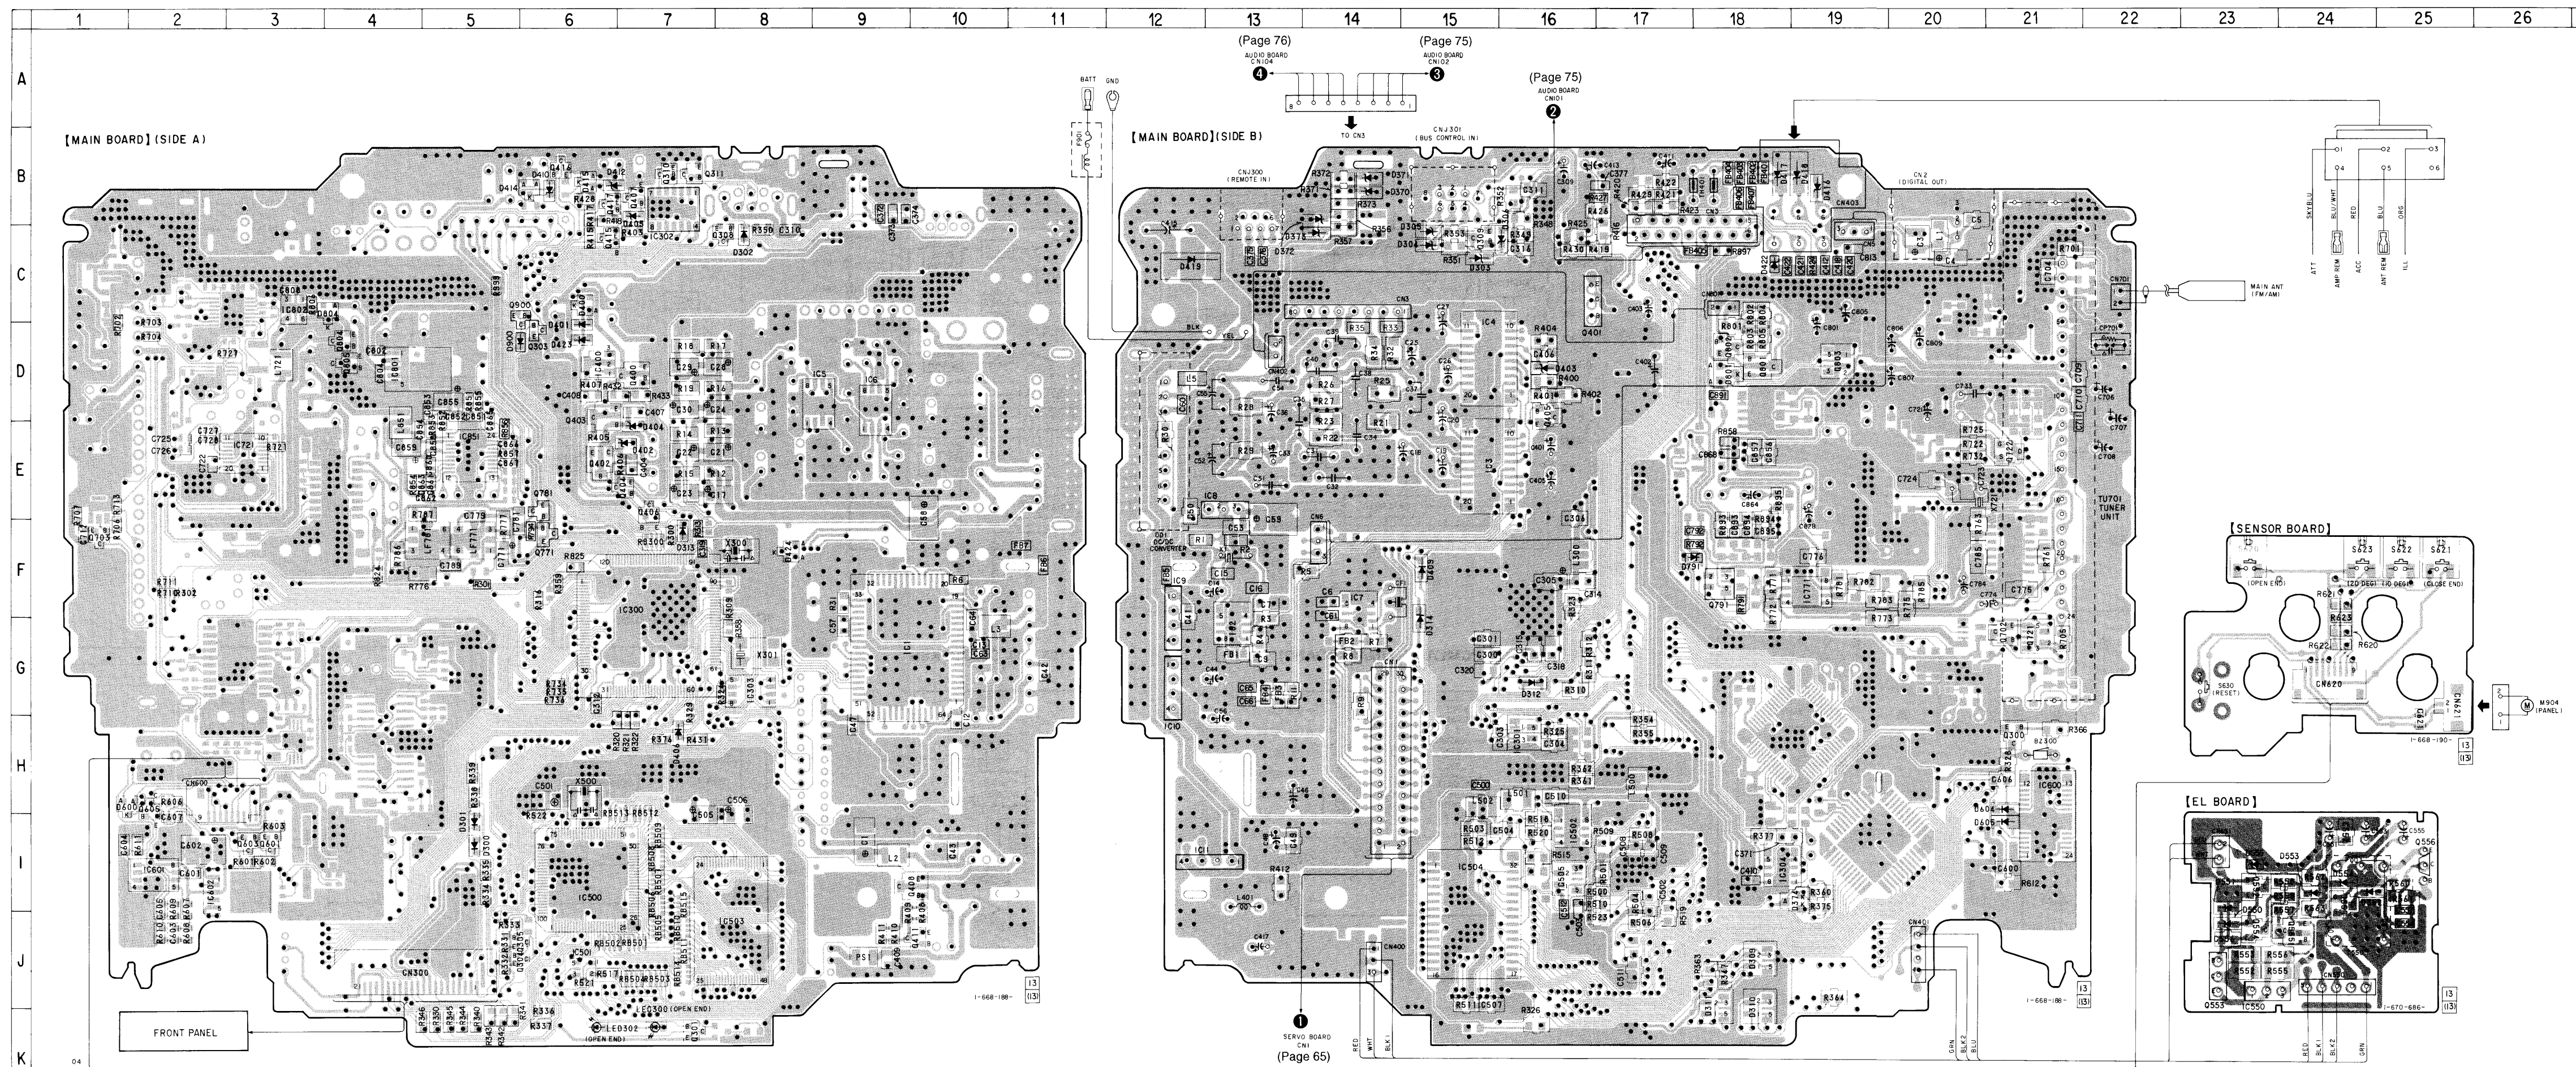

## Semiconductor Location


| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| D300     | I-5      | IC304    | I-18     |
| D301     | I-5      | IC400    | D-6      |
| D302     | C-8      | IC500    | I-6      |
| D303     | C-15     | IC501    | J-6      |
| D304     | C-15     | IC502    | I-16     |
| D305     | C-15     | IC503    | J-8      |
| D306     | B-16     | IC504    | I-15     |
| D309     | J-18     | IC505    | I-16     |
| D310     | J-18     | IC550    | J-23     |
| D311     | J-18     | IC600    | H-21     |
| D312     | G-16     | IC601    | I-2      |
| D313     | F-7      | IC602    | I-2      |
| D314     | G-15     | IC721    | E-3      |
| D370     | B-14     | IC771    | F-19     |
| D371     | B-14     | IC801    | D-4      |
| D372     | C-13     | IC802    | C-3      |
| D373     | C-13     | IC851    | E-5      |
| D374     | I-18     |          |          |
| D400     | C-6      | LED300   | J-7      |
| D401     | D-6      | LED302   | K-6      |
| D402     | E-7      |          |          |
| D403     | D-16     | Q300     | H-21     |
| D404     | E-7      | Q301     | K-7      |
| D405     | B-7      | Q303     | C-5      |
| D406     | H-7      | Q304     | J-5      |
| D408     | F-15     | Q305     | C-5      |
| D410     | B-6      | Q308     | C-17     |
| D412     | B-6      | Q309     | B-7      |
| D414     | B-5      | Q310     | B-7      |
| D415     | B-6      | Q311     | B-7      |
| D416     | B-19     | Q400     | D-16     |
| D417     | B-18     | Q401     | E-6      |
| D418     | B-19     | Q402     | E-6      |
| D419     | C-12     | Q403     | E-6      |
| D422     | C-18     | Q404     | D-16     |
| D423     | D-6      | Q405     | E-7      |
| D424     | F-8      | Q406     | B-7      |
| D550     | I-23     | Q407     | I-9      |
| D551     | I-23     | Q408     | J-9      |
| D552     | I-24     | Q411     | C-6      |
| D553     | I-24     | Q415     | B-6      |
| D554     | I-24     | Q416     | B-6      |
| D555     | I-23     | Q417     | I-23     |
| D600     | H-1      | Q552     | J-23     |
| D604     | H-20     | Q553     | J-23     |
| D605     | I-20     | Q554     | J-24     |
| D791     | F-17     | Q555     | I-25     |
| D801     | D-18     | Q556     | I-24     |
| D804     | C-3      | Q557     | I-3      |
| D900     | D-6      | Q601     | I-3      |
|          |          | Q603     | H-2      |
| IC1      | G-9      | Q702     | G-21     |
| IC2      | G-13     | Q703     | F-1      |
| IC3      | E-15     | Q721     | G-21     |
| IC4      | D-15     | Q722     | E-21     |
| IC5      | D-9      | Q771     | F-6      |
| IC6      | D-9      | Q781     | F-6      |
| IC7      | F-14     | Q791     | F-18     |
| IC8      | E-13     | Q801     | D-18     |
| IC9      | F-12     | Q802     | D-18     |
| IC10     | G-12     | Q803     | D-19     |
| IC11     | I-12     | Q804     | D-4      |
| IC300    | F-7      | Q805     | D-4      |
| IC301    | H-16     | Q900     | D-6      |
| IC302    | B-7      |          |          |
| IC303    | G-8      |          |          |

## Note:


- : parts extracted from the component side.
- : Through hole.
- : internal component.
- : Pattern from the side which enables seeing.

## • IC Block Diagrams


**IC1 CXA1791N-T4 (SERVO BOARD)**

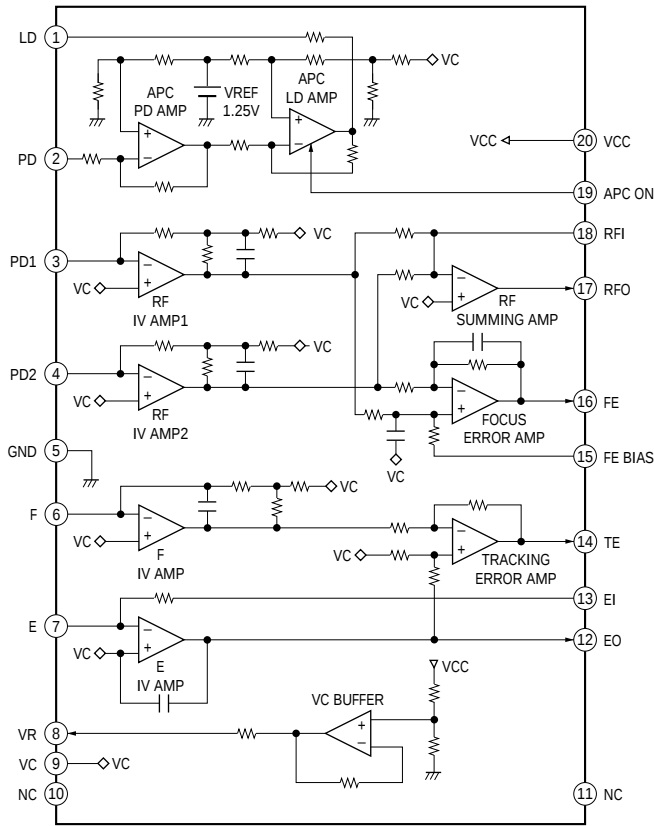


**IC6 LB1638MTP-T1**

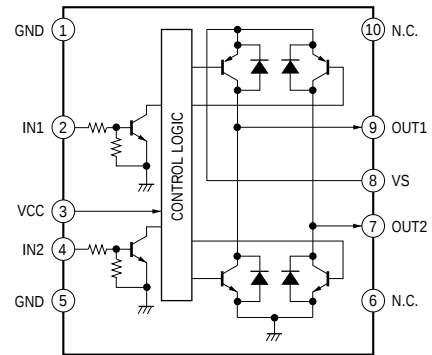


**IC551 LC89170M-TLM**

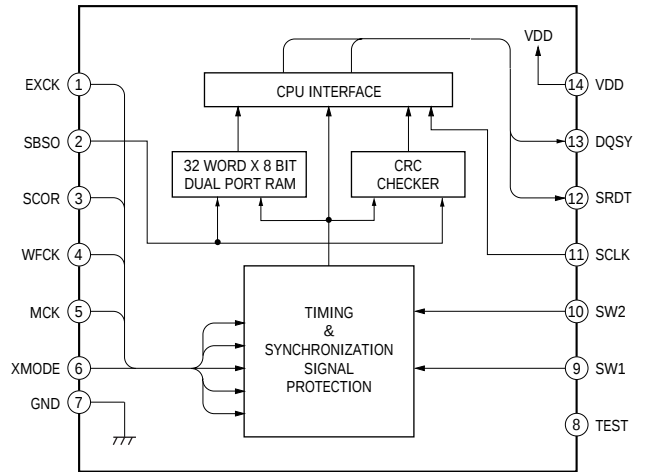


**IC2 CXD2522R-T6**

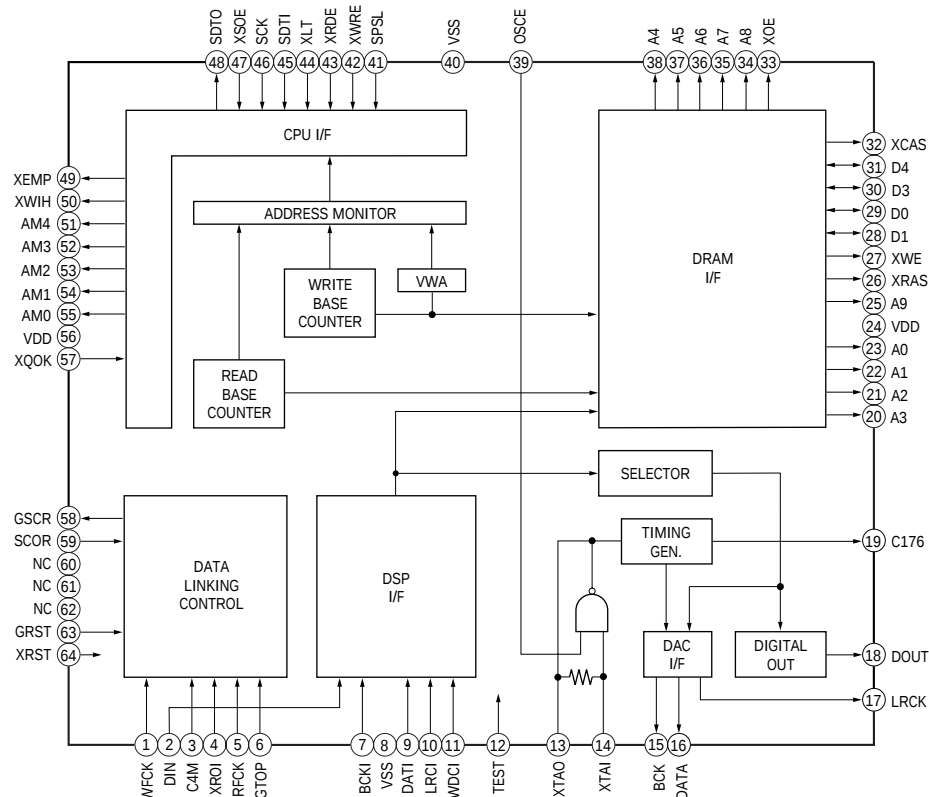


#### IC4 MB814400C-70PFTN (SERVO BOARD)

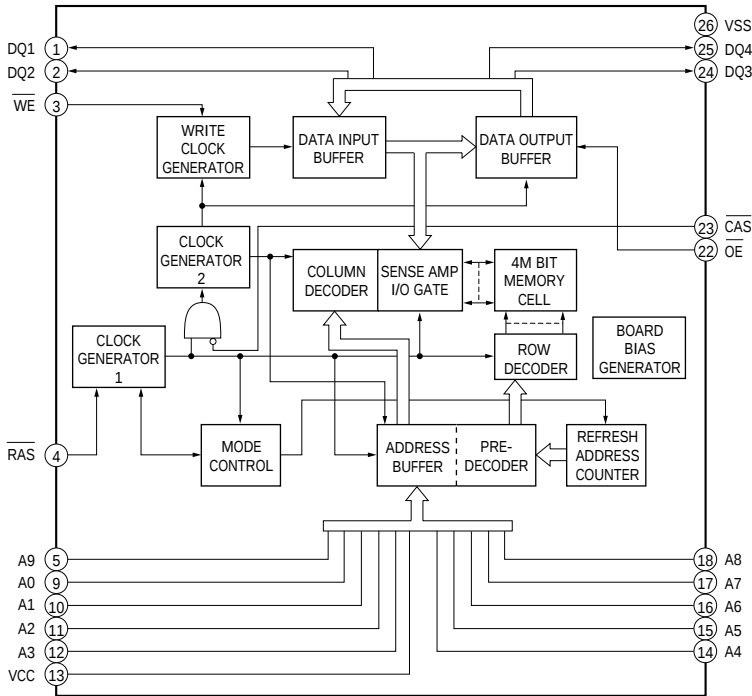


#### IC601 BA6195FP-YT2

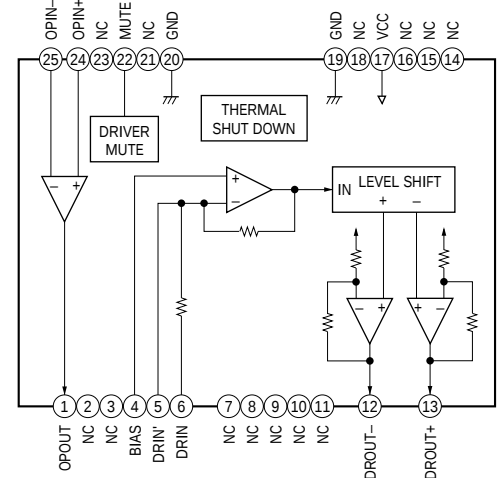


#### IC7 BA6797FP-E2

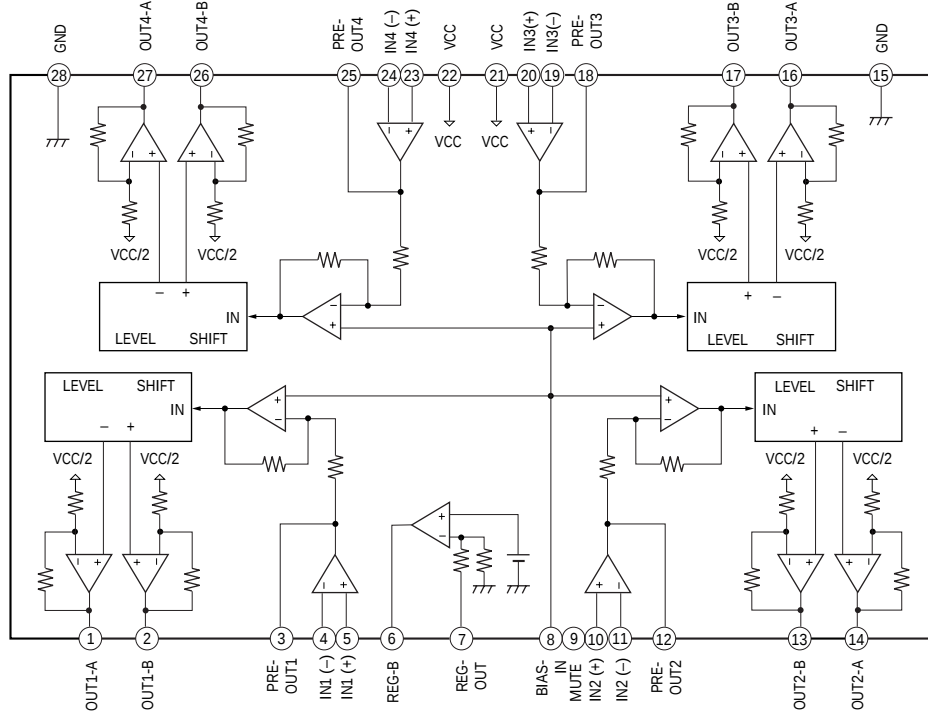


### IC1 CXD8679Q (MAIN BOARD)

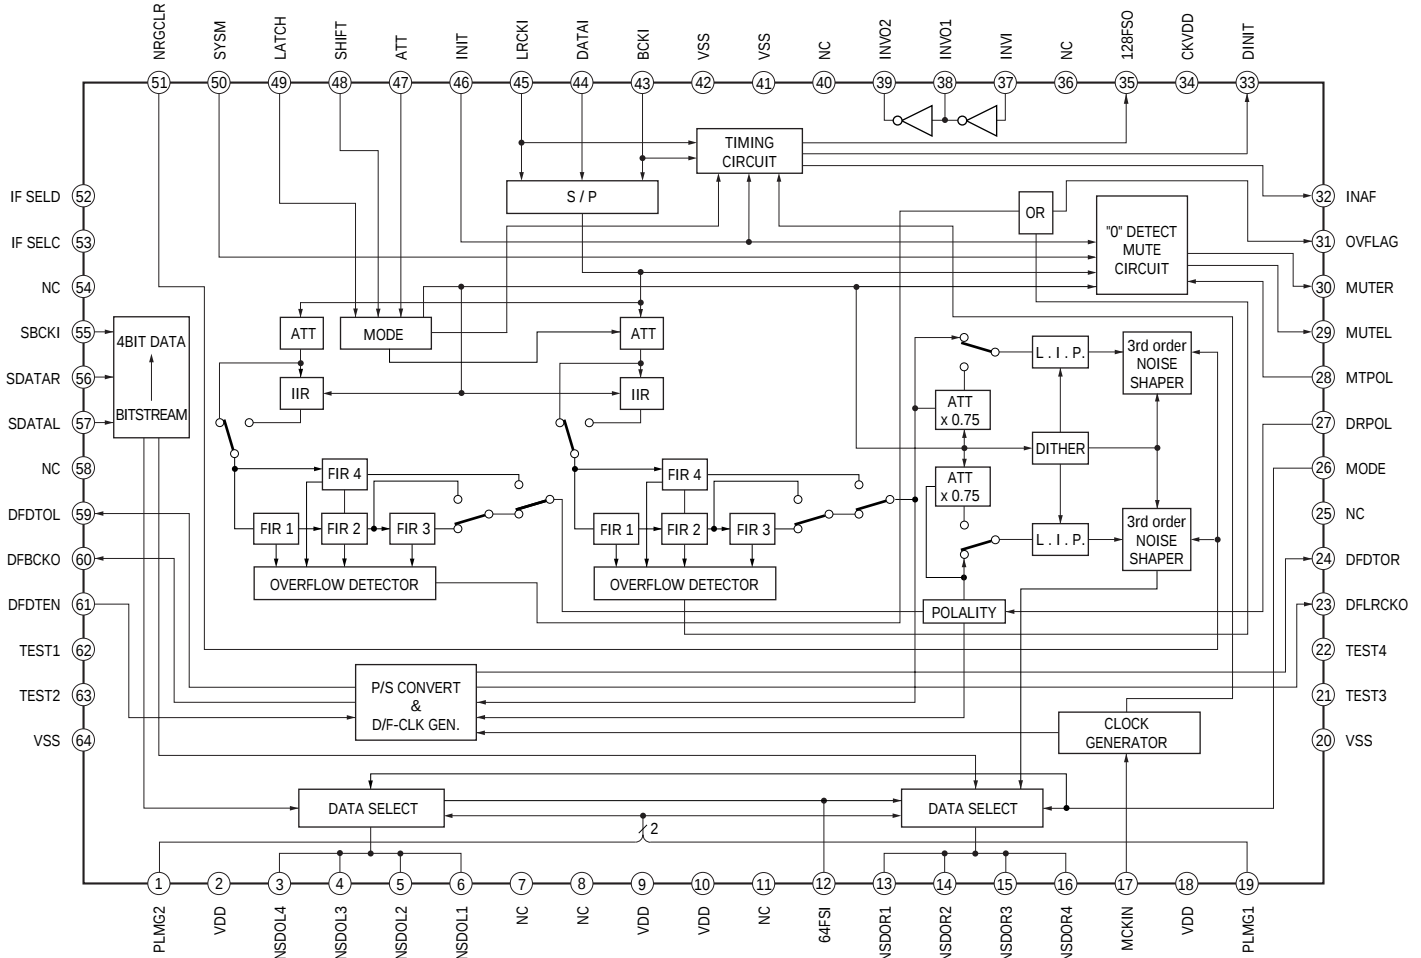


### IC3, 4 PCM1702U-J (MAIN BOARD)

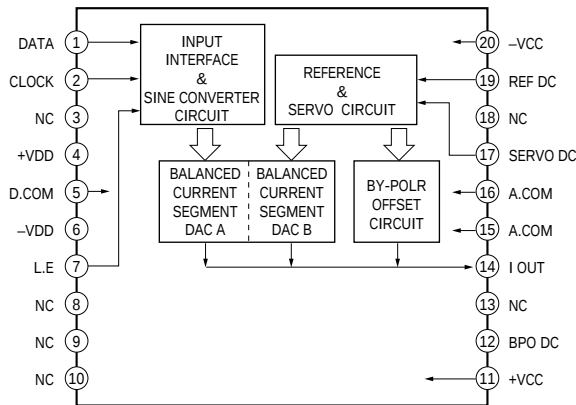


### IC103, 104 CS3310-KSR

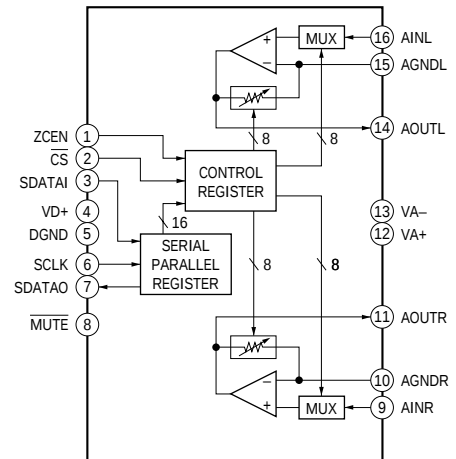


**IC102 CXA1946BR**

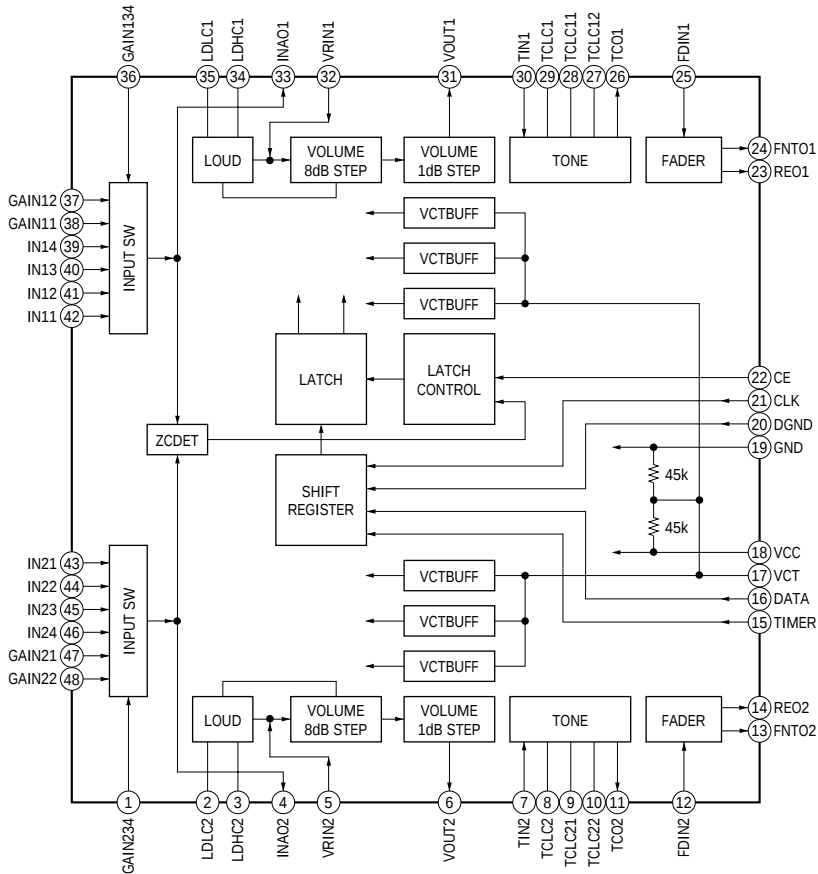


**IC302 BA8270F-E2**

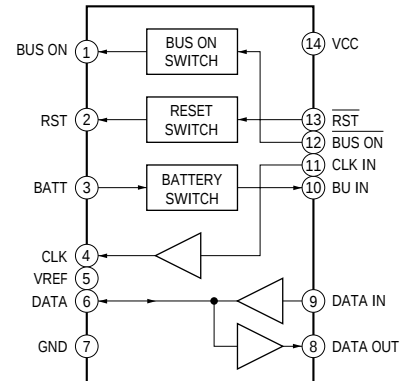


**IC303 AT24C16N-10SI-TR**

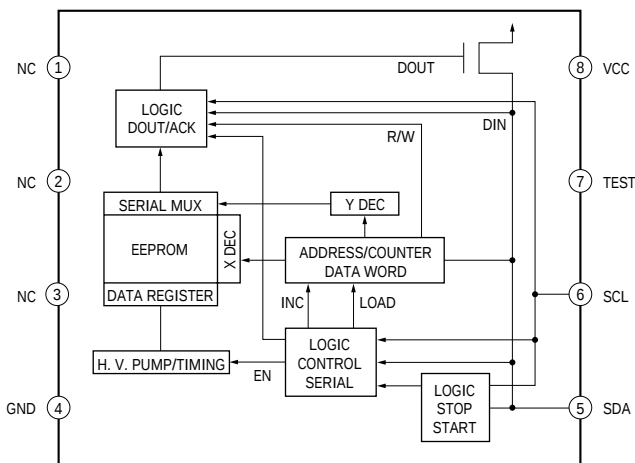


**IC503 MBM29F800BA-70PFTN97**

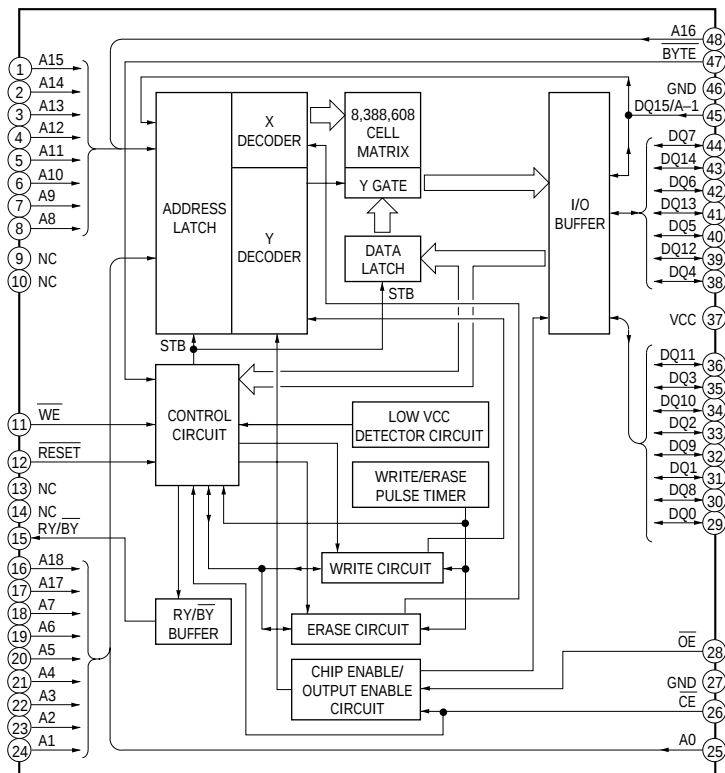


### IC721 BU2624FV-E2

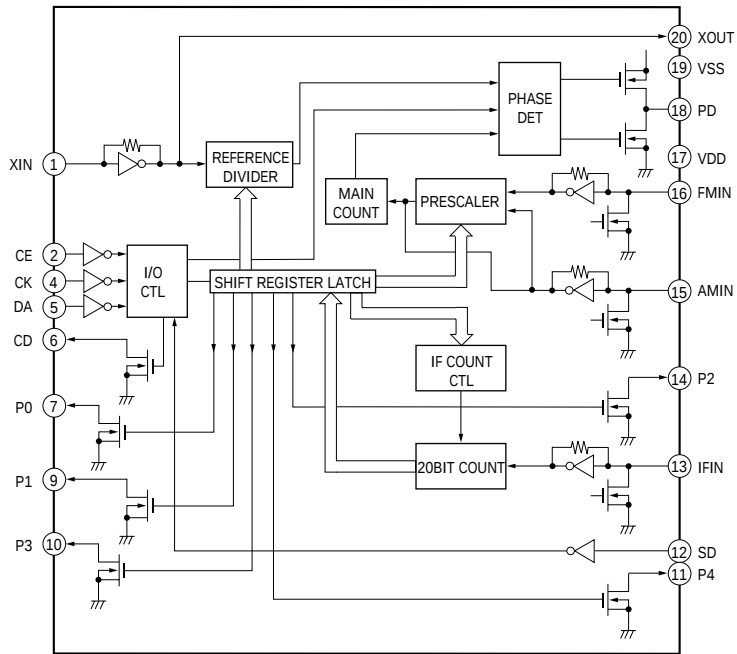

### IC600 BA6285FP-E2

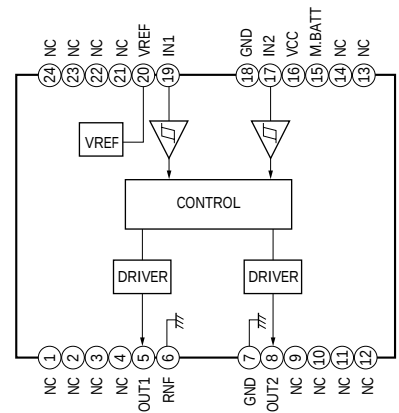

### IC851 TA2051FN(EL)

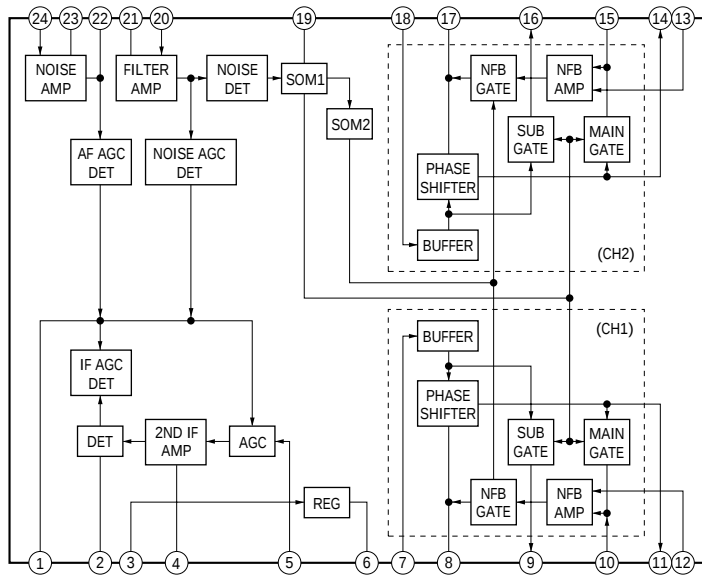

## SECTION 5 EXPLODED VIEWS

### NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.

### Color Indication of Appearance Parts

Example :


KNOB, BALANCE (WHITE) ... (RED)

↑                      ↑  
Parts Color   Cabinet's Color

- Accessories and packing materials and hardware (# mark) list are given in the last of this parts list.

The components identified by mark  $\triangle$  or dotted line with mark.  $\triangle$  are critical for safety. Replace only with part number specified.


### 5-1. CASE SECTION

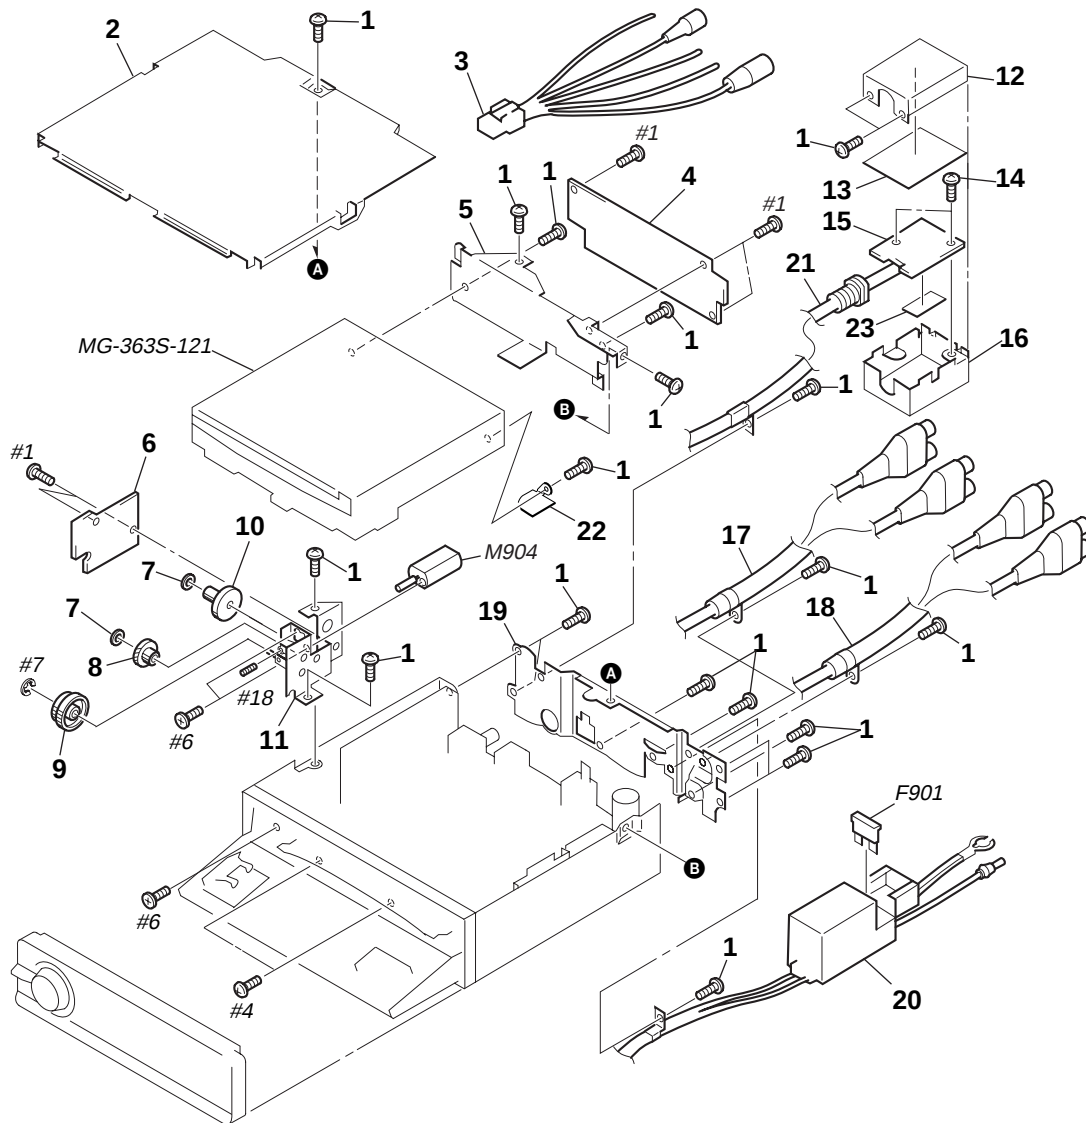

| Ref. No. | Part No.     | Description                   | Remark |
|----------|--------------|-------------------------------|--------|
| 1        | 3-906-712-11 | SCREW (2.6X4) (CU), +PTT      |        |
| * 2      | 3-025-797-01 | COVER (UPPER)                 |        |
| 3        | 1-783-269-11 | CORD (WITH CONNECTOR) (POWER) |        |
| * 4      | A-3294-476-A | AUDIO BOARD, COMPLETE (US)    |        |
| * 4      | A-3294-505-A | AUDIO BOARD, COMPLETE (E)     |        |
| * 5      | 3-025-798-01 | BRACKET (MD)                  |        |
| * 6      | 1-668-190-11 | SENSOR BOARD                  |        |
| 7        | 3-321-813-01 | WASHER, COTTER POLYETHYLENE   |        |
| 8        | 3-026-749-01 | GEAR (WORM)                   |        |
| 9        | 3-026-751-01 | GEAR (C)                      |        |
| 10       | 3-026-750-01 | GEAR (B)                      |        |
| 11       | X-3375-557-1 | MOTOR ASSY                    |        |
| 12       | 3-937-282-01 | CASE (UPPER)                  |        |
| * 13     | 3-938-138-01 | SHEET (E)                     |        |


| Ref. No. | Part No.     | Description                       | Remark |
|----------|--------------|-----------------------------------|--------|
| 14       | 3-915-923-01 | SCREW, GROUND POINT               |        |
| * 15     | 1-670-686-11 | EL BOARD                          |        |
| 16       | 3-937-812-01 | CASE (LOWER)                      |        |
| 17       | 1-783-271-11 | CORD (WITH CONNECTOR) (RCA)       |        |
|          |              | (BUS AUDIO IN, SUB OUT)           |        |
| 18       | 1-783-271-21 | CORD (WITH CONNECTOR) (RCA)       |        |
|          |              | (FRONT LINE OUT, REAR LINE OUT)   |        |
| * 19     | 3-025-805-01 | PANEL, REAR                       |        |
| 20       | 1-783-270-21 | CORD, POWER                       |        |
| 21       | 1-790-088-11 | CORD (WITH CONNECTOR) (INVERTER)  |        |
| 22       | 3-029-367-01 | COVER (MD)                        |        |
| 23       | 3-029-989-01 | CUSHION (COIL)                    |        |
| F901     | 1-532-877-11 | FUSE (BLADE TYPE) (AUTO FUSE) 10A |        |
| M904     | A-3301-552-A | MOTOR SUB ASSY (PANEL)            |        |

## 5-2. FRONT PANEL SECTION

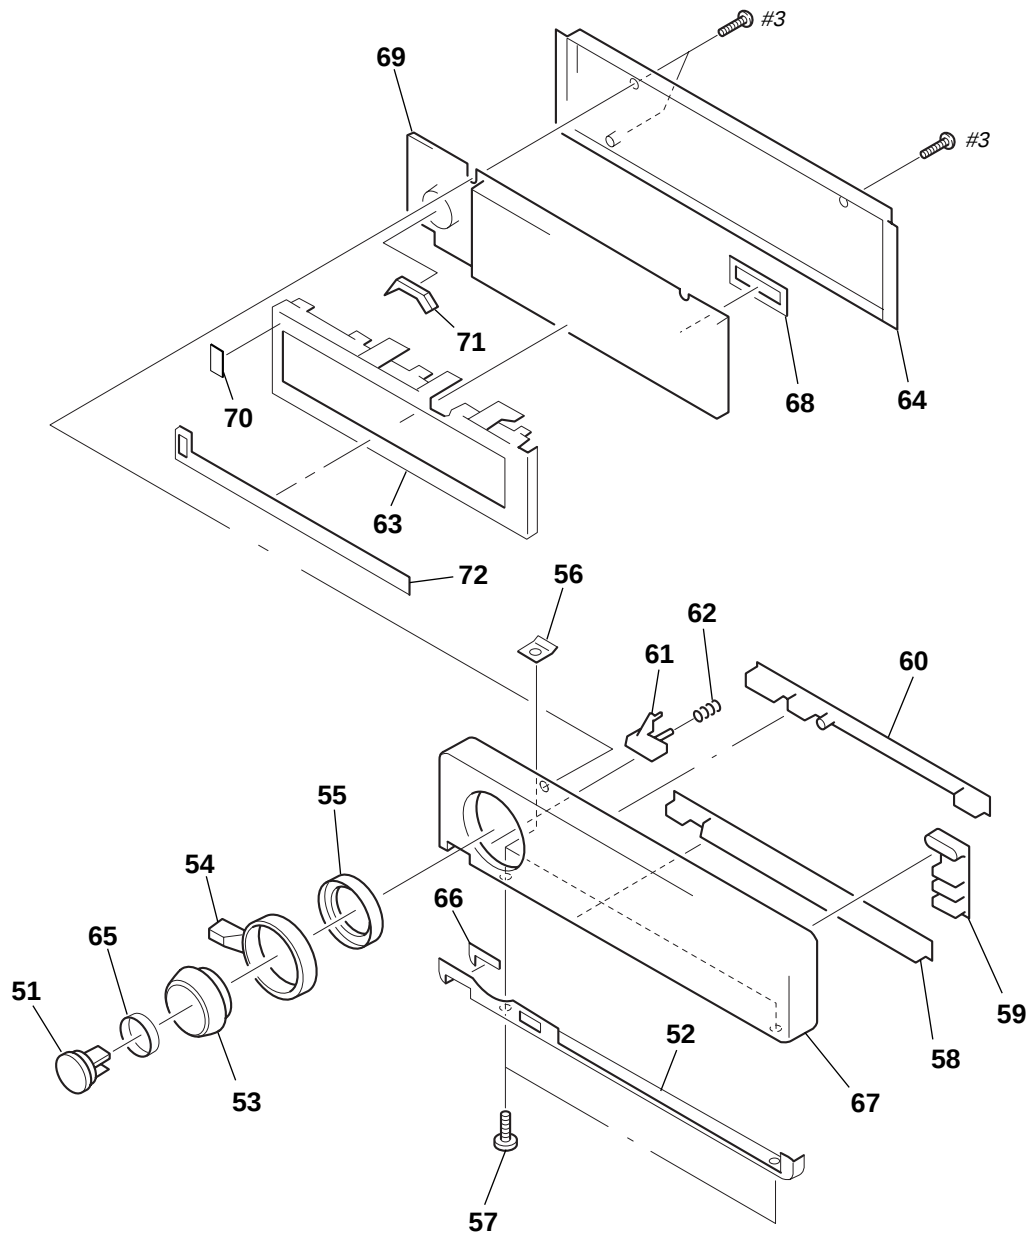


| Ref. No. | Part No.     | Description                   | Remark | Ref. No. | Part No.     | Description                | Remark |
|----------|--------------|-------------------------------|--------|----------|--------------|----------------------------|--------|
| 51       | 3-025-811-01 | BUTTON (SOURCE)               |        | 63       | 1-669-127-11 | FLEXIBLE SW BOARD          |        |
| 52       | 3-025-820-01 | FRAME (FRONT), ORNAMENT       |        | 64       | 3-025-807-01 | PANEL, FRONT BACK          |        |
| 53       | 3-025-793-01 | KNOB (VOL)                    |        | 65       | 3-026-389-01 | COVER (SOURCE)             |        |
| 54       | 3-025-815-01 | LEVER (SEEK/AMS)              |        | 66       | 3-025-810-01 | SHEET (FRONT), ADHESIVE    |        |
| 55       | 3-025-808-01 | PLATE (SEEK/AMS), LIGHT GUIDE |        | 67       | X-3375-934-1 | PANEL SUB ASSY, FRONT (US) |        |
| 56       | 3-025-814-01 | BRACKET (FRAME)               |        | 67       | X-3376-540-1 | PANEL SUB ASSY, FRONT (E)  |        |
| 57       | 3-349-825-61 | SCREW                         |        | 68       | 3-938-230-01 | SHEET (BLIND)              |        |
| 58       | 3-025-817-01 | BUTTON (10 KEY)               |        | 69       | 1-803-056-11 | LIQUID CRYSTAL MODULE      |        |
| 59       | 3-025-818-01 | BUTTON (FUNCTION)             |        | * 70     | 3-029-132-01 | SHEET (MODE)               |        |
| 60       | 3-026-388-01 | BUTTON (MODE)                 |        | * 71     | 3-029-749-01 | SHEET (SOURCE)             |        |
| 61       | 3-025-816-01 | BUTTON (RELEASE)              |        | * 72     | 3-030-385-01 | SHEET (10 KEY)             |        |
| 62       | 3-934-415-01 | SPRING (RELEASE)              |        |          |              |                            |        |

### 5-3. CHASSIS SECTION

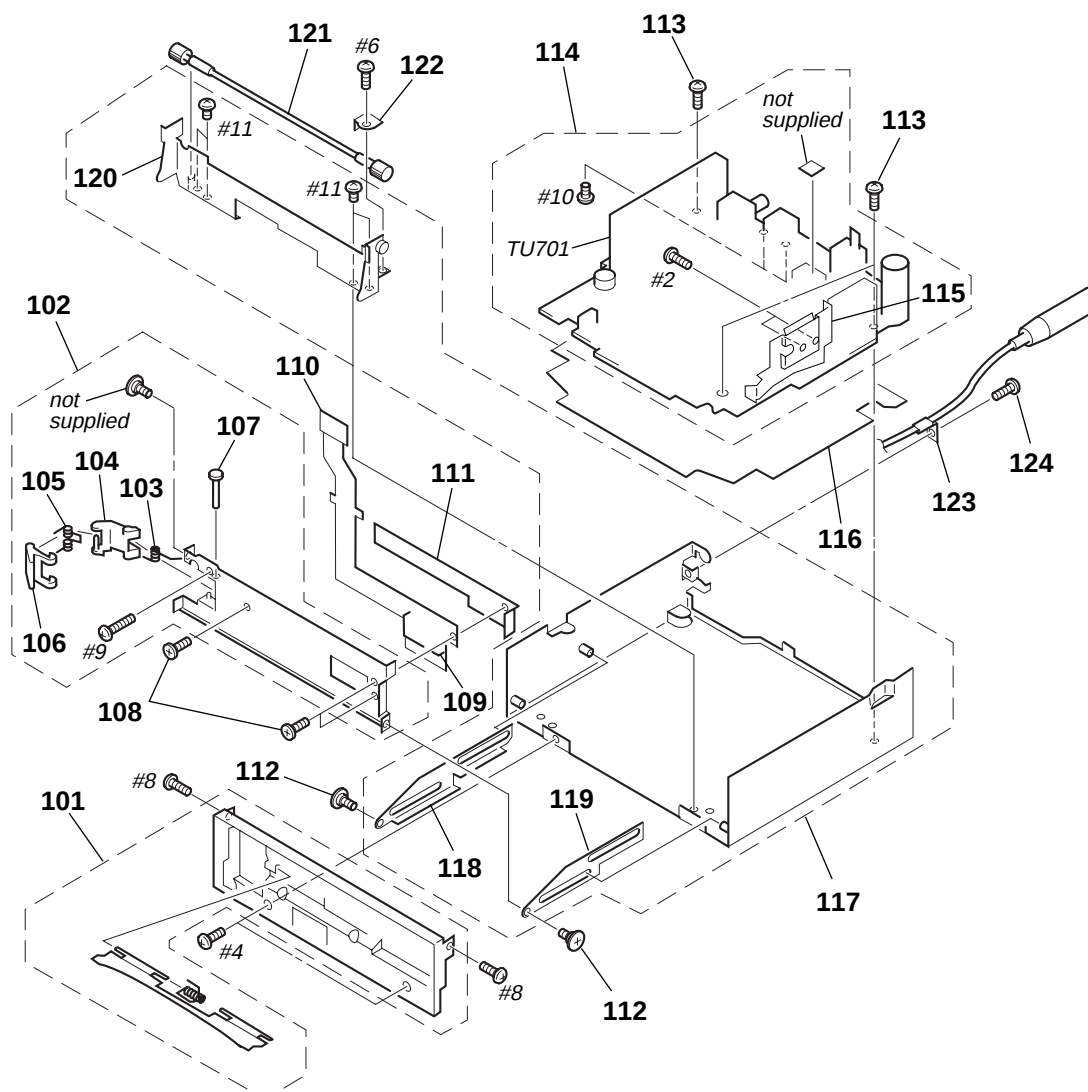


| Ref. No. | Part No.     | Description                | Remark | Ref. No. | Part No.     | Description                 | Remark |
|----------|--------------|----------------------------|--------|----------|--------------|-----------------------------|--------|
| 101      | X-3375-552-1 | PANEL ASSY, SUB            |        | * 114    | A-3313-956-A | MAIN BOARD, COMPLETE (US)   |        |
| 102      | X-3375-555-1 | PANEL ASSY, BASE           |        | * 114    | A-3317-107-A | MAIN BOARD, COMPLETE (E)    |        |
| 103      | 3-934-758-01 | SPRING (A)                 |        | * 115    | X-3376-177-1 | BRACKET (TRANSISTOR) ASSY   |        |
| 104      | 3-934-756-01 | ARM (LOCK)                 |        | * 116    | 3-026-748-01 | SHEET (INSULATING 90)       |        |
| 105      | 3-031-106-01 | SPRING (B90)               |        | * 117    | X-3375-551-1 | CHASSIS ASSY                |        |
| 106      | 3-934-757-01 | HOLDER (LOCK)              |        | 118      | X-3375-553-1 | LEVER (L) ASSY              |        |
| 107      | 3-934-755-01 | SHAFT (LOCK)               |        | 119      | X-3375-554-1 | LEVER (R) ASSY              |        |
| 108      | 3-909-607-01 | SCREW                      |        | 120      | X-3375-756-1 | CHASSIS (FRONT) ASSY        |        |
| 109      | 1-778-182-11 | SOCKET, CONNECTOR 18P      |        | 121      | X-3375-556-1 | SHAFT (PINION) ASSY         |        |
| 110      | 1-670-154-11 | FLEXIBLE BOARD             |        | * 122    | 3-025-792-01 | BRACKET (SHAFT PINION)      |        |
| * 111    | 3-025-782-01 | COVER (FLEXIBLE)           |        | 123      | 1-777-246-31 | CORD (WITH CONNECTOR) (ANT) |        |
| 112      | 3-025-783-01 | SCREW (M1.7), STEP         |        | 124      | 3-906-712-11 | SCREW (2.6X6) (CU), +PTT    |        |
| 113      | 3-906-713-01 | SCREW (+PTT), GROUND POINT |        | TU701    | A-3282-045-A | TUNER UNIT (TUX-012(E))     |        |

**5-4. CD MECHANISM SECTION (1)**  
**(MG-363S-121)**

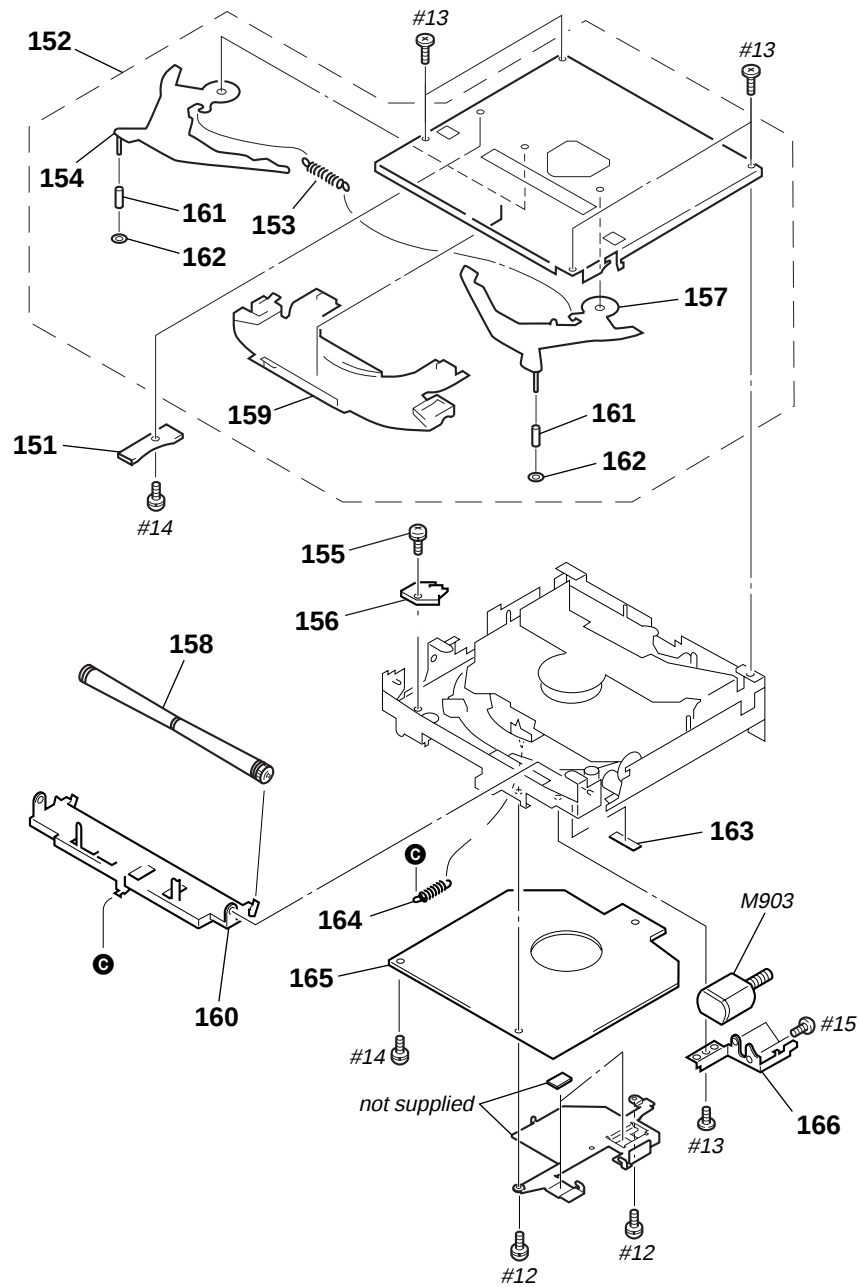


| Ref. No. | Part No.     | Description          | Remark | Ref. No. | Part No.     | Description                       | Remark |
|----------|--------------|----------------------|--------|----------|--------------|-----------------------------------|--------|
| * 151    | 1-659-836-11 | DISC IN SW BOARD     |        | 160      | 3-931-902-04 | ARM (ROLLER)                      |        |
| * 152    | A-3291-816-B | CHASSIS (T) SUB ASSY |        | 161      | 3-936-756-01 | ROLLER (D)                        |        |
| 153      | 3-931-909-01 | SPRING (LR), TENSION |        | 162      | 3-321-393-01 | WASHER, STOPPER                   |        |
| 154      | X-3371-501-1 | LEVER (L) ASSY       |        | * 163    | 3-939-139-01 | SPACER                            |        |
| 155      | 3-338-737-01 | SCREW (2X3), + PS    |        | 164      | 3-931-916-01 | SPRING (RA), TENSION              |        |
| * 156    | 1-659-837-11 | LOAD SW BOARD        |        | * 165    | A-3313-381-A | SERVO BOARD, COMPLETE             |        |
| 157      | X-3371-502-1 | LEVER (R) ASSY       |        | * 166    | 3-007-530-01 | BRACKET (MOTOR)                   |        |
| 158      | A-3301-203-A | ROLLER ASSY          |        | M903     | A-3291-676-A | MOTOR SUB ASSY, LOADING (LOADING) |        |
| 159      | 3-931-908-01 | GUIDE (DISC)         |        |          |              |                                   |        |

5-5. CD MECHANISM SECTION (2)  
(MG-363S-121)

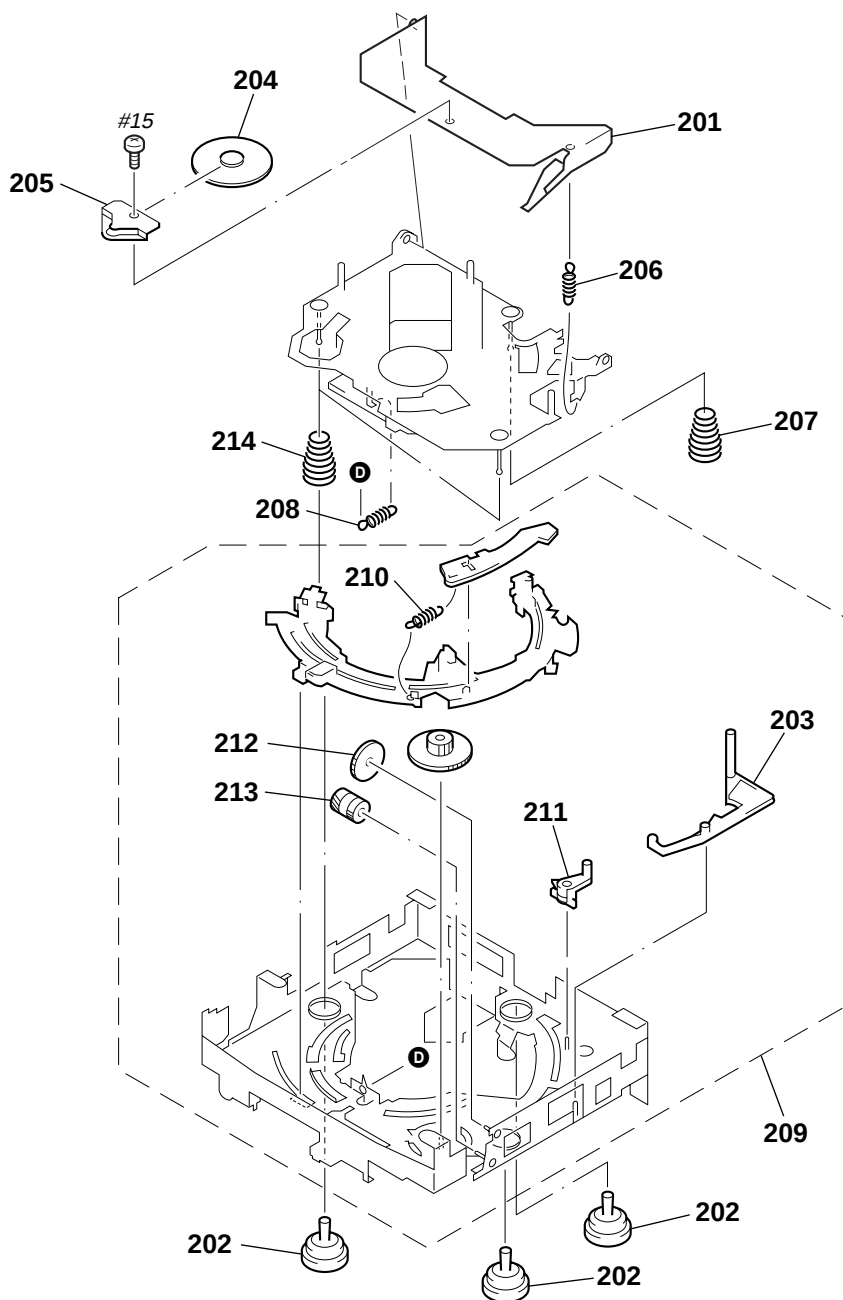

| Ref. No. | Part No.     | Description              | Remark | Ref. No. | Part No.     | Description              | Remark |
|----------|--------------|--------------------------|--------|----------|--------------|--------------------------|--------|
| 201      | 3-931-893-01 | ARM, CHUCKING            |        | 208      | 3-931-914-01 | SPRING (ANGLE), TENSION  |        |
| 202      | 3-931-897-01 | DAMPER (T)               |        | * 209    | A-3291-677-G | CHASSIS (M) ASSY         |        |
| 203      | 3-931-879-02 | LEVER (D)                |        | 210      | 3-931-883-01 | SPRING (TR), TENSION     |        |
| * 204    | 3-913-404-11 | RETAINER (DISC)          |        | 211      | 3-931-881-01 | LEVER (LOCK)             |        |
| 205      | 3-931-894-01 | BRACKET (CP)             |        | 212      | 3-931-882-02 | GEAR (MDL)               |        |
| 206      | 3-931-895-01 | SPRING (CH), TENSION     |        | 213      | 3-007-537-01 | WHEEL (U), WORM          |        |
| 207      | 3-931-898-01 | SPRING (FL), COMPRESSION |        | 214      | 3-931-898-11 | SPRING (FL), COMPRESSION |        |

**5-6. CD MECHANISM SECTION (3)**  
**(MG-363S-121)**

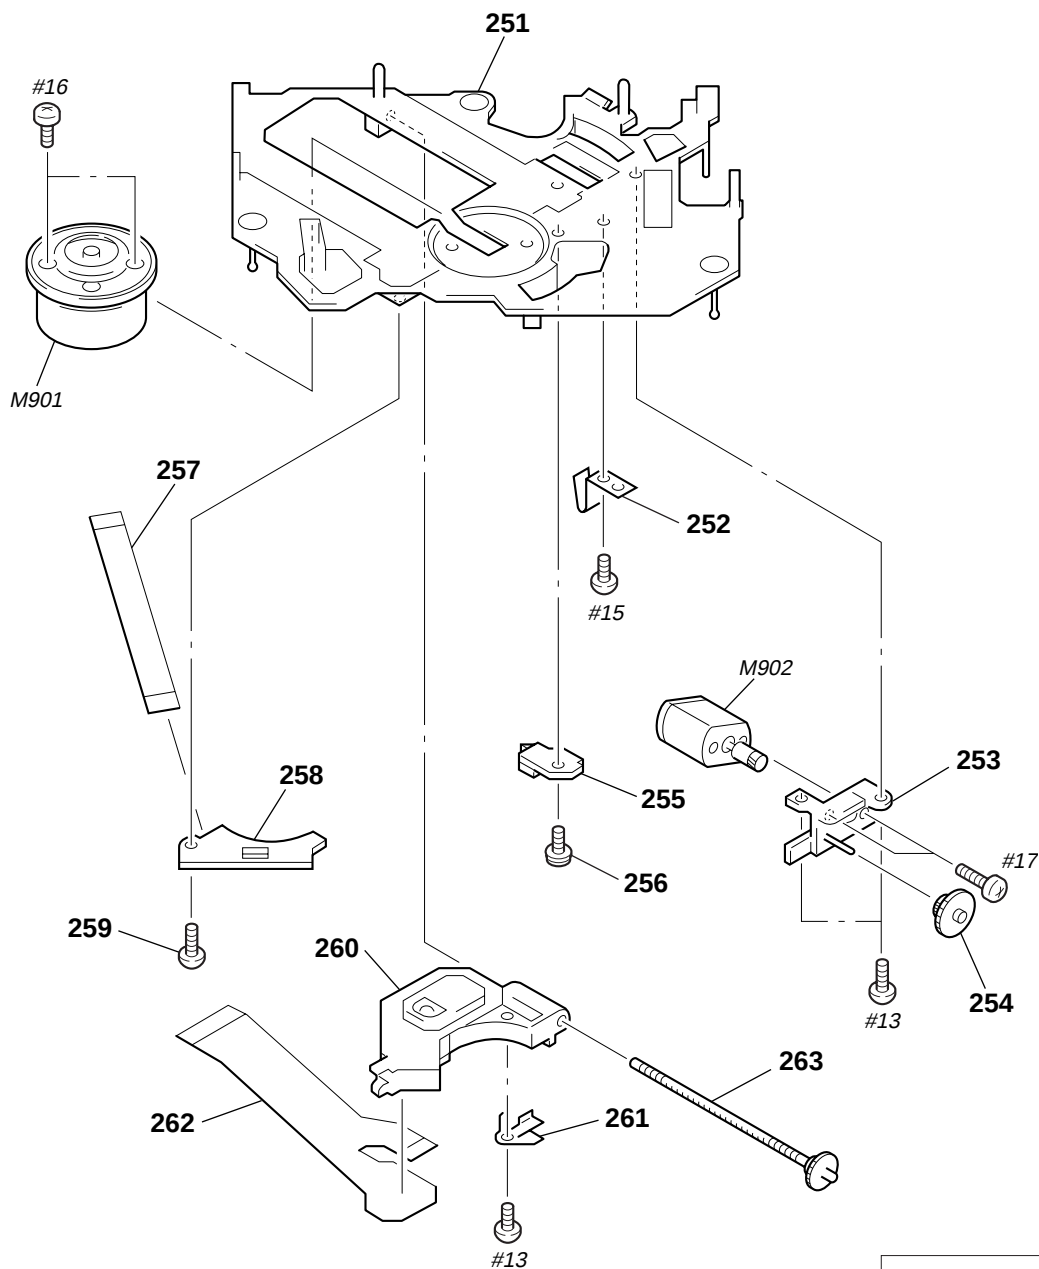

The components identified by mark  $\Delta$  or dotted line with mark.  $\Delta$  are critical for safety. Replace only with part number specified.

| Ref. No. | Part No.     | Description             | Remark | Ref. No.     | Part No.     | Description                    | Remark |
|----------|--------------|-------------------------|--------|--------------|--------------|--------------------------------|--------|
| * 251    | X-3374-022-1 | CHASSIS (OP) (O/S) ASSY |        | 259          | 3-909-607-01 | SCREW                          |        |
| 252      | 3-931-829-01 | SPRING (SL), PLATE      |        | $\Delta$ 260 | 8-848-402-02 | PICK-UP, OPTICAL KSS-520A/J2NP |        |
| 253      | X-3371-504-1 | BASE (DRIVING) ASSY     |        | 261          | 3-931-834-01 | SPRING (FEED), PLATE           |        |
| 254      | 3-931-832-01 | GEAR (SL MIDWAY)        |        | 262          | 1-659-881-11 | PICK-UP FLEXIBLE BOARD         |        |
| * 255    | 1-659-835-12 | LIMIT SW BOARD          |        | 263          | A-3291-669-A | SHAFT (FEED) ASSY              |        |
| 256      | 3-338-737-01 | SCREW (2X3), + PS       |        | M901         | X-3373-096-1 | MOTOR ASSY (SPINDLE)           |        |
| 257      | 1-659-880-11 | MOTOR FLEXIBLE BOARD    |        | M902         | A-3301-107-A | MOTOR ASSY, SLED (SLED)        |        |
| * 258    | 1-659-834-11 | SUB BOARD               |        |              |              |                                |        |

# AUDIO

## SECTION 6 ELECTRICAL PARTS LIST

### NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u :  $\mu$ , for example:  
uA.. :  $\mu$ A.. uPA.. :  $\mu$ PA..  
uPB.. :  $\mu$ PB.. uPC.. :  $\mu$ PC.. uPD.. :  $\mu$ PD..
- CAPACITORS  
uF :  $\mu$ F
- COILS  
uH :  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark.  $\Delta$  are critical for safety.  
Replace only with part number specified.

When indicating parts by reference number, please include the board.

| Ref. No. | Part No.     | Description                | Remark   |     |     |  | Ref. No. | Part No.     | Description                  | Remark  |     |     |  |
|----------|--------------|----------------------------|----------|-----|-----|--|----------|--------------|------------------------------|---------|-----|-----|--|
| *        | A-3294-476-A | AUDIO BOARD, COMPLETE (US) |          |     |     |  | C149     | 1-124-721-11 | ELECT                        | 10uF    | 20% | 50V |  |
| *        | A-3294-505-A | AUDIO BOARD, COMPLETE (E)  |          |     |     |  | C150     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
|          |              | *****                      |          |     |     |  | C151     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
|          |              |                            |          |     |     |  | C152     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
|          |              | < CAPACITOR >              |          |     |     |  | C153     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C103     | 1-115-339-11 | CERAMIC CHIP               | 0.1uF    | 10% | 50V |  | C154     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C104     | 1-115-339-11 | CERAMIC CHIP               | 0.1uF    | 10% | 50V |  | C155     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C105     | 1-104-535-11 | FILM CHIP                  | 470PF    | 5%  | 50V |  | C156     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C106     | 1-104-535-11 | FILM CHIP                  | 470PF    | 5%  | 50V |  | C157     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C107     | 1-104-535-11 | FILM CHIP                  | 470PF    | 5%  | 50V |  | C158     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C108     | 1-104-535-11 | FILM CHIP                  | 470PF    | 5%  | 50V |  | C159     | 1-163-251-11 | CERAMIC CHIP                 | 100PF   | 5%  | 50V |  |
| C109     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  | C162     | 1-124-698-11 | ELECT                        | 100uF   | 20% | 25V |  |
| C110     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  | C163     | 1-124-698-11 | ELECT                        | 100uF   | 20% | 25V |  |
| C111     | 1-104-543-11 | FILM CHIP                  | 0.0022uF | 5%  | 50V |  | C164     | 1-115-651-11 | ELECT                        | 100uF   | 20% | 16V |  |
| C112     | 1-104-543-11 | FILM CHIP                  | 0.0022uF | 5%  | 50V |  | C165     | 1-115-651-11 | ELECT                        | 100uF   | 20% | 16V |  |
| C113     | 1-104-851-11 | TANTAL. CHIP               | 10uF     | 20% | 10V |  | C166     | 1-163-009-11 | CERAMIC CHIP                 | 0.001uF | 10% | 50V |  |
| C114     | 1-104-851-11 | TANTAL. CHIP               | 10uF     | 20% | 10V |  | C167     | 1-163-009-11 | CERAMIC CHIP                 | 0.001uF | 10% | 50V |  |
| C115     | 1-115-340-11 | CERAMIC CHIP               | 0.22uF   | 10% | 25V |  | C168     | 1-115-339-11 | CERAMIC CHIP                 | 0.1uF   | 10% | 50V |  |
| C116     | 1-115-340-11 | CERAMIC CHIP               | 0.22uF   | 10% | 25V |  | C169     | 1-164-505-11 | CERAMIC                      | 2.2uF   |     | 16V |  |
| C117     | 1-163-251-11 | CERAMIC CHIP               | 100PF    | 5%  | 50V |  | C170     | 1-115-340-11 | CERAMIC CHIP                 | 0.22uF  | 10% | 25V |  |
| C118     | 1-115-339-11 | CERAMIC CHIP               | 0.1uF    | 10% | 50V |  | C171     | 1-115-340-11 | CERAMIC CHIP                 | 0.22uF  | 10% | 25V |  |
| C119     | 1-115-339-11 | CERAMIC CHIP               | 0.1uF    | 10% | 50V |  |          |              | < CONNECTOR >                |         |     |     |  |
| C120     | 1-104-953-11 | ELECT                      | 47uF     | 20% | 16V |  | CN101    | 1-784-608-11 | PLUG, CONNECTOR 16P          |         |     |     |  |
| C121     | 1-104-953-11 | ELECT                      | 47uF     | 20% | 16V |  | * CN102  | 1-506-946-11 | PIN, CONNECTOR 4P            |         |     |     |  |
| C122     | 1-110-454-11 | ELECT CHIP                 | 10uF     | 20% | 16V |  | * CN103  | 1-506-988-11 | PIN, CONNECTOR (PC BOARD) 6P |         |     |     |  |
| C123     | 1-104-851-11 | TANTAL. CHIP               | 10uF     | 20% | 10V |  | * CN104  | 1-506-946-11 | PIN, CONNECTOR 4P            |         |     |     |  |
| C124     | 1-104-851-11 | TANTAL. CHIP               | 10uF     | 20% | 10V |  | * CN105  | 1-506-988-11 | PIN, CONNECTOR (PC BOARD) 6P |         |     |     |  |
| C125     | 1-164-346-11 | CERAMIC CHIP               | 1uF      |     | 16V |  |          |              | < DIODE >                    |         |     |     |  |
| C126     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  | D101     | 8-719-988-62 | DIODE 1SS355                 |         |     |     |  |
| C127     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  | D102     | 8-719-988-62 | DIODE 1SS355                 |         |     |     |  |
| C128     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  | D103     | 8-719-056-76 | DIODE UDZ-TE-17-3.6B         |         |     |     |  |
| C129     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  |          |              | < IC >                       |         |     |     |  |
| C130     | 1-115-339-11 | CERAMIC CHIP               | 0.1uF    | 10% | 50V |  | IC101    | 8-759-711-85 | IC NJM4580E-D                |         |     |     |  |
| C131     | 1-115-339-11 | CERAMIC CHIP               | 0.1uF    | 10% | 50V |  | IC102    | 8-752-082-16 | IC CXA1946BR                 |         |     |     |  |
| C132     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  | IC103    | 8-759-539-56 | IC CS3310-KSR                |         |     |     |  |
| C133     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  | IC104    | 8-759-539-56 | IC CS3310-KSR                |         |     |     |  |
| C134     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  | IC105    | 8-759-711-85 | IC NJM4580E-D                |         |     |     |  |
| C135     | 1-164-732-11 | CERAMIC                    | 0.1uF    | 20% | 50V |  |          |              |                              |         |     |     |  |
| C142     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  | IC106    | 8-759-481-71 | IC OP275GP                   |         |     |     |  |
| C143     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  | IC107    | 8-759-481-71 | IC OP275GP                   |         |     |     |  |
| C144     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  | IC108    | 8-759-373-92 | IC TA79005SB                 |         |     |     |  |
| C145     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  | IC109    | 8-759-373-79 | IC TA7805SB                  |         |     |     |  |
| C146     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  |          |              |                              |         |     |     |  |
| C147     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  |          |              |                              |         |     |     |  |
| C148     | 1-124-721-11 | ELECT                      | 10uF     | 20% | 50V |  |          |              |                              |         |     |     |  |

| Ref. No.       | Part No.     | Description | Remark      |    |       |      | Ref. No.       | Part No.         | Description            | Remark  |     |       |  |
|----------------|--------------|-------------|-------------|----|-------|------|----------------|------------------|------------------------|---------|-----|-------|--|
| < TRANSISTOR > |              |             |             |    |       |      | R146           | 1-260-008-11     | CARBON MELF            | 10K     | 2%  | 1/8W  |  |
| Q101           | 8-729-921-25 | TRANSISTOR  | FMC2        |    |       |      | R147           | 1-216-033-00     | METAL CHIP             | 220     | 5%  | 1/10W |  |
| Q102           | 8-729-920-21 | TRANSISTOR  | DTC314TKH04 |    |       |      | R148           | 1-216-033-00     | METAL CHIP             | 220     | 5%  | 1/10W |  |
| Q103           | 8-729-920-21 | TRANSISTOR  | DTC314TKH04 |    |       |      | R149           | 1-259-987-11     | CARBON MELF            | 220     | 2%  | 1/8W  |  |
| Q104           | 8-729-920-21 | TRANSISTOR  | DTC314TKH04 |    |       |      | R150           | 1-259-987-11     | CARBON MELF            | 220     | 2%  | 1/8W  |  |
| Q105           | 8-729-920-21 | TRANSISTOR  | DTC314TKH04 |    |       |      | R151           | 1-259-987-11     | CARBON MELF            | 220     | 2%  | 1/8W  |  |
|                |              |             |             |    |       |      | R152           | 1-259-987-11     | CARBON MELF            | 220     | 2%  | 1/8W  |  |
| Q106           | 8-729-920-21 | TRANSISTOR  | DTC314TKH04 |    |       |      | R153           | 1-216-081-00     | METAL CHIP             | 22K     | 5%  | 1/10W |  |
| Q107           | 8-729-920-21 | TRANSISTOR  | DTC314TKH04 |    |       |      | R154           | 1-216-081-00     | METAL CHIP             | 22K     | 5%  | 1/10W |  |
| < RESISTOR >   |              |             |             |    |       |      | R155           | 1-260-012-11     | CARBON MELF            | 22K     | 2%  | 1/8W  |  |
| R103           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R156           | 1-260-012-11     | CARBON MELF            | 22K     | 2%  | 1/8W  |  |
| R104           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R157           | 1-260-012-11     | CARBON MELF            | 22K     | 2%  | 1/8W  |  |
| R105           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R158           | 1-260-012-11     | CARBON MELF            | 22K     | 2%  | 1/8W  |  |
| R106           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R165           | 1-216-238-00     | RES,CHIP               | 47K     | 2%  | 1/8W  |  |
| R107           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R166           | 1-216-238-00     | RES,CHIP               | 47K     | 2%  | 1/8W  |  |
|                |              |             |             |    |       |      | R167           | 1-216-210-00     | RES,CHIP               | 3.3K    | 2%  | 1/8W  |  |
| R108           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R168           | 1-216-210-00     | RES,CHIP               | 3.3K    | 2%  | 1/8W  |  |
| R109           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R169           | 1-216-825-11     | METAL CHIP             | 2.2K    | 5%  | 1/16W |  |
| R110           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | R170           | 1-216-825-11     | METAL CHIP             | 2.2K    | 5%  | 1/16W |  |
| R113           | 1-216-828-11 | METAL CHIP  | 3.9K        | 5% | 1/16W | (E)  | R171           | 1-216-825-11     | METAL CHIP             | 2.2K    | 5%  | 1/16W |  |
| R114           | 1-216-828-11 | METAL CHIP  | 3.9K        | 5% | 1/16W | (E)  | R172           | 1-216-825-11     | METAL CHIP             | 2.2K    | 5%  | 1/16W |  |
|                |              |             |             |    |       |      | R173           | 1-216-825-11     | METAL CHIP             | 2.2K    | 5%  | 1/16W |  |
| R117           | 1-216-864-11 | METAL CHIP  | 0           | 5% | 1/16W |      | R174           | 1-216-825-11     | METAL CHIP             | 2.2K    | 5%  | 1/16W |  |
| R118           | 1-216-821-11 | METAL CHIP  | 1K          | 5% | 1/16W | (E)  | < RELAY >      |                  |                        |         |     |       |  |
| R118           | 1-216-864-11 | METAL CHIP  | 0           | 5% | 1/16W | (US) | RY101          | 1-755-061-11     | RELAY                  | *****   |     |       |  |
| R119           | 1-216-864-11 | METAL CHIP  | 0           | 5% | 1/16W |      | * 1-659-836-11 | DISC IN SW BOARD | *****                  |         |     |       |  |
| R120           | 1-216-821-11 | METAL CHIP  | 1K          | 5% | 1/16W | (E)  | < SWITCH >     |                  |                        |         |     |       |  |
| R120           | 1-216-864-11 | METAL CHIP  | 0           | 5% | 1/16W | (US) | SW1            | 1-572-288-11     | SWITCH, PUSH (DISC IN) |         |     |       |  |
| R121           | 1-216-864-11 | METAL CHIP  | 0           | 5% | 1/16W |      | SW2            | 1-572-288-11     | SWITCH, PUSH (SELF)    |         |     |       |  |
| R122           | 1-216-864-11 | METAL CHIP  | 0           | 5% | 1/16W |      | *****          |                  |                        |         |     |       |  |
| R123           | 1-216-097-00 | RES,CHIP    | 100K        | 5% | 1/10W |      | * 1-670-686-11 | EL BOARD         | *****                  |         |     |       |  |
| R124           | 1-216-097-00 | RES,CHIP    | 100K        | 5% | 1/10W |      | < CAPACITOR >  |                  |                        |         |     |       |  |
| R125           | 1-216-097-00 | RES,CHIP    | 100K        | 5% | 1/10W |      | C551           | 1-124-233-11     | ELECT                  | 10uF    | 20% | 16V   |  |
| R126           | 1-208-399-61 | RES,CHIP    | 27          | 2% | 1/8W  |      | C552           | 1-115-339-11     | CERAMIC CHIP           | 0.1uF   | 10% | 50V   |  |
| R127           | 1-208-399-61 | RES,CHIP    | 27          | 2% | 1/8W  |      | C553           | 1-126-925-11     | ELECT                  | 470uF   | 20% | 10V   |  |
| R128           | 1-216-097-00 | RES,CHIP    | 100K        | 5% | 1/10W |      | C554           | 1-163-037-11     | CERAMIC CHIP           | 0.022uF | 10% | 25V   |  |
| R129           | 1-216-057-00 | METAL CHIP  | 2.2K        | 5% | 1/10W |      | C555           | 1-126-962-11     | ELECT                  | 3.3uF   | 20% | 50V   |  |
|                |              |             |             |    |       |      | C556           | 1-115-339-11     | CERAMIC CHIP           | 0.1uF   | 10% | 50V   |  |
| R130           | 1-216-101-00 | METAL CHIP  | 150K        | 5% | 1/10W |      | C557           | 1-163-009-11     | CERAMIC CHIP           | 0.001uF | 10% | 50V   |  |
| R135           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | < CONNECTOR >  |                  |                        |         |     |       |  |
| R136           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | * CN550        | 1-564-508-11     | PLUG, CONNECTOR 5P     |         |     |       |  |
| R137           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      | CN551          | 1-564-505-11     | PLUG, CONNECTOR 2P     |         |     |       |  |
| R138           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
|                |              |             |             |    |       |      |                |                  |                        |         |     |       |  |
| R139           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
| R140           | 1-260-004-11 | CARBON MELF | 4.7K        | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
| R141           | 1-260-008-11 | CARBON MELF | 10K         | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
| R142           | 1-260-008-11 | CARBON MELF | 10K         | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
| R143           | 1-260-008-11 | CARBON MELF | 10K         | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
|                |              |             |             |    |       |      |                |                  |                        |         |     |       |  |
| R144           | 1-260-008-11 | CARBON MELF | 10K         | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |
| R145           | 1-260-008-11 | CARBON MELF | 10K         | 2% | 1/8W  |      |                |                  |                        |         |     |       |  |

|    |          |         |      |
|----|----------|---------|------|
| EL | LIMIT SW | LOAD SW | MAIN |
|----|----------|---------|------|

| Ref. No. | Part No.     | Description                   | Remark |
|----------|--------------|-------------------------------|--------|
|          |              | < DIODE >                     |        |
| D550     | 8-719-978-24 | DIODE DTZ-TT11-5.6A           |        |
| D551     | 8-719-977-21 | DIODE DTZ8.2C                 |        |
| D552     | 8-719-988-62 | DIODE 1SS355                  |        |
| D553     | 8-719-060-48 | DIODE RB751V-40TE-17          |        |
| D554     | 8-719-978-24 | DIODE DTZ-TT11-5.6A           |        |
| D555     | 8-719-056-83 | DIODE Udz-TE-17-6.8B          |        |
|          |              | < IC >                        |        |
| IC550    | 8-759-495-75 | IC NJM317F                    |        |
|          |              | < TRANSISTOR >                |        |
| Q552     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| Q553     | 8-729-026-68 | TRANSISTOR 2SD2525(TP)        |        |
| Q554     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| Q555     | 8-729-106-60 | TRANSISTOR 2SB1115A           |        |
| Q556     | 8-729-046-09 | TRANSISTOR 2SD1864-R          |        |
| Q557     | 8-729-021-94 | FET 2SK1657-T1B               |        |
|          |              | < RESISTOR >                  |        |
| R552     | 1-216-214-00 | RES,CHIP 4.7K 5% 1/8W         |        |
| R553     | 1-216-214-00 | RES,CHIP 4.7K 5% 1/8W         |        |
| R555     | 1-216-158-00 | RES,CHIP 22 5% 1/8W           |        |
| R556     | 1-216-158-00 | RES,CHIP 22 5% 1/8W           |        |
| R557     | 1-216-003-11 | RES,CHIP 12 5% 1/10W          |        |
| R558     | 1-216-097-00 | RES,CHIP 100K 5% 1/10W        |        |
| R559     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W      |        |
| R560     | 1-216-068-00 | METAL CHIP 6.2K 5% 1/10W      |        |
| R561     | 1-216-174-00 | RES,CHIP 100 5% 1/8W          |        |
| R562     | 1-216-097-00 | RES,CHIP 100K 5% 1/10W        |        |
| R563     | 1-216-097-00 | RES,CHIP 100K 5% 1/10W        |        |
|          |              | < TRANSFORMER >               |        |
| T550     | 1-431-831-11 | TRANSFORMER, OSCILLATION (EL) |        |
| *****    |              |                               |        |
| *        | 1-659-835-12 | LIMIT SW BOARD                |        |
|          |              | *****                         |        |
|          |              | < SWITCH >                    |        |
| SW3      | 1-572-688-11 | SWITCH, PUSH (1 KEY) (LIMIT)  |        |
| *****    |              |                               |        |
| *        | 1-659-837-11 | LOAD SW BOARD                 |        |
|          |              | *****                         |        |
|          |              | < SWITCH >                    |        |
| SW4      | 1-572-288-11 | SWITCH, PUSH (DOWN)           |        |
| *****    |              |                               |        |

| Ref. No. | Part No.     | Description                 | Remark |
|----------|--------------|-----------------------------|--------|
| *        | A-3313-956-A | MAIN BOARD, COMPLETE (US)   |        |
| *        | A-3317-107-A | MAIN BOARD, COMPLETE (E)    |        |
| *****    |              |                             |        |
| *        | X-3376-177-1 | BRACKET (TRANSISTOR) ASSY   |        |
|          | 7-685-146-11 | SCREW +P 3X8 TYPE2 NON-SLIT |        |
|          | 7-685-792-09 | SCREW +PTT 2.6X6 (S)        |        |
|          |              | < BUZZER >                  |        |
| BZ300    | 1-504-920-11 | BUZZER                      |        |
|          |              | < CAPACITOR >               |        |
| C1       | 1-104-914-11 | TANTAL. CHIP 22uF 20% 16V   |        |
| C3       | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C4       | 1-104-851-11 | TANTAL. CHIP 10uF 20% 10V   |        |
| C5       | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C6       | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C7       | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C9       | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C12      | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C13      | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C14      | 1-124-910-11 | ELECT 47uF 20% 50V          |        |
| C15      | 1-163-291-11 | CERAMIC CHIP 15PF 5% 50V    |        |
| C16      | 1-163-287-11 | CERAMIC CHIP 10PF 5% 50V    |        |
| C17      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C18      | 1-115-651-11 | ELECT 100uF 20% 16V         |        |
| C19      | 1-115-651-11 | ELECT 100uF 20% 16V         |        |
| C20      | 1-124-698-11 | ELECT 100uF 20% 25V         |        |
| C21      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C22      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C23      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C24      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C25      | 1-115-651-11 | ELECT 100uF 20% 16V         |        |
| C26      | 1-115-651-11 | ELECT 100uF 20% 16V         |        |
| C27      | 1-124-698-11 | ELECT 100uF 20% 25V         |        |
| C28      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C29      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C30      | 1-104-852-11 | TANTAL. CHIP 22uF 20% 10V   |        |
| C31      | 1-110-359-11 | MYLAR 0.0047uF 5% 50V       |        |
| C32      | 1-110-355-11 | MYLAR 0.0022uF 5% 50V       |        |
| C33      | 1-115-651-11 | ELECT 100uF 20% 16V         |        |
| C34      | 1-164-732-11 | CERAMIC 0.1uF 20% 50V       |        |
| C35      | 1-164-732-11 | CERAMIC 0.1uF 20% 50V       |        |
| C36      | 1-115-651-11 | ELECT 100uF 20% 16V         |        |
| C37      | 1-164-732-11 | CERAMIC 0.1uF 20% 50V       |        |
| C38      | 1-164-732-11 | CERAMIC 0.1uF 20% 50V       |        |
| C39      | 1-110-355-11 | MYLAR 0.0022uF 5% 50V       |        |
| C40      | 1-110-359-11 | MYLAR 0.0047uF 5% 50V       |        |
| C41      | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C42      | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C43      | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V  |        |
| C44      | 1-124-910-11 | ELECT 47uF 20% 50V          |        |
| C46      | 1-124-698-11 | ELECT 100uF 20% 25V         |        |

| Ref. No. | Part No.     | Description   | Remark  |     |      | Ref. No. | Part No.     | Description   | Remark  |     |      |
|----------|--------------|---------------|---------|-----|------|----------|--------------|---------------|---------|-----|------|
| C47      | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C412     | 1-163-263-11 | CERAMIC CHIP  | 330PF   | 5%  | 50V  |
| C48      | 1-124-910-11 | ELECT         | 47uF    | 20% | 50V  | C413     | 1-115-866-11 | ELECT         | 4.7uF   | 20% | 35V  |
| C49      | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C415     | 1-124-703-11 | ELECT         | 2200uF  | 20% | 25V  |
| C50      | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C417     | 1-104-951-11 | ELECT         | 10uF    | 20% | 16V  |
| C51      | 1-164-732-11 | CERAMIC       | 0.1uF   | 20% | 50V  | C418     | 1-163-009-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  |
| C52      | 1-124-710-11 | ELECT         | 100uF   | 20% | 35V  | C420     | 1-163-263-11 | CERAMIC CHIP  | 330PF   | 5%  | 50V  |
| C53      | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C421     | 1-163-263-11 | CERAMIC CHIP  | 330PF   | 5%  | 50V  |
| C54      | 1-164-732-11 | CERAMIC       | 0.1uF   | 20% | 50V  | C422     | 1-163-263-11 | CERAMIC CHIP  | 330PF   | 5%  | 50V  |
| C55      | 1-124-710-11 | ELECT         | 100uF   | 20% | 35V  | C500     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C56      | 1-115-651-11 | ELECT         | 100uF   | 20% | 16V  | C501     | 1-104-913-11 | TANTAL. CHIP  | 10uF    | 20% | 16V  |
| C57      | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C502     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C58      | 1-115-581-11 | TANTAL. CHIP  | 100uF   | 20% | 16V  | C503     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C59      | 1-115-581-11 | TANTAL. CHIP  | 100uF   | 20% | 16V  | C504     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C60      | 1-164-346-11 | CERAMIC CHIP  | 1uF     |     | 16V  | C505     | 1-104-913-11 | TANTAL. CHIP  | 10uF    | 20% | 16V  |
| C61      | 1-163-113-00 | CERAMIC CHIP  | 68PF    | 5%  | 50V  | C506     | 1-104-913-11 | TANTAL. CHIP  | 10uF    | 20% | 16V  |
| C63      | 1-163-239-11 | CERAMIC CHIP  | 33PF    | 5%  | 50V  | C507     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C64      | 1-163-235-11 | CERAMIC CHIP  | 22PF    | 5%  | 50V  | C508     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C65      | 1-163-239-11 | CERAMIC CHIP  | 33PF    | 5%  | 50V  | C509     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C66      | 1-163-239-11 | CERAMIC CHIP  | 33PF    | 5%  | 50V  | C510     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C300     | 1-163-229-11 | CERAMIC CHIP  | 12PF    | 5%  | 50V  | C511     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C301     | 1-163-231-11 | CERAMIC CHIP  | 15PF    | 5%  | 50V  | C512     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C303     | 1-107-823-11 | CERAMIC CHIP  | 0.47uF  | 10% | 16V  | C600     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |
| C304     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C601     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |
| C305     | 1-104-851-11 | TANTAL. CHIP  | 10uF    | 20% | 10V  | C602     | 1-115-581-11 | TANTAL. CHIP  | 100uF   | 20% | 16V  |
| C306     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C603     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |
| C309     | 1-124-233-11 | ELECT         | 10uF    | 20% | 16V  | C604     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |
| C310     | 1-163-009-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  | C605     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |
| C311     | 1-163-009-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  | C606     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |
| C312     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C607     | 1-163-009-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  |
| C314     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C704     | 1-163-235-11 | CERAMIC CHIP  | 22PF    | 5%  | 50V  |
| C315     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C706     | 1-128-421-11 | ELECT         | 47uF    | 20% | 16V  |
| C316     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C707     | 1-128-421-11 | ELECT         | 47uF    | 20% | 16V  |
| C318     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C708     | 1-128-421-11 | ELECT         | 47uF    | 20% | 16V  |
| C319     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C709     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C320     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C710     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C371     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C711     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |
| C372     | 1-163-251-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C712     | 1-162-964-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  |
| C373     | 1-163-251-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C721     | 1-128-421-11 | ELECT         | 47uF    | 20% | 16V  |
| C374     | 1-163-251-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C722     | 1-162-970-11 | CERAMIC CHIP  | 0.01uF  | 10% | 25V  |
| C375     | 1-163-251-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C723     | 1-163-234-11 | CERAMIC CHIP  | 20PF    | 5%  | 50V  |
| C376     | 1-163-251-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C724     | 1-163-231-11 | CERAMIC CHIP  | 15PF    | 5%  | 50V  |
| C377     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  | C725     | 1-162-964-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  |
| C401     | 1-124-234-00 | ELECT         | 22uF    | 20% | 16V  | C726     | 1-162-927-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  |
| C402     | 1-125-710-11 | DOUBLE LAYERS | 0.1F    |     | 5.5V | C727     | 1-162-927-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  |
| C403     | 1-128-526-11 | ELECT         | 100uF   | 20% | 16V  | C728     | 1-162-927-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  |
| C404     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C733     | 1-115-330-11 | FILM          | 0.22uF  | 5%  | 50V  |
| C405     | 1-124-234-00 | ELECT         | 22uF    | 20% | 16V  | C771     | 1-135-091-00 | TANTALUM CHIP | 1uF     | 20% | 16V  |
| C406     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C774     | 1-128-436-11 | ELECT         | 1uF     | 20% | 50V  |
| C407     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C775     | 1-104-553-11 | FILM CHIP     | 0.015uF | 5%  | 16V  |
| C408     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  | C775     | 1-104-555-11 | FILM CHIP     | 0.022uF | 5%  | 16V  |
| C409     | 1-115-339-11 | CERAMIC CHIP  | 0.1uF   | 10% | 50V  |          |              |               |         |     | (E)  |
| C410     | 1-163-021-11 | CERAMIC CHIP  | 0.01uF  | 10% | 50V  |          |              |               |         |     | (US) |
| C411     | 1-115-866-11 | ELECT         | 4.7uF   | 20% | 35V  | C776     | 1-164-346-11 | CERAMIC CHIP  | 1uF     |     | 16V  |

# MAIN

| Ref. No. | Part No.     | Description                   | Remark  |     |      | Ref. No. | Part No.     | Description                      | Remark |
|----------|--------------|-------------------------------|---------|-----|------|----------|--------------|----------------------------------|--------|
| C779     | 1-163-037-11 | CERAMIC CHIP                  | 0.022uF | 10% | 25V  | * CN400  | 1-506-999-11 | PIN, CONNECTOR (PC BOARD) 3P     |        |
| C781     | 1-135-091-00 | TANTALUM CHIP                 | 1uF     | 20% | 16V  | * CN401  | 1-506-986-11 | PIN, CONNECTOR (PC BOARD) 4P     |        |
| C784     | 1-128-436-11 | ELECT                         | 1uF     | 20% | 50V  | * CN402  | 1-506-984-11 | PIN, CONNECTOR (PC BOARD) 2P     |        |
| C785     | 1-104-553-11 | FILM CHIP                     | 0.015uF | 5%  | 16V  | * CN403  | 1-750-141-11 | PIN, CONNECTOR (PC BOARD) 6P     |        |
|          |              |                               |         |     | (E)  | CN600    | 1-770-626-21 | PIN, CONNECTOR 9P                |        |
| C785     | 1-104-555-11 | FILM CHIP                     | 0.022uF | 5%  | 16V  |          |              |                                  |        |
|          |              |                               |         |     | (US) | * CN701  | 1-506-984-11 | PIN, CONNECTOR (PC BOARD) 2P     |        |
| C789     | 1-163-037-11 | CERAMIC CHIP                  | 0.022uF | 10% | 25V  | * CN801  | 1-506-998-11 | PIN, CONNECTOR (PC BOARD) 2P     |        |
| C792     | 1-163-809-11 | CERAMIC CHIP                  | 0.047uF | 10% | 25V  | CNJ301   | 1-580-907-31 | PLUG, CONNECTOR (BUS CONTROL IN) |        |
| C801     | 1-104-953-11 | ELECT                         | 47uF    | 20% | 16V  |          |              | < JACK >                         |        |
| C802     | 1-162-970-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 25V  |          |              |                                  |        |
| C804     | 1-162-970-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 25V  | CNJ300   | 1-778-831-11 | JACK 7P (REMOTE IN)              |        |
|          |              |                               |         |     |      |          |              | < DISCHARGE GAP >                |        |
| C805     | 1-104-951-11 | ELECT                         | 10uF    | 20% | 16V  |          |              |                                  |        |
| C806     | 1-104-951-11 | ELECT                         | 10uF    | 20% | 16V  | CP701    | 1-519-504-11 | GAP, DISCHARGE                   |        |
| C807     | 1-104-951-11 | ELECT                         | 10uF    | 20% | 16V  |          |              | < DIODE >                        |        |
| C808     | 1-162-970-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 25V  |          |              |                                  |        |
| C809     | 1-124-233-11 | ELECT                         | 10uF    | 20% | 16V  |          |              |                                  |        |
|          |              |                               |         |     |      | D300     | 8-719-988-62 | DIODE 1SS355                     |        |
| C813     | 1-163-263-11 | CERAMIC CHIP                  | 330PF   | 5%  | 50V  | D301     | 8-719-988-62 | DIODE 1SS355                     |        |
| C828     | 1-124-233-11 | ELECT                         | 10uF    | 20% | 16V  | D302     | 8-719-988-62 | DIODE 1SS355                     |        |
| C851     | 1-165-176-11 | CERAMIC CHIP                  | 0.047uF | 10% | 16V  | D303     | 8-719-105-99 | DIODE RD6.2M-B1                  |        |
| C852     | 1-107-826-11 | CERAMIC CHIP                  | 0.1uF   | 10% | 16V  | D304     | 8-719-056-93 | DIODE UDZ-TE-17-18B              |        |
| C853     | 1-162-964-11 | CERAMIC CHIP                  | 0.001uF | 10% | 50V  |          |              |                                  |        |
|          |              |                               |         |     |      | D305     | 8-719-056-93 | DIODE UDZ-TE-17-18B              |        |
| C854     | 1-164-227-11 | CERAMIC CHIP                  | 0.022uF | 10% | 25V  | D306     | 8-719-105-99 | DIODE RD6.2M-B1                  |        |
| C855     | 1-135-213-21 | TANTAL. CHIP                  | 3.3uF   | 20% | 25V  | D309     | 8-719-066-17 | DIODE FTZ6.8E-T148               |        |
| C856     | 1-163-245-11 | CERAMIC CHIP                  | 56PF    | 5%  | 50V  | D310     | 8-719-066-17 | DIODE FTZ6.8E-T148               |        |
| C857     | 1-163-986-00 | CERAMIC CHIP                  | 0.027uF | 10% | 25V  | D311     | 8-719-066-17 | DIODE FTZ6.8E-T148               |        |
| C858     | 1-162-970-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 25V  |          |              |                                  |        |
|          |              |                               |         |     |      | D312     | 8-719-988-62 | DIODE 1SS355                     |        |
| C859     | 1-104-913-11 | TANTAL. CHIP                  | 10uF    | 20% | 16V  | D313     | 8-719-988-62 | DIODE 1SS355                     |        |
| C860     | 1-162-970-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 25V  | D314     | 8-719-988-62 | DIODE 1SS355                     |        |
| C861     | 1-165-176-11 | CERAMIC CHIP                  | 0.047uF | 10% | 16V  | D370     | 8-719-976-99 | DIODE DTZ5.1B                    |        |
| C862     | 1-164-227-11 | CERAMIC CHIP                  | 0.022uF | 10% | 25V  | D371     | 8-719-976-99 | DIODE DTZ5.1B                    |        |
| C863     | 1-162-970-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 25V  |          |              |                                  |        |
|          |              |                               |         |     |      | D372     | 8-719-056-83 | DIODE UDZ-TE-17-6.8B             |        |
| C864     | 1-126-572-11 | ELECT                         | 4.7uF   | 20% | 35V  | D373     | 8-719-056-83 | DIODE UDZ-TE-17-6.8B             |        |
| C865     | 1-164-227-11 | CERAMIC CHIP                  | 0.022uF | 10% | 25V  | D374     | 8-719-914-44 | DIODE DAP202K                    |        |
| C866     | 1-162-962-11 | CERAMIC CHIP                  | 470PF   | 10% | 50V  | D400     | 8-719-975-40 | DIODE RB411D                     |        |
| C867     | 1-162-962-11 | CERAMIC CHIP                  | 470PF   | 10% | 50V  | D401     | 8-719-988-62 | DIODE 1SS355                     |        |
| C868     | 1-115-339-11 | CERAMIC CHIP                  | 0.1uF   | 10% | 50V  |          |              |                                  |        |
|          |              |                               |         |     |      | D402     | 8-719-056-88 | DIODE UDZ-TE-17-11B              |        |
| C891     | 1-104-760-11 | CERAMIC CHIP                  | 0.047uF | 10% | 50V  | D403     | 8-719-977-04 | DIODE DTZ5.6C                    |        |
| C893     | 1-115-185-11 | CERAMIC CHIP                  | 0.033uF | 10% | 50V  | D404     | 8-719-056-88 | DIODE UDZ-TE-17-11B              |        |
| C894     | 1-163-021-11 | CERAMIC CHIP                  | 0.01uF  | 10% | 50V  | D405     | 8-719-978-69 | DIODE DTZ-TT11-16B               |        |
| C895     | 1-163-809-11 | CERAMIC CHIP                  | 0.047uF | 10% | 25V  | D406     | 8-719-988-62 | DIODE 1SS355                     |        |
|          |              | < FILTER >                    |         |     |      |          |              |                                  |        |
| CF1      | 1-577-685-11 | FILTER, CRYSTAL (16.9344MHz)  |         |     |      | D409     | 8-719-988-62 | DIODE 1SS355                     |        |
|          |              | < CONNECTOR >                 |         |     |      | D410     | 8-719-056-83 | DIODE UDZ-TE-17-6.8B             |        |
| CN1      | 1-764-617-12 | PIN, CONNECTOR (PC BOARD) 30P |         |     |      | D412     | 8-719-056-83 | DIODE UDZ-TE-17-6.8B             |        |
| CN2      | 1-695-546-11 | PLUG, CONNECTOR (DIGITAL OUT) |         |     |      | D414     | 8-719-914-43 | DIODE DAN202K                    |        |
| * CN3    | 1-506-611-11 | PIN, CONNECTOR 8P             |         |     |      | D415     | 8-719-914-43 | DIODE DAN202K                    |        |
| CN4      | 1-784-609-11 | RECEPTACLE, CONNECTOR 16P     |         |     |      |          |              |                                  |        |
| * CN5    | 1-506-985-11 | PIN, CONNECTOR (PC BOARD) 3P  |         |     |      | D416     | 8-719-056-83 | DIODE UDZ-TE-17-6.8B             |        |
|          |              |                               |         |     |      | D417     | 8-719-313-73 | DIODE SFPB-52                    |        |
| * CN6    | 1-506-999-11 | PIN, CONNECTOR (PC BOARD) 3P  |         |     |      | D418     | 8-719-313-73 | DIODE SFPB-52                    |        |
| CN300    | 1-784-829-21 | CONNECTOR, FPC 21P            |         |     |      | D419     | 8-719-028-74 | DIODE NSQ03A04                   |        |
|          |              |                               |         |     |      | D422     | 8-719-056-83 | DIODE UDZ-TE-17-6.8B             |        |
|          |              |                               |         |     |      | D423     | 8-719-988-62 | DIODE 1SS355                     |        |

| Ref. No. | Part No.     | Description              | Remark | Ref. No. | Part No.     | Description                   | Remark |
|----------|--------------|--------------------------|--------|----------|--------------|-------------------------------|--------|
| D424     | 8-719-914-43 | DIODE DAN202K            |        | IC601    | 8-759-981-69 | IC LM2904M                    |        |
| D600     | 8-719-914-43 | DIODE DAN202K            |        | IC602    | 8-759-363-82 | IC PQ09TZ1U                   |        |
| D604     | 8-719-988-62 | DIODE 1SS355             |        | IC721    | 8-759-448-85 | IC BU2624FV-E2                |        |
| D605     | 8-719-988-62 | DIODE 1SS355             |        | IC771    | 8-759-064-92 | IC NJM5532M-D                 |        |
| D791     | 8-719-422-12 | DIODE MA8039             |        | IC801    | 8-759-363-82 | IC PQ09TZ1U                   |        |
| D801     | 8-719-914-43 | DIODE DAN202K            |        | IC802    | 8-759-525-12 | IC PQ1R47                     |        |
| D804     | 8-719-975-40 | DIODE RB411D             |        | IC851    | 8-759-349-99 | IC TA2051FN                   |        |
| D900     | 8-719-988-62 | DIODE 1SS355             |        |          |              | < COIL >                      |        |
|          |              | < DC/DC CONVERTER >      |        | L1       | 1-410-208-21 | INDUCTOR CHIP 22uH            |        |
| DD1      | 1-475-643-11 | CONVERTER UNIT, DC/DC    |        | L2       | 1-414-400-11 | INDUCTOR 22uH                 |        |
|          |              | < FERRITE BEAD >         |        | L3       | 1-414-398-11 | INDUCTOR 10uH                 |        |
| FB1      | 1-543-775-11 | FERRITE, EMI (SMD)       |        | L5       | 1-412-056-11 | INDUCTOR CHIP 4.7uH           |        |
| FB2      | 1-414-235-11 | INDUCTOR, FERRITE BEAD   |        | L300     | 1-414-400-11 | INDUCTOR 22uH                 |        |
| FB3      | 1-500-239-21 | FERRITE, EMI (SMD)       |        | L401     | 1-414-712-21 | INDUCTOR 1mH                  |        |
| FB4      | 1-500-445-21 | FERRITE, EMI (SMD)       |        | L500     | 1-414-400-11 | INDUCTOR 22uH                 |        |
| FB5      | 1-500-445-21 | FERRITE, EMI (SMD)       |        | L501     | 1-414-400-11 | INDUCTOR 22uH                 |        |
| FB6      | 1-500-445-21 | FERRITE, EMI (SMD)       |        | L502     | 1-414-400-11 | INDUCTOR 22uH                 |        |
| FB7      | 1-500-445-21 | FERRITE, EMI (SMD)       |        | L721     | 1-414-400-11 | INDUCTOR 22uH                 |        |
| FB401    | 1-500-445-21 | FERRITE, EMI (SMD)       |        | L851     | 1-414-400-11 | INDUCTOR 22uH                 |        |
| FB402    | 1-500-445-21 | FERRITE, EMI (SMD)       |        |          |              | < DIODE >                     |        |
| FB403    | 1-500-445-21 | FERRITE, EMI (SMD)       |        | LED300   | 8-719-033-13 | LED CL-170Y-CD-T (OPEN END)   |        |
| FB404    | 1-500-445-21 | FERRITE, EMI (SMD)       |        | LED302   | 8-719-033-13 | LED CL-170Y-CD-T (OPEN END)   |        |
| FB405    | 1-500-445-21 | FERRITE, EMI (SMD)       |        |          |              | < TRAP COIL >                 |        |
| FB406    | 1-500-445-21 | FERRITE, EMI (SMD)       |        | LF771    | 1-416-717-11 | COIL, TRAP                    |        |
| FB407    | 1-500-445-21 | FERRITE, EMI (SMD)       |        | LF781    | 1-416-717-11 | COIL, TRAP                    |        |
|          |              | < IC >                   |        |          |              | < IC LINK >                   |        |
| IC1      | 8-759-495-99 | IC CXD8679AQ             |        | PS1      | 1-533-674-11 | LINK, CHIP IC (ICP-S0.5) 0.5A |        |
| IC2      | 8-759-242-70 | IC TC7WU04F              |        |          |              | < TRANSISTOR >                |        |
| IC3      | 8-759-253-90 | IC PCM1702U-J            |        | Q300     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC4      | 8-759-253-90 | IC PCM1702U-J            |        | Q301     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC5      | 8-759-064-92 | IC NJM5532M-D            |        | Q303     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC6      | 8-759-064-92 | IC NJM5532M-D            |        | Q304     | 8-729-026-53 | TRANSISTOR 2SA1576A-T106-QR   |        |
| IC7      | 8-759-242-70 | IC TC7WU04F              |        | Q305     | 8-729-905-35 | TRANSISTOR 2SC4081T106R       |        |
| IC8      | 8-759-373-79 | IC TA7805SB              |        | Q308     | 8-729-027-23 | TRANSISTOR DTA114EKA-T146     |        |
| IC9      | 8-759-157-21 | IC PQ05TZ11              |        | Q309     | 8-729-027-23 | TRANSISTOR DTA114EKA-T146     |        |
| IC10     | 8-759-054-12 | IC PQ09RA1               |        | Q310     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC11     | 8-759-157-21 | IC PQ05TZ11              |        | Q311     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC300    | 8-759-542-47 | IC MB90F574PFV-G-139-BND |        | Q400     | 8-729-044-95 | TRANSISTOR 2SB1571-T1         |        |
| IC301    | 8-759-495-76 | IC RN5VD33AA-TL          |        | Q401     | 8-729-040-17 | TRANSISTOR 2SD2164-K          |        |
| IC302    | 8-759-449-89 | IC BA8270F-E2            |        | Q402     | 8-729-106-68 | TRANSISTOR 2SD1615A-GP        |        |
| IC303    | 8-759-253-82 | IC AT24C16N-10SI-TR      |        | Q403     | 8-729-106-68 | TRANSISTOR 2SD1615A-GP        |        |
| IC304    | 8-759-242-70 | IC TC7WU04F              |        | Q404     | 8-729-904-48 | TRANSISTOR DTB113EK           |        |
| IC400    | 8-759-443-41 | IC RH5VL40AA-T1C         |        | Q405     | 8-729-901-00 | TRANSISTOR DTC124EK           |        |
| IC500    | 8-759-337-66 | IC HD6413002F16          |        | Q406     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC501    | 8-759-035-93 | IC SC7S32F               |        | Q407     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC502    | 8-759-360-79 | IC TC7W14F(TE12R)        |        | Q408     | 8-729-920-82 | TRANSISTOR 2SB1188-QR         |        |
| IC503    | 8-759-544-63 | IC MBM29F800BA-70PFTN97  |        | Q411     | 8-729-900-53 | TRANSISTOR DTC114EK           |        |
| IC504    | 8-759-536-92 | IC KM684000BLGI-7T       |        |          |              |                               |        |
| IC505    | 8-759-234-20 | IC TC7S08F               |        |          |              |                               |        |
| IC600    | 8-759-276-89 | IC BA6285FP-E2           |        |          |              |                               |        |

# MAIN

| Ref. No.     | Part No.     | Description | Remark           |    |       |  | Ref. No. | Part No.     | Description |      |       | Remark |
|--------------|--------------|-------------|------------------|----|-------|--|----------|--------------|-------------|------|-------|--------|
| Q415         | 8-729-120-28 | TRANSISTOR  | 2SC1623-L5L6     |    |       |  | R300     | 1-216-821-11 | METAL CHIP  | 1K   | 5%    | 1/16W  |
| Q416         | 8-729-120-28 | TRANSISTOR  | 2SC1623-L5L6     |    |       |  | R301     | 1-216-821-11 | METAL CHIP  | 1K   | 5%    | 1/16W  |
| Q417         | 8-729-120-28 | TRANSISTOR  | 2SC1623-L5L6     |    |       |  | R302     | 1-216-821-11 | METAL CHIP  | 1K   | 5%    | 1/16W  |
| Q601         | 8-729-120-28 | TRANSISTOR  | 2SC1623-L5L6     |    |       |  | R309     | 1-216-809-11 | METAL CHIP  | 100  | 5%    | 1/16W  |
| Q603         | 8-729-026-49 | TRANSISTOR  | 2SA1037AK-T146-R |    |       |  | R310     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| Q605         | 8-729-900-53 | TRANSISTOR  | DTC114EK         |    |       |  | R311     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| Q702         | 8-729-901-00 | TRANSISTOR  | DTC124EK         |    |       |  | R312     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| Q703         | 8-729-120-28 | TRANSISTOR  | 2SC1623-L5L6     |    |       |  | R313     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| Q721         | 8-729-921-25 | TRANSISTOR  | FMC2             |    |       |  | R316     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| Q722         | 8-729-021-94 | FET         | 2SK1657-T1B      |    |       |  | R320     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| Q771         | 8-729-920-21 | TRANSISTOR  | DTC314TKH04      |    |       |  | R321     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| Q781         | 8-729-920-21 | TRANSISTOR  | DTC314TKH04      |    |       |  | R322     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| Q791         | 8-729-921-25 | TRANSISTOR  | FMC2             |    |       |  | R323     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| Q801         | 8-729-044-95 | TRANSISTOR  | 2SB1571-T1       |    |       |  | R324     | 1-216-833-11 | METAL CHIP  | 10K  | 5%    | 1/16W  |
| Q802         | 8-729-901-00 | TRANSISTOR  | DTC124EK         |    |       |  | R325     | 1-216-113-00 | METAL CHIP  | 470K | 5%    | 1/10W  |
| Q803         | 8-729-904-07 | TRANSISTOR  | FMG2             |    |       |  | R326     | 1-216-017-00 | RES,CHIP    | 47   | 5%    | 1/10W  |
| Q804         | 8-729-904-48 | TRANSISTOR  | DTB113EK         |    |       |  | R328     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| Q805         | 8-729-904-48 | TRANSISTOR  | DTB113EK         |    |       |  | R329     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| Q900         | 8-729-028-83 | TRANSISTOR  | DTA124EUA-T106   |    |       |  | R330     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| < RESISTOR > |              |             |                  |    |       |  | R331     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| R1           | 1-259-991-11 | CARBON MELF | 470              | 2% | 1/8W  |  | R332     | 1-216-041-00 | METAL CHIP  | 470  | 5%    | 1/10W  |
| R2           | 1-260-032-11 | CARBON MELF | 1M               | 2% | 1/8W  |  | R333     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| R3           | 1-216-041-00 | METAL CHIP  | 470              | 5% | 1/10W |  | R334     | 1-208-806-11 | RES,CHIP    | 10K  | 0.50% | 1/10W  |
| R4           | 1-216-041-00 | METAL CHIP  | 470              | 5% | 1/10W |  | R335     | 1-208-806-11 | RES,CHIP    | 10K  | 0.50% | 1/10W  |
| R5           | 1-216-295-00 | SHORT       | 0                |    |       |  | R336     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| R6           | 1-216-041-00 | METAL CHIP  | 470              | 5% | 1/10W |  | R337     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| R7           | 1-216-069-00 | METAL CHIP  | 6.8K             | 5% | 1/10W |  | R338     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| R8           | 1-216-029-00 | METAL CHIP  | 150              | 5% | 1/10W |  | R339     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| R9           | 1-216-049-11 | RES,CHIP    | 1K               | 5% | 1/10W |  | R340     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R11          | 1-216-295-00 | SHORT       | 0                |    |       |  | R341     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R12          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R342     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R13          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R343     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R14          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R344     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R15          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R345     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R16          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R346     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |
| R17          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R347     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| R18          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R348     | 1-216-081-00 | METAL CHIP  | 22K  | 5%    | 1/10W  |
| R19          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R349     | 1-216-081-00 | METAL CHIP  | 22K  | 5%    | 1/10W  |
| R21          | 1-259-997-11 | CARBON MELF | 1.5K             | 2% | 1/8W  |  | R350     | 1-216-089-00 | RES,CHIP    | 47K  | 5%    | 1/10W  |
| R22          | 1-259-995-11 | CARBON MELF | 1K               | 2% | 1/8W  |  | R351     | 1-216-073-00 | METAL CHIP  | 10K  | 5%    | 1/10W  |
| R23          | 1-259-995-11 | CARBON MELF | 1K               | 2% | 1/8W  |  | R352     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| R25          | 1-259-997-11 | CARBON MELF | 1.5K             | 2% | 1/8W  |  | R353     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
| R26          | 1-259-995-11 | CARBON MELF | 1K               | 2% | 1/8W  |  | R354     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| R27          | 1-259-995-11 | CARBON MELF | 1K               | 2% | 1/8W  |  | R355     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| R28          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R356     | 1-208-806-11 | RES,CHIP    | 10K  | 0.50% | 1/10W  |
| R29          | 1-208-399-61 | RES,CHIP    | 27               | 2% | 1/8W  |  | R357     | 1-216-073-00 | METAL CHIP  | 10K  | 5%    | 1/10W  |
| R30          | 1-216-295-00 | SHORT       | 0                |    |       |  | R358     | 1-216-808-11 | METAL CHIP  | 82   | 5%    | 1/16W  |
| R31          | 1-216-065-00 | RES,CHIP    | 4.7K             | 5% | 1/10W |  | R359     | 1-216-845-11 | METAL CHIP  | 100K | 5%    | 1/16W  |
| R32          | 1-260-005-11 | CARBON MELF | 5.6K             | 2% | 1/8W  |  | R360     | 1-216-097-00 | RES,CHIP    | 100K | 5%    | 1/10W  |
| R33          | 1-260-016-11 | CARBON MELF | 47K              | 2% | 1/8W  |  | R361     | 1-216-057-00 | METAL CHIP  | 2.2K | 5%    | 1/10W  |
| R34          | 1-260-005-11 | CARBON MELF | 5.6K             | 2% | 1/8W  |  | R362     | 1-216-057-00 | METAL CHIP  | 2.2K | 5%    | 1/10W  |
| R35          | 1-260-016-11 | CARBON MELF | 47K              | 2% | 1/8W  |  | R363     | 1-216-025-00 | RES,CHIP    | 100  | 5%    | 1/10W  |
|              |              |             |                  |    |       |  | R364     | 1-216-049-11 | RES,CHIP    | 1K   | 5%    | 1/10W  |

| Ref. No. | Part No.     | Description |      |    | Remark | Ref. No. | Part No.     | Description |      |    | Remark       |
|----------|--------------|-------------|------|----|--------|----------|--------------|-------------|------|----|--------------|
| R366     | 1-216-037-00 | METAL CHIP  | 330  | 5% | 1/10W  | R520     | 1-216-295-00 | SHORT       | 0    |    |              |
| R371     | 1-216-049-11 | RES,CHIP    | 1K   | 5% | 1/10W  | R521     | 1-216-845-11 | METAL CHIP  | 100K | 5% | 1/16W        |
| R372     | 1-216-049-11 | RES,CHIP    | 1K   | 5% | 1/10W  | R522     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/16W        |
| R373     | 1-216-023-00 | METAL CHIP  | 82   | 5% | 1/10W  | R523     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W        |
| R375     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R601     | 1-216-025-00 | RES,CHIP    | 100  | 5% | 1/10W        |
| R376     | 1-216-845-11 | METAL CHIP  | 100K | 5% | 1/16W  | R602     | 1-216-033-00 | METAL CHIP  | 220  | 5% | 1/10W        |
| R377     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R603     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W        |
| R400     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R606     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W        |
| R401     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R607     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W        |
| R402     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R608     | 1-216-081-00 | METAL CHIP  | 22K  | 5% | 1/10W        |
| R403     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R609     | 1-216-103-00 | METAL CHIP  | 180K | 5% | 1/10W        |
| R404     | 1-216-077-00 | METAL CHIP  | 15K  | 5% | 1/10W  | R610     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W        |
| R405     | 1-216-041-00 | METAL CHIP  | 470  | 5% | 1/10W  | R611     | 1-217-671-11 | METAL CHIP  | 1    | 5% | 1/10W        |
| R406     | 1-216-041-00 | METAL CHIP  | 470  | 5% | 1/10W  | R612     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W        |
| R407     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R701     | 1-216-295-00 | SHORT       | 0    |    |              |
| R408     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R702     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/16W        |
| R409     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R703     | 1-216-827-11 | METAL CHIP  | 3.3K | 5% | 1/16W        |
| R410     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R704     | 1-216-815-11 | METAL CHIP  | 330  | 5% | 1/16W        |
| R411     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R705     | 1-216-049-11 | RES,CHIP    | 1K   | 5% | 1/10W        |
| R412     | 1-216-089-00 | RES,CHIP    | 47K  | 5% | 1/10W  | R706     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/16W        |
| R415     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R707     | 1-216-841-11 | METAL CHIP  | 47K  | 5% | 1/16W        |
| R416     | 1-216-085-00 | METAL CHIP  | 33K  | 5% | 1/10W  | R710     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/16W        |
| R417     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R711     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/16W        |
| R418     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R713     | 1-216-864-11 | METAL CHIP  | 0    | 5% | 1/16W        |
| R419     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R721     | 1-216-827-11 | METAL CHIP  | 3.3K | 5% | 1/16W        |
| R420     | 1-216-089-00 | RES,CHIP    | 47K  | 5% | 1/10W  | R722     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W        |
| R421     | 1-216-081-00 | METAL CHIP  | 22K  | 5% | 1/10W  | R725     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W        |
| R422     | 1-216-089-00 | RES,CHIP    | 47K  | 5% | 1/10W  | R727     | 1-216-821-11 | METAL CHIP  | 1K   | 5% | 1/16W        |
| R423     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R732     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W        |
| R424     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R734     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/16W        |
| R425     | 1-216-081-00 | METAL CHIP  | 22K  | 5% | 1/10W  | R735     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/16W        |
| R426     | 1-216-089-00 | RES,CHIP    | 47K  | 5% | 1/10W  | R736     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/16W        |
| R427     | 1-216-089-00 | RES,CHIP    | 47K  | 5% | 1/10W  | R761     | 1-216-296-00 | SHORT       | 0    |    |              |
| R428     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R763     | 1-216-296-00 | SHORT       | 0    |    |              |
| R429     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R771     | 1-216-212-00 | RES,CHIP    | 3.9K | 2% | 1/8W<br>(US) |
| R430     | 1-216-073-00 | METAL CHIP  | 10K  | 5% | 1/10W  | R771     | 1-216-216-00 | RES,CHIP    | 5.6K | 2% | 1/8W<br>(E)  |
| R431     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R772     | 1-216-208-00 | RES,CHIP    | 2.7K | 2% | 1/8W<br>(E)  |
| R432     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R772     | 1-216-210-00 | RES,CHIP    | 3.3K | 2% | 1/8W<br>(US) |
| R433     | 1-216-057-00 | METAL CHIP  | 2.2K | 5% | 1/10W  | R773     | 1-216-296-00 | SHORT       | 0    |    |              |
| R500     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R775     | 1-216-246-00 | RES,CHIP    | 100K | 2% | 1/8W         |
| R501     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R776     | 1-208-476-11 | RES,CHIP    | 390  | 2% | 1/8W<br>(E)  |
| R503     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R776     | 1-208-478-11 | RES,CHIP    | 470  | 2% | 1/8W<br>(US) |
| R504     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R777     | 1-208-486-61 | RES,CHIP    | 1K   | 2% | 1/8W         |
| R506     | 1-216-049-11 | RES,CHIP    | 1K   | 5% | 1/10W  | R781     | 1-216-212-00 | RES,CHIP    | 3.9K | 2% | 1/8W<br>(US) |
| R508     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  | R781     | 1-216-216-00 | RES,CHIP    | 5.6K | 2% | 1/8W<br>(E)  |
| R509     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  |          |              |             |      |    |              |
| R510     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  |          |              |             |      |    |              |
| R511     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  |          |              |             |      |    |              |
| R512     | 1-216-097-00 | RES,CHIP    | 100K | 5% | 1/10W  |          |              |             |      |    |              |
| R515     | 1-216-295-00 | SHORT       | 0    |    |        |          |              |             |      |    |              |
| R517     | 1-216-041-00 | METAL CHIP  | 470  | 5% | 1/10W  |          |              |             |      |    |              |
| R518     | 1-216-041-00 | METAL CHIP  | 470  | 5% | 1/10W  |          |              |             |      |    |              |
| R519     | 1-216-049-11 | RES,CHIP    | 1K   | 5% | 1/10W  |          |              |             |      |    |              |

|      |        |       |
|------|--------|-------|
| MAIN | SENSOR | SERVO |
|------|--------|-------|

| Ref. No.             | Part No.     | Description       |      |        | Remark       |
|----------------------|--------------|-------------------|------|--------|--------------|
| R782                 | 1-216-208-00 | RES,CHIP          | 2.7K | 2%     | 1/8W<br>(E)  |
| R782                 | 1-216-210-00 | RES,CHIP          | 3.3K | 2%     | 1/8W<br>(US) |
| R783                 | 1-216-296-00 | SHORT             | 0    |        |              |
| R785                 | 1-216-246-00 | RES,CHIP          | 100K | 2%     | 1/8W         |
| R786                 | 1-208-476-11 | RES,CHIP          | 390  | 2%     | 1/8W<br>(E)  |
| R786                 | 1-208-478-11 | RES,CHIP          | 470  | 2%     | 1/8W<br>(US) |
| R787                 | 1-208-486-61 | RES,CHIP          | 1K   | 2%     | 1/8W         |
| R791                 | 1-216-295-00 | SHORT             | 0    |        |              |
| R792                 | 1-216-295-00 | SHORT             | 0    |        |              |
| R794                 | 1-216-846-11 | METAL CHIP        | 120K | 5%     | 1/16W<br>(E) |
| R794                 | 1-216-864-11 | METAL CHIP        | 0    | 5%     | 1/16W        |
| R801                 | 1-216-073-00 | METAL CHIP        | 10K  | 5%     | 1/10W        |
| R802                 | 1-216-057-00 | METAL CHIP        | 2.2K | 5%     | 1/10W        |
| R803                 | 1-216-057-00 | METAL CHIP        | 2.2K | 5%     | 1/10W        |
| R804                 | 1-216-057-00 | METAL CHIP        | 2.2K | 5%     | 1/10W        |
| R805                 | 1-216-057-00 | METAL CHIP        | 2.2K | 5%     | 1/10W        |
| R806                 | 1-216-845-11 | METAL CHIP        | 100K | 5%     | 1/16W        |
| R824                 | 1-216-864-11 | METAL CHIP        | 0    | 5%     | 1/16W        |
| R825                 | 1-216-845-11 | METAL CHIP        | 100K | 5%     | 1/16W        |
| R851                 | 1-216-834-11 | METAL CHIP        | 12K  | 5%     | 1/16W        |
| R852                 | 1-216-833-11 | METAL CHIP        | 10K  | 5%     | 1/16W        |
| R853                 | 1-216-813-11 | METAL CHIP        | 220  | 5%     | 1/16W        |
| R854                 | 1-216-839-11 | METAL CHIP        | 33K  | 5%     | 1/16W        |
| R855                 | 1-216-810-11 | METAL CHIP        | 120  | 5%     | 1/16W        |
| R856                 | 1-216-834-11 | METAL CHIP        | 12K  | 5%     | 1/16W        |
| R857                 | 1-216-831-11 | METAL CHIP        | 6.8K | 5%     | 1/16W        |
| R858                 | 1-216-095-00 | METAL CHIP        | 82K  | 5%     | 1/10W        |
| R893                 | 1-216-097-00 | RES,CHIP          | 100K | 5%     | 1/10W        |
| R894                 | 1-216-065-00 | RES,CHIP          | 4.7K | 5%     | 1/10W        |
| R895                 | 1-216-057-00 | METAL CHIP        | 2.2K | 5%     | 1/10W        |
| R896                 | 1-216-295-00 | SHORT             | 0    |        |              |
| R897                 | 1-216-295-00 | SHORT             | 0    |        |              |
| R999                 | 1-216-864-11 | METAL CHIP        | 0    | 5%     | 1/16W        |
| < NETWORK RESISTOR > |              |                   |      |        |              |
| RB300                | 1-233-412-11 | RES, CHIP NETWORK | 1.0K | (3216) |              |
| RB501                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB502                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB503                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB504                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB505                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB506                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB507                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB508                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB509                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB510                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB511                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB512                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |
| RB513                | 1-216-182-00 | RES, CHIP NETWORK | 220  | (3216) |              |

| Ref. No.                  | Part No.     | Description                      |       |        |       | Remark |
|---------------------------|--------------|----------------------------------|-------|--------|-------|--------|
| RB514                     | 1-216-182-00 | RES, CHIP NETWORK                | 220   | (3216) |       |        |
| RB515                     | 1-216-182-00 | RES, CHIP NETWORK                | 220   | (3216) |       |        |
| < THERMISTOR (POSITIVE) > |              |                                  |       |        |       |        |
| TH401                     | 1-809-148-11 | THERMISTOR, POSITIVE             |       |        |       |        |
| TH402                     | 1-809-148-11 | THERMISTOR, POSITIVE             |       |        |       |        |
| < TUNER >                 |              |                                  |       |        |       |        |
| TU701                     | A-3282-045-A | TUNER UNIT (TUX-012(E))          |       |        |       |        |
| < VIBRATOR >              |              |                                  |       |        |       |        |
| X1                        | 1-767-338-11 | VIBRATOR, CRYSTAL (11.2896MHz)   |       |        |       |        |
| X300                      | 1-781-002-11 | VIBRATOR, CERAMIC (3.68MHz)      |       |        |       |        |
| X301                      | 1-579-886-21 | VIBRATOR, CRYSTAL (32.768kHz)    |       |        |       |        |
| X500                      | 1-767-426-21 | VIBRATOR, CERAMIC (14.74MHz)     |       |        |       |        |
| X721                      | 1-567-848-11 | VIBRATOR, CRYSTAL (7.2MHz)       |       |        |       |        |
| *****                     |              |                                  |       |        |       |        |
| *                         | 1-668-190-11 | SENSOR BOARD                     |       |        |       |        |
| *****                     |              |                                  |       |        |       |        |
| < CAPACITOR >             |              |                                  |       |        |       |        |
| C621                      | 1-115-339-11 | CERAMIC CHIP                     | 0.1uF | 10%    | 50V   |        |
| < CONNECTOR >             |              |                                  |       |        |       |        |
| CN620                     | 1-770-626-21 | PIN, CONNECTOR 9P                |       |        |       |        |
| * CN621                   | 1-691-741-21 | PIN, CONNECTOR (PC BOARD) 2P     |       |        |       |        |
| < RESISTOR >              |              |                                  |       |        |       |        |
| R620                      | 1-216-097-00 | RES,CHIP                         | 100K  | 5%     | 1/10W |        |
| R621                      | 1-216-097-00 | RES,CHIP                         | 100K  | 5%     | 1/10W |        |
| R622                      | 1-216-097-00 | RES,CHIP                         | 100K  | 5%     | 1/10W |        |
| R623                      | 1-216-097-00 | RES,CHIP                         | 100K  | 5%     | 1/10W |        |
| < SWITCH >                |              |                                  |       |        |       |        |
| S620                      | 1-572-688-11 | SWITCH, PUSH (1 KEY) (OPEN END)  |       |        |       |        |
| S621                      | 1-572-688-11 | SWITCH, PUSH (1 KEY) (CLOSE END) |       |        |       |        |
| S622                      | 1-572-688-11 | SWITCH, PUSH (1 KEY) (10 DEG)    |       |        |       |        |
| S623                      | 1-572-688-11 | SWITCH, PUSH (1 KEY) (20 DEG)    |       |        |       |        |
| S630                      | 1-692-431-21 | SWITCH, TACTILE (RESET)          |       |        |       |        |
| *****                     |              |                                  |       |        |       |        |
| *                         | A-3313-381-A | SERVO BOARD, COMPLETE            |       |        |       |        |
| *****                     |              |                                  |       |        |       |        |
| < CAPACITOR >             |              |                                  |       |        |       |        |
| C1                        | 1-113-642-11 | TANTAL. CHIP                     | 47uF  | 20%    | 10V   |        |
| C2                        | 1-115-581-11 | TANTAL. CHIP                     | 100uF | 20%    | 16V   |        |
| C3                        | 1-164-004-11 | CERAMIC CHIP                     | 0.1uF | 10%    | 25V   |        |
| C4                        | 1-110-456-11 | ELECT CHIP                       | 47uF  | 20%    | 16V   |        |
| C101                      | 1-164-004-11 | CERAMIC CHIP                     | 0.1uF | 10%    | 25V   |        |
| C102                      | 1-115-581-11 | TANTAL. CHIP                     | 100uF | 20%    | 16V   |        |
| C105                      | 1-115-581-11 | TANTAL. CHIP                     | 100uF | 20%    | 16V   |        |
| C106                      | 1-164-004-11 | CERAMIC CHIP                     | 0.1uF | 10%    | 25V   |        |

| Ref. No.      | Part No.     | Description                       |          |     |     | Remark | Ref. No.       | Part No.     | Description         |              |    |       | Remark |
|---------------|--------------|-----------------------------------|----------|-----|-----|--------|----------------|--------------|---------------------|--------------|----|-------|--------|
| C107          | 1-115-581-11 | TANTAL. CHIP                      | 100uF    | 20% | 16V |        | IC2            | 8-752-374-12 | IC CXD2522R-T6      |              |    |       |        |
| C108          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | IC4            | 8-759-427-15 | IC MB814400C-70PFTN |              |    |       |        |
| C109          | 1-115-581-11 | TANTAL. CHIP                      | 100uF    | 20% | 16V |        | IC5            | 8-752-889-54 | IC CXP84640-011Q    |              |    |       |        |
| C110          | 1-163-251-11 | CERAMIC CHIP                      | 100PF    | 5%  | 50V |        | IC6            | 8-759-823-87 | IC LB1638M          |              |    |       |        |
| C111          | 1-163-005-11 | CERAMIC CHIP                      | 470PF    | 10% | 50V |        | IC7            | 8-759-370-18 | IC BA6797FP-E2      |              |    |       |        |
|               |              |                                   |          |     |     |        |                |              |                     |              |    |       |        |
| C112          | 1-164-489-11 | CERAMIC CHIP                      | 0.22uF   | 10% | 16V |        | IC501          | 8-752-378-67 | IC CXD2548R         |              |    |       |        |
| C113          | 1-163-005-11 | CERAMIC CHIP                      | 470PF    | 10% | 50V |        | IC551          | 8-759-428-57 | IC LC89170M-TLM     |              |    |       |        |
| C203          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | IC601          | 8-759-335-52 | IC BA6195FP-YT2     |              |    |       |        |
| C204          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | < COIL >       |              |                     |              |    |       |        |
| C205          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        |                |              |                     |              |    |       |        |
|               |              |                                   |          |     |     |        |                |              |                     |              |    |       |        |
| C206          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | L103           | 1-412-060-11 | INDUCTOR CHIP       | 22uH         |    |       |        |
| C207          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | L501           | 1-412-060-11 | INDUCTOR CHIP       | 22uH         |    |       |        |
| C208          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | L503           | 1-412-060-11 | INDUCTOR CHIP       | 22uH         |    |       |        |
| C209          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | < TRANSISTOR > |              |                     |              |    |       |        |
| C301          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        |                |              |                     |              |    |       |        |
|               |              |                                   |          |     |     |        |                |              |                     |              |    |       |        |
| C303          | 1-164-336-11 | CERAMIC CHIP                      | 0.33uF   |     | 25V |        | Q1             | 8-729-901-05 | TRANSISTOR          | DTA124EK     |    |       |        |
| C304          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | Q2             | 8-729-011-95 | TRANSISTOR          | RN-2426      |    |       |        |
| C305          | 1-163-037-11 | CERAMIC CHIP                      | 0.022uF  | 10% | 25V |        | Q3             | 8-729-141-48 | TRANSISTOR          | 2SB624-BV345 |    |       |        |
| C306          | 1-163-037-11 | CERAMIC CHIP                      | 0.022uF  | 10% | 25V |        | Q4             | 8-729-901-00 | TRANSISTOR          | DTC124EK     |    |       |        |
| C307          | 1-163-133-00 | CERAMIC CHIP                      | 470PF    | 5%  | 50V |        | Q5             | 8-729-901-00 | TRANSISTOR          | DTC124EK     |    |       |        |
|               |              |                                   |          |     |     |        | < RESISTOR >   |              |                     |              |    |       |        |
| C308          | 1-163-133-00 | CERAMIC CHIP                      | 470PF    | 5%  | 50V |        |                |              |                     |              |    |       |        |
| C309          | 1-104-760-11 | CERAMIC CHIP                      | 0.047uF  | 10% | 50V |        | R101           | 1-216-295-00 | SHORT               | 0            |    |       |        |
| C310          | 1-163-133-00 | CERAMIC CHIP                      | 470PF    | 5%  | 50V |        | R102           | 1-216-081-00 | METAL CHIP          | 22K          | 5% | 1/10W |        |
| C311          | 1-163-133-00 | CERAMIC CHIP                      | 470PF    | 5%  | 50V |        | R103           | 1-216-081-00 | METAL CHIP          | 22K          | 5% | 1/10W |        |
| C312          | 1-163-009-11 | CERAMIC CHIP                      | 0.001uF  | 10% | 50V |        | R104           | 1-216-103-00 | METAL CHIP          | 180K         | 5% | 1/10W |        |
| C313          | 1-163-259-11 | CERAMIC CHIP                      | 220PF    | 5%  | 50V |        | R105           | 1-216-103-00 | METAL CHIP          | 180K         | 5% | 1/10W |        |
| C501          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R106           | 1-216-001-00 | METAL CHIP          | 10           | 5% | 1/10W |        |
| C502          | 1-135-145-11 | TANTALUM CHIP                     | 0.47uF   | 10% | 35V |        | R108           | 1-216-051-00 | METAL CHIP          | 1.2K         | 5% | 1/10W |        |
| C503          | 1-163-021-11 | CERAMIC CHIP                      | 0.01uF   | 10% | 50V |        | R109           | 1-216-057-00 | METAL CHIP          | 2.2K         | 5% | 1/10W |        |
| C504          | 1-163-251-11 | CERAMIC CHIP                      | 100PF    | 5%  | 50V |        | R110           | 1-216-057-00 | METAL CHIP          | 2.2K         | 5% | 1/10W |        |
| C505          | 1-164-182-11 | CERAMIC CHIP                      | 0.0033uF | 10% | 50V |        | R111           | 1-216-065-00 | RES,CHIP            | 4.7K         | 5% | 1/10W |        |
| C506          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R112           | 1-216-065-00 | RES,CHIP            | 4.7K         | 5% | 1/10W |        |
| C507          | 1-163-011-11 | CERAMIC CHIP                      | 0.0015uF | 10% | 50V |        | R113           | 1-216-073-00 | METAL CHIP          | 10K          | 5% | 1/10W |        |
| C508          | 1-104-760-11 | CERAMIC CHIP                      | 0.047uF  | 10% | 50V |        | R114           | 1-216-097-00 | RES,CHIP            | 100K         | 5% | 1/10W |        |
| C509          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R115           | 1-216-073-00 | METAL CHIP          | 10K          | 5% | 1/10W |        |
| C510          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R140           | 1-216-073-00 | METAL CHIP          | 10K          | 5% | 1/10W |        |
| C511          | 1-163-021-11 | CERAMIC CHIP                      | 0.01uF   | 10% | 50V |        | R141           | 1-216-081-00 | METAL CHIP          | 22K          | 5% | 1/10W |        |
| C513          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R142           | 1-216-089-00 | RES,CHIP            | 47K          | 5% | 1/10W |        |
| C514          | 1-113-642-11 | TANTAL. CHIP                      | 47uF     | 20% | 10V |        | R143           | 1-216-093-00 | METAL CHIP          | 68K          | 5% | 1/10W |        |
| C527          | 1-113-642-11 | TANTAL. CHIP                      | 47uF     | 20% | 10V |        | R203           | 1-216-097-00 | RES,CHIP            | 100K         | 5% | 1/10W |        |
| C551          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R209           | 1-216-089-00 | RES,CHIP            | 47K          | 5% | 1/10W |        |
| C601          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R210           | 1-216-841-11 | METAL CHIP          | 47K          | 5% | 1/16W |        |
| C603          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R213           | 1-216-049-11 | RES,CHIP            | 1K           | 5% | 1/10W |        |
| C605          | 1-164-004-11 | CERAMIC CHIP                      | 0.1uF    | 10% | 25V |        | R214           | 1-216-864-11 | METAL CHIP          | 0            | 5% | 1/16W |        |
| < CONNECTOR > |              |                                   |          |     |     |        | R217           | 1-216-081-00 | METAL CHIP          | 22K          | 5% | 1/10W |        |
|               |              |                                   |          |     |     |        | R218           | 1-216-089-00 | RES,CHIP            | 47K          | 5% | 1/10W |        |
| CN1           | 1-764-616-12 | HOUSING, CONNECTOR (PC BOARD) 30P |          |     |     |        | R219           | 1-216-097-00 | RES,CHIP            | 100K         | 5% | 1/10W |        |
| CN2           | 1-766-491-11 | CONNECTOR, FPC 17P                |          |     |     |        | R220           | 1-216-097-00 | RES,CHIP            | 100K         | 5% | 1/10W |        |
| CN4           | 1-770-347-21 | CONNECTOR, FPC 6P                 |          |     |     |        | R222           | 1-216-845-11 | METAL CHIP          | 100K         | 5% | 1/16W |        |
| CN5           | 1-569-775-21 | PIN, CONNECTOR 5P                 |          |     |     |        | R223           | 1-216-841-11 | METAL CHIP          | 47K          | 5% | 1/16W |        |
| < IC >        |              |                                   |          |     |     |        | R224           | 1-216-841-11 | METAL CHIP          | 47K          | 5% | 1/16W |        |
|               |              |                                   |          |     |     |        | R301           | 1-216-025-00 | RES,CHIP            | 100          | 5% | 1/10W |        |
| IC1           | 8-752-069-29 | IC CXA1791N                       |          |     |     |        |                |              |                     |              |    |       |        |

# SERVO

# SUB

| Ref. No. | Part No.     | Description |      |      | Remark |
|----------|--------------|-------------|------|------|--------|
| R302     | 1-216-037-00 | METAL CHIP  | 330  | 5%   | 1/10W  |
| R303     | 1-216-308-00 | METAL CHIP  | 4.7  | 5%   | 1/10W  |
| R304     | 1-216-683-11 | METAL CHIP  | 22K  | 0.5% | 1/10W  |
| R305     | 1-216-675-11 | METAL CHIP  | 10K  | 0.5% | 1/10W  |
| R306     | 1-216-683-11 | METAL CHIP  | 22K  | 0.5% | 1/10W  |
| R307     | 1-216-675-11 | METAL CHIP  | 10K  | 0.5% | 1/10W  |
| R308     | 1-216-683-11 | METAL CHIP  | 22K  | 0.5% | 1/10W  |
| R309     | 1-216-675-11 | METAL CHIP  | 10K  | 0.5% | 1/10W  |
| R310     | 1-216-683-11 | METAL CHIP  | 22K  | 0.5% | 1/10W  |
| R311     | 1-216-675-11 | METAL CHIP  | 10K  | 0.5% | 1/10W  |
| R312     | 1-216-085-00 | METAL CHIP  | 33K  | 5%   | 1/10W  |
| R313     | 1-216-089-00 | RES,CHIP    | 47K  | 5%   | 1/10W  |
| R314     | 1-216-103-00 | METAL CHIP  | 180K | 5%   | 1/10W  |
| R315     | 1-216-085-00 | METAL CHIP  | 33K  | 5%   | 1/10W  |
| R316     | 1-216-683-11 | METAL CHIP  | 22K  | 0.5% | 1/10W  |
| R317     | 1-216-675-11 | METAL CHIP  | 10K  | 0.5% | 1/10W  |
| R318     | 1-216-683-11 | METAL CHIP  | 22K  | 0.5% | 1/10W  |
| R319     | 1-216-675-11 | METAL CHIP  | 10K  | 0.5% | 1/10W  |
| R320     | 1-216-097-00 | RES,CHIP    | 100K | 5%   | 1/10W  |
| R333     | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W  |
| R334     | 1-216-089-00 | RES,CHIP    | 47K  | 5%   | 1/10W  |
| R398     | 1-216-296-00 | SHORT       | 0    |      |        |
| R399     | 1-216-296-00 | SHORT       | 0    |      |        |
| R501     | 1-216-097-00 | RES,CHIP    | 100K | 5%   | 1/10W  |
| R502     | 1-216-073-00 | METAL CHIP  | 10K  | 5%   | 1/10W  |
| R503     | 1-216-121-00 | RES,CHIP    | 1M   | 5%   | 1/10W  |
| R504     | 1-216-061-00 | METAL CHIP  | 3.3K | 5%   | 1/10W  |
| R505     | 1-216-061-00 | METAL CHIP  | 3.3K | 5%   | 1/10W  |
| R506     | 1-216-073-00 | METAL CHIP  | 10K  | 5%   | 1/10W  |
| R507     | 1-216-125-00 | METAL CHIP  | 1.5M | 5%   | 1/10W  |
| R508     | 1-216-105-00 | RES,CHIP    | 220K | 5%   | 1/10W  |
| R509     | 1-216-113-00 | METAL CHIP  | 470K | 5%   | 1/10W  |
| R510     | 1-216-061-00 | METAL CHIP  | 3.3K | 5%   | 1/10W  |
| R511     | 1-216-073-00 | METAL CHIP  | 10K  | 5%   | 1/10W  |
| R519     | 1-216-081-00 | METAL CHIP  | 22K  | 5%   | 1/10W  |
| R524     | 1-216-813-11 | METAL CHIP  | 220  | 5%   | 1/16W  |
| R525     | 1-216-813-11 | METAL CHIP  | 220  | 5%   | 1/16W  |
| R526     | 1-216-813-11 | METAL CHIP  | 220  | 5%   | 1/16W  |
| R527     | 1-216-813-11 | METAL CHIP  | 220  | 5%   | 1/16W  |
| R528     | 1-216-296-00 | SHORT       | 0    |      |        |
| R529     | 1-216-073-00 | METAL CHIP  | 10K  | 5%   | 1/10W  |
| R530     | 1-216-295-00 | SHORT       | 0    |      |        |
| R531     | 1-216-065-00 | RES,CHIP    | 4.7K | 5%   | 1/10W  |
| R532     | 1-216-829-11 | METAL CHIP  | 4.7K | 5%   | 1/16W  |
| R533     | 1-216-065-00 | RES,CHIP    | 4.7K | 5%   | 1/10W  |
| R551     | 1-216-089-00 | RES,CHIP    | 47K  | 5%   | 1/10W  |
| R552     | 1-216-809-11 | METAL CHIP  | 100  | 5%   | 1/16W  |
| R553     | 1-216-809-11 | METAL CHIP  | 100  | 5%   | 1/16W  |
| R554     | 1-216-809-11 | METAL CHIP  | 100  | 5%   | 1/16W  |
| R555     | 1-216-809-11 | METAL CHIP  | 100  | 5%   | 1/16W  |
| R601     | 1-216-081-00 | METAL CHIP  | 22K  | 5%   | 1/10W  |
| R602     | 1-216-295-00 | SHORT       | 0    |      |        |
| R603     | 1-216-085-00 | METAL CHIP  | 33K  | 5%   | 1/10W  |


| Ref. No.                        | Part No.                                                               | Description                       |      |    | Remark |
|---------------------------------|------------------------------------------------------------------------|-----------------------------------|------|----|--------|
| R604                            | 1-216-097-00                                                           | RES,CHIP                          | 100K | 5% | 1/10W  |
| R605                            | 1-216-081-00                                                           | METAL CHIP                        | 22K  | 5% | 1/10W  |
| < VIBRATOR >                    |                                                                        |                                   |      |    |        |
| X1                              | 1-760-365-11                                                           | VIBRATOR, CERAMIC (10MHz)         |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |
| *                               | 1-659-834-11                                                           | SUB BOARD                         |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |
| < CONNECTOR >                   |                                                                        |                                   |      |    |        |
| CN1                             | 1-770-347-21                                                           | CONNECTOR, FPC 6P                 |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |
| MISCELLANEOUS                   |                                                                        |                                   |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |
| 3                               | 1-783-269-11                                                           | CORD (WITH CONNECTOR) (POWER)     |      |    |        |
| 17                              | 1-783-271-11                                                           | CORD (WITH CONNECTOR) (RCA)       |      |    |        |
| (BUS AUDIO IN, SUB OUT)         |                                                                        |                                   |      |    |        |
| 18                              | 1-783-271-21                                                           | CORD (WITH CONNECTOR) (RCA)       |      |    |        |
| (FRONT LINE OUT, REAR LINE OUT) |                                                                        |                                   |      |    |        |
| 20                              | 1-783-270-21                                                           | CORD, POWER                       |      |    |        |
| 21                              | 1-790-088-11                                                           | CORD (WITH CONNECTOR) (INVERTER)  |      |    |        |
| 63                              | 1-669-127-11                                                           | FLEXIBLE SW BOARD                 |      |    |        |
| 69                              | 1-803-056-11                                                           | LIQUID CRYSTAL MODULE             |      |    |        |
| 109                             | 1-778-182-11                                                           | SOCKET, CONNECTOR 18P             |      |    |        |
| 110                             | 1-670-154-11                                                           | FLEXIBLE BOARD                    |      |    |        |
| 123                             | 1-777-246-31                                                           | CORD (WITH CONNECTOR) (ANT)       |      |    |        |
| 257                             | 1-659-880-11                                                           | MOTOR FLEXIBLE BOARD              |      |    |        |
| △ 260                           | 8-848-402-02                                                           | PICK-UP, OPTICAL KSS-520A/J2NP    |      |    |        |
| 262                             | 1-659-881-11                                                           | PICK-UP FLEXIBLE BOARD            |      |    |        |
| F901                            | 1-532-877-11                                                           | FUSE (BLADE TYPE) (AUTO FUSE) 10A |      |    |        |
| M901                            | X-3373-096-1                                                           | MOTOR ASSY (SPINDLE)              |      |    |        |
| M902                            | A-3301-107-A                                                           | MOTOR ASSY, SLED (SLED)           |      |    |        |
| M903                            | A-3291-676-A                                                           | MOTOR SUB ASSY, LOADING (LOADING) |      |    |        |
| M904                            | A-3301-552-A                                                           | MOTOR SUB ASSY (PANEL)            |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |
| ACCESSORIES & PACKING MATERIALS |                                                                        |                                   |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |
| 1-473-967-31                    | COMMANDER, ROTARY (RM-X90)                                             |                                   |      |    |        |
| 1-475-642-31                    | REMOTE COMMANDER (RM-X9)                                               |                                   |      |    |        |
| 3-012-266-01                    | LID, BATTERY CASE (for RM-X9)                                          |                                   |      |    |        |
| 3-339-410-11                    | COVER (2), PIN JACK                                                    |                                   |      |    |        |
| 3-862-328-11                    | MANUAL, INSTRUCTION (ENGLISH) (US)                                     |                                   |      |    |        |
| 3-862-328-21                    | MANUAL, INSTRUCTION (ENGLISH,SPANISH, CHINESE) (E)                     |                                   |      |    |        |
| 3-864-350-11                    | MANUAL, INSTRUCTION, INSTALL (ENGLISH) (US)                            |                                   |      |    |        |
| 3-864-350-21                    | MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH,CHINESE) (E)            |                                   |      |    |        |
| 3-864-494-11                    | MANUAL, FITTING INSTRUCTION (ENGLISH, SPANISH,CHINESE) (for RM-X9) (E) |                                   |      |    |        |
| X-3375-799-1                    | CASE ASSY (90)                                                         |                                   |      |    |        |
| *****                           |                                                                        |                                   |      |    |        |

The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.

| Ref. No.      | Part No.     | Description                       | Remark |
|---------------|--------------|-----------------------------------|--------|
| *****         |              |                                   |        |
| HARDWARE LIST |              |                                   |        |
| *****         |              |                                   |        |
| #1            | 7-685-851-04 | SCREW +BVTT 2X4 (S)               |        |
| #2            | 7-685-792-09 | SCREW +PTT 2.6X6 (S)              |        |
| #3            | 7-685-105-19 | SCREW +P 2X8 TYPE2 NON-SLIT       |        |
| #4            | 7-685-790-09 | SCREW +PTT 2.6X4 (S)              |        |
| #5            | 7-621-772-20 | SCREW +B 2X5                      |        |
|               |              |                                   |        |
| #6            | 7-627-553-28 | SCREW, PRECISION +P 2X2.5         |        |
| #7            | 7-624-102-04 | STOP RING 1.5, TYPE -E            |        |
| #8            | 7-621-772-10 | SCREW +B 2X4                      |        |
| #9            | 7-627-553-68 | SCREW, PRECISION +P 2X6           |        |
| #10           | 7-685-146-11 | SCREW +P 3X8 TYPE2 NON-SLIT       |        |
|               |              |                                   |        |
| #11           | 7-621-775-08 | SCREW +B 2.6X3                    |        |
| #12           | 7-628-253-15 | SCREW +PS 2X5                     |        |
| #13           | 7-627-553-37 | SCREW, PRECISION +P 2X3 TYPE3     |        |
| #14           | 7-628-253-00 | SCREW +PS 2X4                     |        |
| #15           | 7-627-553-17 | SCREW, PRECISION +P 2X2 TYPE3     |        |
|               |              |                                   |        |
| #16           | 7-627-000-00 | SCREW, PRECISION +P 1.7X2.2 TYPE3 |        |
| #17           | 7-627-850-28 | SCREW, PRECISION +P 1.4X3         |        |
| #18           | 7-621-710-26 | SET-SCREW, SLOT 2X3 FLAT POINT    |        |

\*\*\*\*\*

| Ref. No.                               | Part No.     | Description                    | Remark |
|----------------------------------------|--------------|--------------------------------|--------|
| PARTS FOR INSTALLATION AND CONNECTIONS |              |                                |        |
| *****                                  |              |                                |        |
| 301                                    | 3-009-613-21 | FRAME                          |        |
| 302                                    | 3-025-812-01 | COLLAR (90)                    |        |
| 303                                    | 3-027-138-01 | SPRING, FITTING                |        |
| 304                                    | 3-934-325-01 | SCREW, +K (5X8) TAPPING        |        |
| 305                                    | 3-924-961-01 | SUPPORT (ND), FITTING (US)     |        |
|                                        |              |                                |        |
| 306                                    | X-3368-725-1 | SCREW ASSY, FITTING (US)       |        |
| 307                                    | 7-682-560-04 | SCREW +P 4X6 (US)              |        |
| 308                                    | X-3366-405-1 | SCREW ASSY (EXP), FITTING (E)  |        |
| 309                                    | 3-386-828-01 | SCREW, FITTING (E)             |        |
| 310                                    | 3-349-410-01 | BUSHING (E)                    |        |
|                                        |              |                                |        |
| 311                                    | 7-685-248-14 | SCREW +KTP 3X12 TYPE2 NON-SLIT |        |
| 312                                    | 3-012-265-01 | HOLDER                         |        |
| 313                                    | 3-937-921-01 | TAPE (HOLDER)                  |        |
| 314                                    | 1-783-269-11 | CORD (WITH CONNECTOR) (POWER)  |        |
| 315                                    | 3-028-789-01 | COVER (LIGHT)                  |        |
|                                        |              |                                |        |
| 316                                    | 7-682-546-09 | SCREW +B 3X5                   |        |

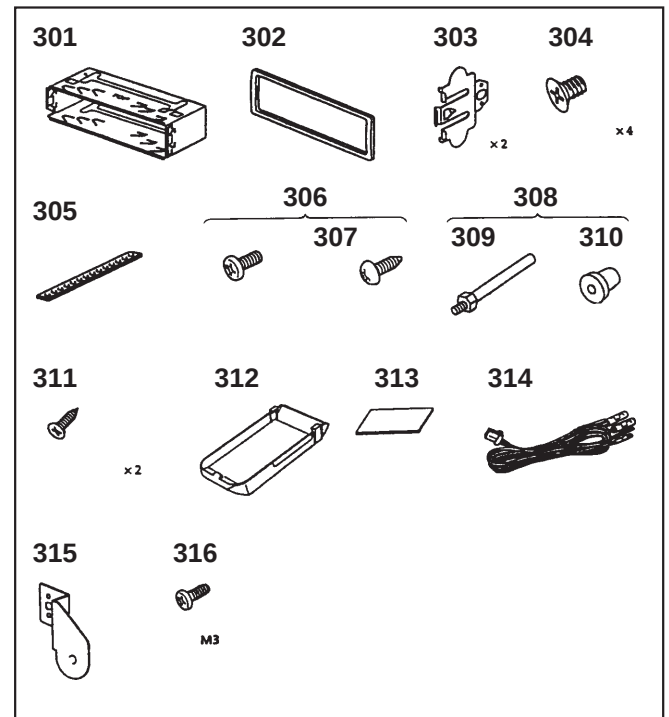

## REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.

[illegible]